

Inhaltsverzeichnis

1. DXL - APRSmap englisch	34
2. Benutzer:OE2WAO	13
3. DXL - APRSmap	17
4. DXL - APRSmap Download	24
5. DXL - APRSmap operating	45

DXL - APRSmap englisch

[Versionsgeschichte interaktiv durchsuchen](#)
[Visuell Wikitext](#)

Version vom 8. September 2014, 22:28 Uhr (Quelltext anzeigen)
[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))
[← Zum vorherigen Versionsunterschied](#)

Aktuelle Version vom 14. August 2021, 14:53 Uhr (Quelltext anzeigen)
[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))
K
Markierung: [Visuelle Bearbeitung](#)

(18 dazwischenliegende Versionen desselben Benutzers werden nicht angezeigt)

Zeile 1:	Zeile 1:
<div>[[Kategorie:APRS]]</div>	<div>[[Kategorie:APRS]]</div>
<div>- [[Datei:Deutschland-flagge.gif]] Für die deutsche Version dieses Projekts [[DXL - APRSmap >>hier klicken<<]]</div>	<div>+ [[Datei:Deutschland-flagge.gif link=DXL - APRSmap]] Für die deutsche Version dieses Projekts [[DXL - APRSmap >>hier klicken<<]]</div>
	<div>+ </div>
	<div>+ [[Datei:Aprsmap-download.jpg link=DXL - APRSmap Download]]</div>
<div>APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!</div>	<div>APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!</div>
<div>- [[Datei:aprsmmap.png]]</div>	<div>+ [[Datei:Aprsmap.png]]</div>
<div>- A lot of documentation work has to be done soon !!</div>	<div>+ A lot of documentation work will have to be done soon !!</div>
<div>==Features==</div>	<div>==Features==</div>
<div>- * OpenSource and already compiled for windows and linux</div>	<div>+ </div>

-	* 100% ige compliance with the current APRS protocol specifications	+	*OpenSource and already compiled for windows and linux
-	* No installation required, just copy and start	+	*100% compliance with the current APRS protocol specifications
-	* No unnecessary menus, focus is on the representation	+	*No installation required, just copy and start
-	* IP-based, out-of-the-box network-ready in HAMNET and Internet	+	*No unnecessary menus, focus is on the representation
-	* Operation via shortcuts	+	*IP-based, out-of-the-box network-ready in HAMNET and Internet
-	* Local serial connection (TNC) possible - operating as an RF IGATE	+	* Operations best controlled via shortcuts
-	* Several MapSources can be used. By default, this is OSM - OpenStreetMap	+	*Local serial connection (TNC) possible - operating as an RF IGATE
-	* Downloading map source on demand	+	*Several MapSources can be used. By default, this is OSM - OpenStreetMap
-	* Track filter for delayed / late / repeated packets " F "	+	*Downloading map source on demand
-	* Radio propagation calculation (since v0.36) " R "	+	*Track filter for delayed / late / repeated packets " f "
-	* Animation of tracks with timeline " A "	+	*Radio propagation calculation (since v0.36) " R "
-	* Animation of the temperature distribution " W "	+	*Animation of tracks with timeline " a "
-	* Messaging	+	*Animation of the temperature distribution " w "
		+	*Messaging
		+	
		+	
		+	==Installation==
		+	After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap.

		+	No installation routine is required, just extract and run the aprsmap.exe

- +
- +
- + **==Operation manual and help==**
- + **[[DXL - APRSmap operating|>>**
- + **Operating instructions]] - the help in handling the program**
- +
- +
- +
- + **[[Datei:Aprsmap-1st-start.jpg]]**
- +
- + **On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.**
- +
- + ***First of all you put in your callsign (MY CALLSIGN) with optional SSID**
- + ***Second step is to choose your desired APRS icon (MY SYMBOL)**
- + ***Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.**
- + ***Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.**
- +
- + **for example:**

	+	aprs.oe2x zr.ampr.at (APRS IS connection via HAMNET)
	+	austria.aprs2.net (APRS IS connection via Internet)
	+	
	+	*You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.
	+	*Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.
		===Shortcuts===
-		: delete markers
-		@ reset <On Next Click> to menu mode
-		A Animate
-		B or <Backspace> go back in position history
-		C Center (to last clicked Pixel)
-		E toggle Errors only/All for stepping along a track with <>
-		F Junk Filter toggle on/off
-		H Heard (click symbol or text of igate before)
-		I Internal Status Listing
-		L toggle labels on/off
-		M toggle dimm not moving since 10min
-		O toggle Objects/Items on/off
-		Q Quit Program
	+	<nowiki>:</nowiki> delete markers
	+	@ reset <On Next Click> to menu mode
	+	a Animate (Click to Map to set Parameters)
	+	b or <Backspace> go back in position history
	+	c Center (to last clicked Pixel)
	+	d toggle (missing) map download
	+	e toggle Errors only/All for stepping along a track with <>
	+	f Junk Filter toggle on/off
	+	h Heard (click symbol or text of igate before)
	+	i Internal Status Listing
	+	l toggle Labels on/off
	+	m toggle dimm not moving since 10min
	+	o toggle Objects/Items on/off

- R toggle Radio tracks on/off	+ p toggle mouse-over Hints
- S Screenshot ppm/bpm	+ q Quit Program
- V make Video map.v4m uncompressed in YUV4MPEG2 format	+ r toggle Radio tracks on/off
- W toggle Wx temperature map (use topo or no map)	+ s toggle show only stations with a selected symbol
- X set Marker 1 to clicked position	+ u toggle tx/rx-Monitor window on/off
- Y set Marker 2 and Line to Marker 1	+ w toggle WX stations and Temperature
- / zoom to Marker 1-2 Square	+ x set Marker 1 to mouse position
- ~ change track colour	+ y set Marker 2 and Line to Marker 1
- + Zoom in	+ B Open Beacon editor
- - Zoom out	+ C Enter Category of POI to be drawn on map
- . zoom to track and show only this (clicked before)	+ D Digi Config open/close
- = same as but with radio tracks	+ F Find Call (with wildcards * ?), Locator, Latitude/Longitude
- 0 show all (and radio tracks off)	+ H Altitude Colour Map (if srtm-Data avaliable)
- 1,2,3,4 Zoom/Pan to stored Views	+ M Compose Message
- 7 use osm map	+ R toggle Radiorange Map on/off
- 9 use osm topo map	+ T toggle Timestamp
- ESC close menus	+ S Screenshot bpm (win), png (linux)
- Cursor up/down/left/right move map, same as click near margin	+ W Rain map (use topo or dark map)
- SHIFT with up/down/left/right/[zoom+]/ [zoom-] in smaller steps	+ < > Step along Beacons/Waypoints of a selected User
- DEL delete selected	+ () Map Brightness +- 5%
	+ / zoom to Marker 1-2 Square
	+ \ shortcut list
	+ ~ change track colour
	+ + Zoom in - Zoom out

		+ . zoom to track and show only this (clicked before)
		+ = same as . but with radio tracks
		+ 0 show all (and radio tracks off)
		+ 1,2,3,4 Zoom/Pan to stored Views
		+ 7,8,9 use map type as configured
		+ ESC close menus
		+ Cursor up/down/left/right move map, same as click near margin
		+ SHIFT with up/down/left/right/[zoom+]/[zoom-] in smaller steps
		+ DEL delete selected (Symbol, Waypoint)
		+ TAB switch between two Views
		+ ctrl-L Reset Image and Mouse parameters to default
		+ ctrl-V Paste
		+ ==[[DXL - APRSmap Download Download]]==
		+ [[Datei:Aprsmap-download.jpg link=DXL - APRSmap Download]]
		+ [[DXL - APRSmap Download APRSmap Download]] - For Windows, Linux and ARM (Raspberry Pi)
- ==Software==		+ ==Further operation manual==
- The software is available for OS like WINDOWS, LINUX and systems based on ARM structures like raspberry pi.		+ more information is up to come
- ===Windows version===		
- * [[Media:Aprsmap-all.zip download via Wiki]] ([[Datei:Aprsmap-all.zip]])		

- * [<http://oe5dxl.ampr.at> download via HAMNET] with latest updates
"(HAMNET-connection required)"


Aktuelle Version vom 14. August 2021, 14:53 Uhr



Für die deutsche Version dieses Projekts >>[hier klicken](#)<<



APRSmap is a new APRS client software by OE5DXL, which is based on the [OSM](#) map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk and start it!

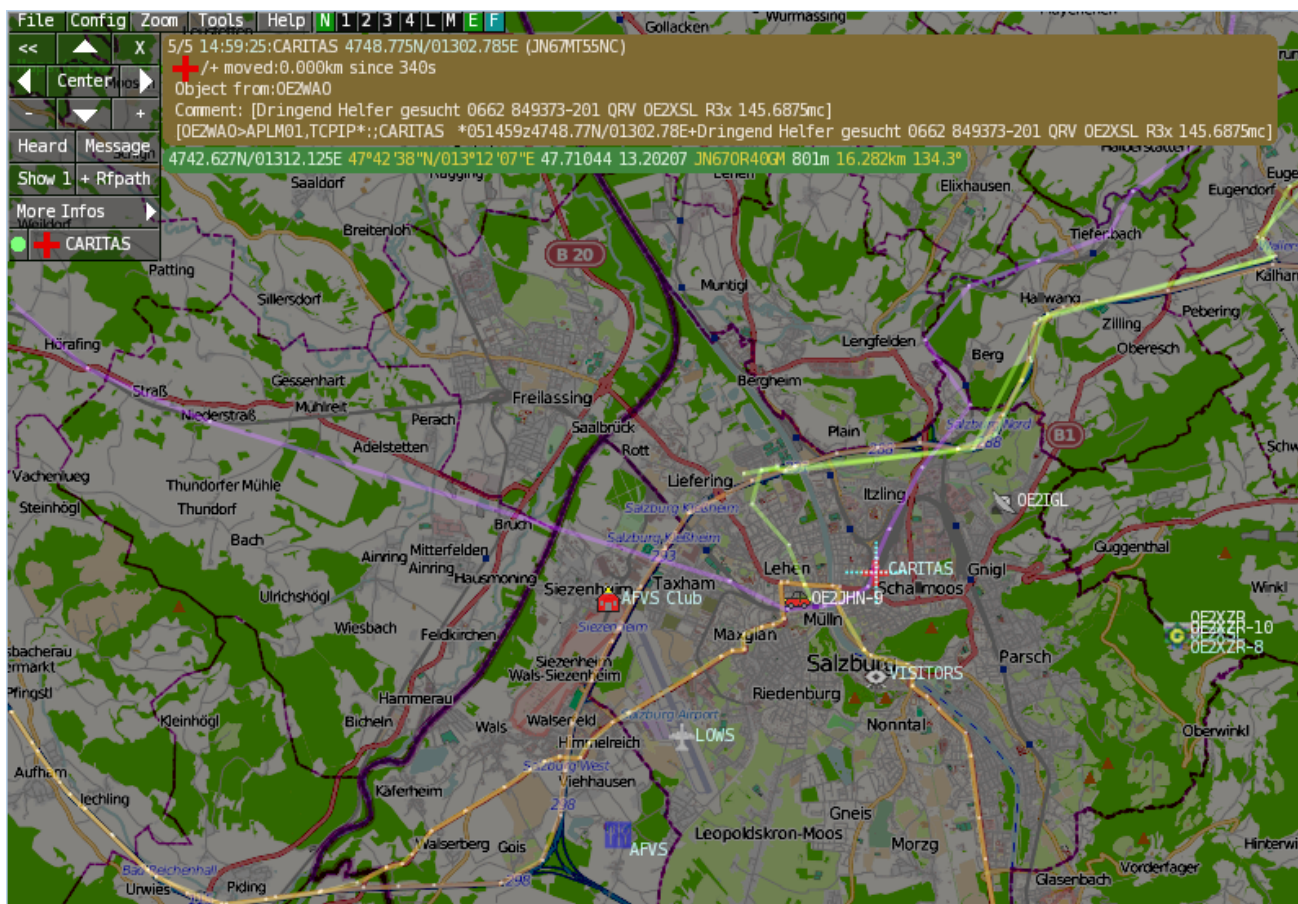

A lot of documentation work will have to be done soon !!

Inhaltsverzeichnis

1 Features	42
2 Installation	42

3 Operation manual and help	42
3.1 Shortcuts	43
4 Download	44
5 Further operation manual	44

Features

- OpenSource and already compiled for windows and linux
- 100% compliance with the current APRS protocol specifications
- No installation required, just copy and start
- No unnecessary menus, focus is on the representation
- IP-based, out-of-the-box network-ready in HAMNET and Internet
- Operations best controlled via shortcuts
- Local serial connection (TNC) possible - operating as an RF IGATE
- Several MapSources can be used. By default, this is OSM - OpenStreetMap
- Downloading map source on demand
- Track filter for delayed / late / repeated packets "f"
- Radio propagation calculation (since v0.36) "R"
- Animation of tracks with timeline "a"
- Animation of the temperature distribution "w"
- Messaging

Installation

After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap.

No installation routine is required, just extract and run the aprsmap.exe

Operation manual and help

>> [Operating instructions](#) - the help in handling the program

APRSmap 1st Start

On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.

- First of all you put in your callsign (MY CALLSIGN) with optional SSID
- Second step is to choose your desired APRS icon (MY SYMBOL)
- Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.
- Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.

for example:
 aprs.oe2xzt.ampr.at (APRS IS connection via HAMNET)
 austria.aprs2.net (APRS IS connection via Internet)

- You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.
- Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.

Shortcuts

 
```

:   delete markers
@   reset <On Next Click> to menu mode
a   Animate (Click to Map to set Parameters)
b   or <Backspace> go back in position history
c   Center (to last clicked Pixel)
d   toggle (missing) map download
e   toggle Errors only/All for stepping along a track with <>
f   Junk Filter toggle on/off
h   Heard (click symbol or text of igate before)
i   Internal Status Listing
l   toggle Labels on/off
m   toggle dimm not moving since 10min
o   toggle Objects/Items on/off
p   toggle mouse-over Hints
q   Quit Program
r   toggle Radio tracks on/off
s   toggle show only stations with a selected symbol
u   toggle tx/rx-Monitor window on/off
w   toggle WX stations and Temperature
x   set Marker 1 to mouse position
y   set Marker 2 and Line to Marker 1
B   Open Beacon editor
C   Enter Category of POI to be drawn on map
D   Digi Config open/close
F   Find Call (with wildcards * ?), Locator, Latitude/Longitude
H   Altitude Colour Map (if srtm-Data available)
M   Compose Message
R   toggle Radiorange Map on/off
T   toggle Timestamp
S   Screenshot bpm (win), png (linux)
W   Rain map (use topo or dark map)
< > Step along Beacons/Waypoints of a selected User
( )  Map Brightness +/- 5%
/    zoom to Marker 1-2 Square
\    shortcut list
~    change track colour
+    Zoom in - Zoom out
.    zoom to track and show only this (clicked before)
=    same as . but with radio tracks
0    show all (and radio tracks off)
1,2,3,4 Zoom/Pan to stored Views
7,8,9 use map type as configured
ESC  close menus

```

```
Cursor up/down/left/right  move map, same as click near margin
SHIFT with up/down/left/right/[zoom+]/[zoom-]  in smaller steps
DEL    delete selected (Symbol, Waypoint)
TAB    switch between two Views
ctrl-L  Reset Image and Mouse parameters to default
ctrl-V  Paste
```

Download



[APRSmap Download](#) - For Windows, Linux and ARM (Raspberry Pi)

Further operation manual

more information is up to come

DXL - APRSmap englisch und Benutzer:OE2WAO: Unterschied zwischen den Seiten

VisuellWikitext

Version vom 8. September 2014, 22:28 Uhr (Quelltext anzeigen)
OE2WAO ([Diskussion](#) | [Beiträge](#))

Aktuelle Version vom 9. August 2020, 23:41 Uhr (Quelltext anzeigen)
OE2WAO ([Diskussion](#) | [Beiträge](#))
(Die Seite wurde neu angelegt:
„<https://oe2wao.info>“)

Zeile 1:	Zeile 1:
<div><div></div><div>–</div><div>[[Kategorie:APRS]]</div></div>	<div><div></div><div>+</div><div>https://oe2wao.info</div></div>
<div><div></div><div>–</div><div></div></div>	
<div><div></div><div>–</div><div>[[Datei:Deutschland-flagge.gif]] Für die deutsche Version dieses Projekts [[DXL - APRSmap >>hier klicken<<]]</div></div>	
<div><div></div><div>–</div><div></div></div>	
<div><div></div><div>–</div><div>APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!</div></div>	
<div><div></div><div>–</div><div></div></div>	
<div><div></div><div>–</div><div>[[Datei:aprsmap.png]]</div></div>	
<div><div></div><div>–</div><div></div></div>	
<div><div></div><div>–</div><div>A lot of documentation work has to be done soon !!</div></div>	
<div><div></div><div>–</div><div></div></div>	
<div><div></div><div>–</div><div>==Features==</div></div>	
<div><div></div><div>–</div><div>* OpenSource and already compiled for windows and linux</div></div>	
<div><div></div><div>–</div><div>* 100%iqe compliance with the current APRS protocol specifications</div></div>	
<div><div></div><div>–</div><div>* No installation required, just copy and start</div></div>	

- * No unnecessary menus, focus is on the representation
- * IP-based, out-of-the-box network-ready in HAMNET and Internet
- * Operation via shortcuts
- * Local serial connection (TNC) possible - operating as an RF IGATE
- * Several MapSources can be used. By default, this is OSM - OpenStreetMap
- * Downloading map source on demand
- * Track filter for delayed / late / repeated packets "F"
- * Radio propagation calculation (since v0.36) "R"
- * Animation of tracks with timeline "A"
- * Animation of the temperature distribution "W"
- * Messaging
-
- ===Shortcuts===
- : delete markers
- @ reset <On Next Click> to menu mode
- A Animate
- B or <Backspace> go back in position history
- C Center (to last clicked Pixel)
- E toggle Errors only/All for stepping along a track with <>
- F Junk Filter toggle on/off
- H Heard (click symbol or text of igate before)
- I Internal Status Listing
- L toggle labels on/off

- **M toggle dimm not moving since 10min**
- **O toggle Objects/Items on/off**
- **Q Quit Program**
- **R toggle Radio tracks on/off**
- **S Screenshot ppm/bpm**
- **V make Video map.v4m uncompressed in YUV4MPEG2 format**
- **W toggle Wx temperature map (use topo or no map)**
- **X set Marker 1 to clicked position**
- **Y set Marker 2 and Line to Marker 1**
- **/ zoom to Marker 1-2 Square**
- **~ change track colour**
- **+ Zoom in**
- **- Zoom out**
- **. zoom to track and show only this (clicked before)**
- **= same as but with radio tracks**
- **0 show all (and radio tracks off)**
- **1,2,3,4 Zoom/Pan to stored Views**
- **7 use osm map**
- **9 use osm topo map**
- **ESC close menus**
- **Cursor up/down/left/right move map, same as click near margin**
- **SHIFT with up/down/left/right/ [zoom+]/[zoom-] in smaller steps**
- **DEL delete selected**
-
-
- **==Software==**

-
- The software is available for OS like WINDOWS, LINUX and systems based on ARM structures like raspberry pi.
 - ===Windows version===
 - * [[Media:Aprsmap-all.zip | download via Wiki]] ([[Datei:Aprsmap-all.zip]])
 - * [http://oe5dxl.ampr.at download via HAMNET] with latest updates
"(HAMNET-connection required)"
-

Aktuelle Version vom 9. August 2020, 23:41 Uhr

<https://oe2wao.info>

DXL - APRSmap englisch und DXL - APRSmap: Unterschied zwischen den Seiten

VisuellWikitext

Version vom 8. September 2014, 22:28 Uhr (Quelltext anzeigen)
OE2WAO ([Diskussion](#) | [Beiträge](#))

Aktuelle Version vom 9. April 2021, 09:08 Uhr (Quelltext anzeigen)
OE2WAO ([Diskussion](#) | [Beiträge](#))
K
Markierung: [Visuelle Bearbeitung](#)

Zeile 1:	Zeile 1:
[[Kategorie:APRS]]	[[Kategorie:APRS]]
	+ [[Kategorie:Digitaler Backbone]]
- [[Datei:Deutschland-flagge.gif]] Für die deutsche Version dieses Projekts [[DXL - APRSmap >>hier klicken<<]]	+ [[Datei:Englisch.jpg link=DXL - APRSmap englisch]] For english version on this project [[DXL - APRSmap englisch >>click here<<]]
- APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!	+ [[Datei:Aprsmap-download.jpg link=DXL - APRSmap Download]]
- [[Datei:aprsmmap.png]]	+ :<code>'''Aktuelle Programmversion v0.79'''</code>
- A lot of documentation work has to be done soon !!	+
	+ ==Einleitung==
	+ APRSmap ist ein von '''OE5DXL Christian''' entwickelter, <u>kostenloser</u> APRS Client mit grafischer Oberfläche, welcher als Basis das Kartenmaterial von [http://www.osm.org OSM] benutzt.


	+	
	+	[[Datei:Aprsmap.png]]
==Features==		==Features==
- * OpenSource and already compiled for windows and linux		
- * 100%ige compliance with the current APRS protocol specifications		
- * No installation required, just copy and start		
- * No unnecessary menus, focus is on the representation		
- * IP-based, out-of-the-box network-ready in HAMNET and Internet		
- * Operation via shortcuts		
- * Local serial connection (TNC) possible - operating as an RF IGATE		
- * Several MapSources can be used. By default, this is OSM - OpenStreetMap		
- * Downloading map source on demand		
- * Track filter for delayed / late / repeated packets "F"		
- * Radio propagation calculation (since v0.36) "R"		
- * Animation of tracks with timeline "A"		
- * Animation of the temperature distribution "W"		
- * Messaging		
===Shortcuts===	+	* OpenSource und bereits fertig für Windows und Linux compiliert
: delete markers	+	* 100%ige Einhaltung der aktuellen APRS Protokoll Vorgaben
@ reset <On Next Click> to menu mode	+	* Keine Installation erforderlich, nur kopieren und starten

-	A Animate	+	*Keine überflüssigen Menüs, Fokus auf der Darstellung
-	B or <Backspace> go back in position history	+	*IP-basiert, somit out-of-the-box netzwerkfähig im HAMNET sowie Internet
-	C Center (to last clicked Pixel)	+	*Bedienung idealerweise über Shortcuts
-	E toggle Errors only/All for stepping along a track with <>	+	*Lokale serielle Anbindung (TNC) möglich - Betrieb als HF IGATE
-	F Junk Filter toggle on/off	+	*Zur Darstellung können mehrere Mapsources verwendet werden. Standardmäßig ist dies OSM - OpenStreetMap
-	H Heard (click symbol or text of igate before)	+	*Trackfilter für verzögert/verspätet/wiederholte Pakete "f"
-	I Internal Status Listing	+	*Geländeschnitt und Funkausbreitungsberechnung (ab v0.36) "R"
-	L toggle labels on/off	+	*Animation von Tracks mit Zeitleiste "a"
-	M toggle dimm not moving since 10min	+	*Animation der Temperaturverteilung "w"
-	O toggle Objects/Items on/off	+	*Messaging
-	Q Quit Program	+	
-	R toggle Radio tracks on/off	+	==[[DXL - APRSmap Bedienung Bedienung und Hilfe]]==
-	S Screenshot ppm/bpm	+	
-	V make Video map.v4m uncompressed in YUV4MPEG2 format	+	[[DXL - APRSmap Bedienung Bedienungsanleitung]] - Die Hilfe beim Umgang mit dem Programm
-	W toggle Wx temperature map (use topo or no map)	+	
-	X set Marker 1 to clicked position	+	[[Datei:Aprsmap-1st-start.jpg link=DXL - APRSmap_Bedienung#Erste_Schritte]]
-	Y set Marker 2 and Line to Marker 1	+	

-	/ zoom to Marker 1-2 Square	+	==[[DXL - APRSmap Download Download]]==
-	~ change track colour	+	[[DXL - APRSmap Download APRSmap Download]] - Für Windows, Linux und ARM (Raspberry Pi)
-	+ Zoom in	+	
-	- Zoom out	+	[[Datei:Aprsmap-download.jpg link=DXL - APRSmap Download]]
-	. zoom to track and show only this (clicked before)	+	
-	= same as but with radio tracks	+	==Referenz==
-	0 show all (and radio tracks off)	+	Das Programm APRSmap wurde für den ÖVSV Innovationspreis 2013 nominiert.
-	1,2,3,4 Zoom/Pan to stored Views	+	
-	7 use osm map	+	==Weitere Projekte==
-	9 use osm topo map	+	Weiter passende Projekte von OE5DXL aus dieser Serie sind
-	ESC close menus		
-	Cursor up/down/left/right move map, same as click near margin		
-	SHIFT with up/down/left/right/ [zoom+]/[zoom-] in smaller steps		
-	DEL delete selected		
		+	*[[DXL - APRStracker]] - Hard- und Software für einen minimalistischen APRS Tracker
		+	*[[TCE Tinycore Linux Projekt]] - Der mächtige und innovative Digipeater für APRS, Packet Radio, Echolink, u.v. m.
-	==Software==	+	==Weblinks==
			Kurzlink hier her: http://aprsmap.oevsv.at

- The software is available for OS like WINDOWS, LINUX and svstems based on ARM structures like raspberry pi.
- ===Windows version===
- * [[Media:Aprsmap-all.zip | download via Wiki]] ([[Datei:Aprsmap-all.zip]])
- * [http://oe5dxl.ampr.at download via HAMNET] with latest updates "(HAMNET-connection required)"

Aktuelle Version vom 9. April 2021, 09:08 Uhr

 For english version on this project >>click here<<

 **APRSmap Download**

Aktuelle Programmversion v0.79

Inhaltsverzeichnis

1 Einleitung	22
2 Features	22
3 Bedienung und Hilfe	23
4 Download	23
5 Referenz	23
6 Weitere Projekte	23
7 Weblinks	23

Einleitung

APRSmap ist ein von **OE5DXL Christian** entwickelter, kostenloser APRS Client mit grafischer Oberfläche, welcher als Basis das Kartenmaterial von **OSM** benutzt.



Features

- OpenSource und bereits fertig für Windows und Linux compiliert
- 100%ige Einhaltung der aktuellen APRS Protokoll Vorgaben
- Keine Installation erforderlich, nur kopieren und starten
- Keine überflüssigen Menüs, Fokus auf der Darstellung
- IP-basiert, somit out-of-the-box netzwerkfähig im HAMNET sowie Internet
- Bedienung idealerweise über Shortcuts
- Lokale serielle Anbindung (TNC) möglich - Betrieb als HF IGATE
- Zur Darstellung können mehrere Mapsources verwendet werden. Standardmäßig ist dies OSM - OpenStreetMap
- Trackfilter für verzögert/verspätet/wiederholte Pakete "f"
- Geländeschnitt und Funkausbreitungsberechnung (ab v0.36) "R"
- Animation von Tracks mit Zeitleiste "a"
- Animation der Temperaturverteilung "w"
- Messaging

Bedienung und Hilfe

[Bedienungsanleitung](#) - Die Hilfe beim Umgang mit dem Programm



Download

[APRSmap Download](#) - Für Windows, Linux und ARM (Raspberry Pi)



Referenz

Das Programm APRSmap wurde für den ÖVSV Innovationspreis 2013 nominiert.

Weitere Projekte

Weiter passende Projekte von OE5DXL aus dieser Serie sind

- [DXL - APRStracker](#) - Hard- und Software für einen minimalistischen APRS Tracker
- [TCE Tinycore Linux Projekt](#) - Der mächtige und innovative Digipeater für APRS, Packet Radio, Echolink, u.v.m.

Weblinks

Kurzlink hier her: <http://aprsmap.oevsv.at>

DXL - APRSmap englisch und DXL - APRSmap Download: Unterschied zwischen den Seiten

VisuellWikitext

Version vom 8. September 2014, 22:28 Uhr (Quelltext anzeigen)
 OE2WAO ([Diskussion](#) | [Beiträge](#))

Aktuelle Version vom 2. Januar 2023, 13:16 Uhr (Quelltext anzeigen)
 OE2WAO ([Diskussion](#) | [Beiträge](#))
 (SRTM Info hinzugefügt)
 Markierung: [Visuelle Bearbeitung](#)

Zeile 1:	Zeile 1:
[[Kategorie:APRS]]	[[Kategorie:APRS]]
	D: Die Software gibt es je in einer Linux- und einer Windowsversion, sowie den Sourcecode zum selbst compilieren.

	+ Dabei benötigt APRSmap keine Installationroutine. Die Dateien im Archiv müssen lediglich entpackt und lokal gespeichert werden (bspw. unter C:\APRSmap).
- [[Datei:Deutschland-flagge.gif]] Für die deutsche Version dieses Projekts [[DXL - APRSmap >>hier klicken<<]]	+ "E: The software is available for OS like WINDOWS, LINUX and systems based on ARM structures like raspberry pi."

	+ "There is no installation routine. Just download the archive and save the files locally on your hard disc or removable drive" (e.g. under C:\APRSmap)"."
- APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!	+ [[Datei:Aprsmap-1st-start.jpg link=DXL - _APRSmap_Bedienung#Erste_Schritte]]

– `[[Datei:aprsmap.png]]`

– **A lot of documentation work has to be done soon !!**

+

==Windows==

+

D: Die Dateien aus dem heruntergeladenen Archiv werden lokal in den Unterordner /APRSMAP (muss selbst angelegt werden) entpackt bzw. gespeichert.

– **==Features==**

+

"E: The files from the downloaded archive are unpacked and saved locally in the subfolder /APRSMAP (must be created yourself)."

– *** OpenSource and already compiled for windows and linux**

– *** 100%ige compliance with the current APRS protocol specifications**

– *** No installation required, just copy and start**

– *** No unnecessary menus, focus is on the representation**

– *** IP-based, out-of-the-box network-ready in HAMNET and Internet**

– *** Operation via shortcuts**

– *** Local serial connection (TNC) possible - operating as an RF IGATE**

– *** Several MapSources can be used. By default, this is OSM - OpenStreetMap**

– *** Downloading map source on demand**

– *** Track filter for delayed / late / repeated packets "F"**

– *** Radio propagation calculation (since v0.36) "R"**

– *** Animation of tracks with timeline "A"**

– * Animation of the temperature distribution "W"

– * Messaging

===Shortcuts===

– +

```
*[[Datei:Aprsmap-download-win-inet.
jpg|link=https://wiki.oevsv.at/w/nsfr_i
mq_auth.php/b/bd/Aprsmap-all.zip]]
>> '''[[Medium:Aprsmap-all.zip|
APRSmap Download via Wiki]]''' << (D
etail Version [[Datei:Aprsmap-all.zip]])
```

– : delete markers

– @ reset <On Next Click> to menu mode

– A Animate

– B or <Backspace> go back in position history

– C Center (to last clicked Pixel)

– E toggle Errors only/All for stepping along a track with <>

– F Junk Filter toggle on/off

– H Heard (click symbol or text of igate before)

– I Internal Status Listing

– L toggle labels on/off

– M toggle dimm not moving since 10min

– O toggle Objects/Items on/off

– Q Quit Program

– R toggle Radio tracks on/off

– S Screenshot ppm/bpm

– V make Video map.v4m uncompressed in YUV4MPEG2 format

– W toggle Wx temperature map (use topo or no map)

- X set Marker 1 to clicked position
- Y set Marker 2 and Line to Marker 1
- / zoom to Marker 1-2 Square
- ~ change track colour
- + Zoom in
- - Zoom out
- . zoom to track and show only this (clicked before)
- = same as but with radio tracks
- 0 show all (and radio tracks off)
- 1,2,3,4 Zoom/Pan to stored Views
- 7 use osm map
- 9 use osm topo map
- ESC close menus
- Cursor up/down/left/right move map, same as click near margin
- SHIFT with up/down/left/right/[zoom+]/[zoom-] in smaller steps
- DEL delete selected
-
-
- ==Software==
-
- The software is available for OS like WINDOWS, LINUX and systems based on ARM structures like raspberry pi.
-
- ===Windows version===
-
- * [[Media:Aprsmap-all.zip | download via Wiki]] ([[Datei:Aprsmap-all.zip]])
-

*[[Datei:Aprsmap-download-win-hamnet.jpg | link=http://oe5dxl.ampr.at]] APRSmap Download via HAMNET mit aktuellen Updates "(HAMNET-Verbindung erforderlich - HAMNET connection required)"

""Win32 Dateiliste""

- * [<http://oe5dxl.ampr.at> download via HAMNET] with latest updates
"(HAMNET-connection required)"

+

+ Übersicht der [[APRSmap-Dateien]] unter Win32 Betriebssystemen.

+

+

+ ==Linux==

+

+ ===HAMNET===

+

+

+ * [<http://oe5dxl.ampr.at>] - x86 (mit aktuellen Updates)

+

+

+ ===Internet===

+

+ komplette dxlAPRS Toolchain fertig compiliert für folgende Systeme:

+

+

+ * [<https://github.com/oe5hpm/dxlAPRS>] - Sourcecode

+

+ * [http://dxlaprs.hamspirit.at/dxlAPRS_x86-current.tgz] - x86

+

+ * [http://dxlaprs.hamspirit.at/dxlAPRS_armv7hf-current.tgz] - ARMv7hf (Cortex-A8, AM335x, BeagleBone, ...)

+

+ * [http://dxlaprs.hamspirit.at/dxlAPRS_armv6-current.tgz] - ARMv6 (Raspberry Pi)

+

+

+ ==ARM - Raspberry Pi==

+

+ [[aprsDXL auf ARM resp. Raspberry Pi]]

+

+

+

+ ==POI Files==

+

- + **D: Österreichische POI (point of interest) Dateien für APRSmap.**
- +
- + **"E: Austrian POI (point of interest) files for use in APRSmap."**
- +
- + **[[Medium:APRSmap-poi.zip|APRSmap POI Download]]**
- +
- + **==Source Code==**
- + **Die Sourcen vom dxlAPRS-Projekt sind auf Github veröffentlicht.**
- + **Aus diesen kann derzeit für folgende Plattformen gebaut werden:**
- +
- + ***x86**
- + ***armv6 (Raspberry Pi)**
- + ***armv7 (bur am335x pp, Beaglebone, ...)**
- +
- + **<https://github.com/oe5hpm/dxlAPRS>
**
- +
- + **==Release Notes==**
- + **[[APRSmap Release notes]]**
- +
- + **== SRTM Höhendaten zur Funkausbreitungs- und Wegstreckenberechnung ==**
- + **D: Um die Funktion "Radiolink" verwenden zu können, sind zur Berechnung der Geländegegebenheiten exakte Höhendaten erforderlich. Diese werden im entsprechenden \OSM**

+ **Subordner des APRSmap Arbeitsverzeichnisses abgelegt. APRSmap selbst benutzt dabei jeweils die zur Verfügung stehenden Daten mit der höchsten Auflösung. Die Daten sind ausschließlich im HAMNET zu finden unter:**

+

+ **E: In order to be able to use the "Radiolink" function, exact elevation data is required to calculate the terrain conditions. These are stored in the corresponding \OSM subfolder of the APRSmap working directory. APRSmap itself uses the available data with the highest resolution. The data can only be found in HAMNET at:**

+

+ http://web.oe2xzt.ampr.org/download/?dir=Digital_modes/APRS

+

+

+

+ **[[DXL - APRSmap | << Zurück zur DXL-APRSmap Übersicht]]**

Aktuelle Version vom 2. Januar 2023, 13:16 Uhr

D: Die Software gibt es je in einer Linux- und einer Windowsversion, sowie den Sourcecode zum selbst compilieren.

Dabei benötigt APRSmap keine Installationroutine. Die Dateien im Archiv müssen lediglich entpackt und lokal gespeichert werden (bspw. unter C:\APRSmap).

E: The software is available for OS like WINDOWS, LINUX and systems based on ARM structures like raspberry pi.

There is no installation routine. Just download the archive and save the files locally on your hard disc or removable drive (e.g. under C:\APRSmap).



APRSmap 1st Start



Inhaltsverzeichnis

1	Windows	32
2	Linux	32
2.1	HAMNET	32
2.2	Internet	32
3	ARM - Raspberry Pi	32
4	POI Files	32
5	Source Code	33
6	Release Notes	33
7	SRTM Höhendaten zur Funkausbreitungs- und Wegstreckenberechnung	33

Windows

D: Die Dateien aus dem heruntergeladenen Archiv werden lokal in den Unterordner /APRSMAP (muss selbst angelegt werden) entpackt bzw. gespeichert.

E: The files from the downloaded archive are unpacked and saved locally in the subfolder /APRSMAP (must be created yourself).

-  **Download via Internet** >> [APRSmapi Download via Wiki](#) << (Detail
Version [Datei:Aprsmap-all.zip](#))
-  **Download via HAMNET** APRSmapi Download via HAMNET mit aktuellen Updates (*HAMNET-Verbindung erforderlich - HAMNET connection required*)

Win32 Dateiliste

Übersicht der [APRSmapi-Dateien](#) unter Win32 Betriebssystemen.

Linux

HAMNET

- [\[1\]](#) - x86 (mit aktuellen Updates)

Internet

komplette dxlAPRS Toolchain fertig compiliert für folgende Systeme:

- [\[2\]](#) - Sourcecode
- [\[3\]](#) - x86
- [\[4\]](#) - ARMv7hf (Cortex-A8, AM335x, BeagleBone, ...)
- [\[5\]](#) - ARMv6 (Raspberry Pi)

ARM - Raspberry Pi

[aprsDXL auf ARM resp. Raspberry Pi](#)

POI Files

D: Österreichische POI (point of interest) Dateien für APRSmap.

E: Austrian POI (point of interest) files for use in APRSmap.

[APRSmapi POI Download](#)

Source Code

Die Sourcen vom dxlAPRS-Projekt sind auf Github veröffentlicht. Aus diesen kann derzeit für folgende Plattformen gebaut werden:

- x86
- armv6 (Raspberry Pi)
- armv7 (bur am335x pp, Beaglebone, ...)

<https://github.com/oe5hpm/dxlAPRS>

Release Notes

[APRSmap Release notes](#)

SRTM Höhendaten zur Funkausbreitungs- und Wegstreckenberechnung

D: Um die Funktion "Radiolink" verwenden zu können, sind zur Berechnung der Geländegegebenheiten exakte Höhendaten erforderlich. Diese werden im entsprechenden \OSM Subordner des APRSmap Arbeitsverzeichnisses abgelegt. APRSmap selbst benutzt dabei jeweils die zur Verfügung stehenden Daten mit der höchsten Auflösung. Die Daten sind ausschließlich im HAMNET zu finden unter:

E: In order to be able to use the "Radiolink" function, exact elevation data is required to calculate the terrain conditions. These are stored in the corresponding \OSM subfolder of the APRSmap working directory. APRSmap itself uses the available data with the highest resolution. The data can only be found in HAMNET at:

http://web.oe2xzt.ampr.org/download/?dir=Digital_modes/APRS

[<< Zurück zur DXL-APRSmap Übersicht](#)

DXL - APRSmap englisch: Unterschied zwischen den Versionen

[Versionsgeschichte interaktiv durchsuchen](#)
[Visuell Wikitext](#)

Version vom 8. September 2014, 22:28 Uhr (Quelltext anzeigen)
[OE2WAO \(Diskussion | Beiträge\)](#)
← [Zum vorherigen Versionsunterschied](#)

Aktuelle Version vom 14. August 2021, 14:53 Uhr (Quelltext anzeigen)
[OE2WAO \(Diskussion | Beiträge\)](#)
K
Markierung: [Visuelle Bearbeitung](#)

(18 dazwischenliegende Versionen desselben Benutzers werden nicht angezeigt)

Zeile 1:	Zeile 1:
<div>[[Kategorie:APRS]]</div>	<div>[[Kategorie:APRS]]</div>
<div></div>	<div></div>
<div>-<div>[[Datei:Deutschland-flagge.gif]] Für die deutsche Version dieses Projekts [[DXL - APRSmap >>hier klicken<<]]</div></div>	<div>+<div>[[Datei:Deutschland-flagge.gif link=DXL - APRSmap]] Für die deutsche Version dieses Projekts [[DXL - APRSmap >>hier klicken<<]]</div></div>
<div></div>	<div>+<div></div></div>
<div></div>	<div>+<div>[[Datei:Aprsmap-download.jpg link=DXL - APRSmap Download]]</div></div>
<div></div>	<div></div>
<div>APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!</div>	<div>APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!</div>
<div></div>	<div></div>
<div>-<div>[[Datei:aprsmmap.png]]</div></div>	<div>+<div>[[Datei:Aprsmap.png]]</div></div>
<div></div>	<div></div>
<div>-<div>A lot of documentation work has to be done soon !!</div></div>	<div>+<div>A lot of documentation work will have to be done soon !!</div></div>
<div></div>	<div></div>
<div>==Features==</div>	<div>==Features==</div>
<div>-<div>* OpenSource and already compiled for windows and linux</div></div>	<div>+<div></div></div>

-	* 100% ige compliance with the current APRS protocol specifications	+	*OpenSource and already compiled for windows and linux
-	* No installation required, just copy and start	+	*100% compliance with the current APRS protocol specifications
-	* No unnecessary menus, focus is on the representation	+	*No installation required, just copy and start
-	* IP-based, out-of-the-box network-ready in HAMNET and Internet	+	*No unnecessary menus, focus is on the representation
-	* Operation via shortcuts	+	*IP-based, out-of-the-box network-ready in HAMNET and Internet
-	* Local serial connection (TNC) possible - operating as an RF IGATE	+	* Operations best controlled via shortcuts
-	* Several MapSources can be used. By default, this is OSM - OpenStreetMap	+	*Local serial connection (TNC) possible - operating as an RF IGATE
-	* Downloading map source on demand	+	*Several MapSources can be used. By default, this is OSM - OpenStreetMap
-	* Track filter for delayed / late / repeated packets " F "	+	*Downloading map source on demand
-	* Radio propagation calculation (since v0.36) " R "	+	*Track filter for delayed / late / repeated packets " f "
-	* Animation of tracks with timeline " A "	+	*Radio propagation calculation (since v0.36) " R "
-	* Animation of the temperature distribution " W "	+	*Animation of tracks with timeline " a "
-	* Messaging	+	*Animation of the temperature distribution " w "
		+	*Messaging
		+	
		+	
		+	==Installation==
		+	After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap.

		+	No installation routine is required, just extract and run the aprsmap.exe

- +
- +
- + **==Operation manual and help==**
- + **[[DXL - APRSmap operating|>>**
- + **Operating instructions]] - the help in handling the program**
- +
- +
- +
- + **[[Datei:Aprsmap-1st-start.jpg]]**
- +
- + **On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.**
- +
- + ***First of all you put in your callsign (MY CALLSIGN) with optional SSID**
- + ***Second step is to choose your desired APRS icon (MY SYMBOL)**
- + ***Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.**
- + ***Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.**
- +
- + **for example:**

	+	aprs.oe2x zr.ampr.at (APRS IS connection via HAMNET)
	+	austria.aprs2.net (APRS IS connection via Internet)
	+	
	+	*You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.
	+	*Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.
		===Shortcuts===
-		: delete markers
-		@ reset <On Next Click> to menu mode
-		A Animate
-		B or <Backspace> go back in position history
-		C Center (to last clicked Pixel)
-		E toggle Errors only/All for stepping along a track with <>
-		F Junk Filter toggle on/off
-		H Heard (click symbol or text of igate before)
-		I Internal Status Listing
-		L toggle labels on/off
-		M toggle dimm not moving since 10min
-		O toggle Objects/Items on/off
-		Q Quit Program
	+	<nowiki>:</nowiki> delete markers
	+	@ reset <On Next Click> to menu mode
	+	a Animate (Click to Map to set Parameters)
	+	b or <Backspace> go back in position history
	+	c Center (to last clicked Pixel)
	+	d toggle (missing) map download
	+	e toggle Errors only/All for stepping along a track with <>
	+	f Junk Filter toggle on/off
	+	h Heard (click symbol or text of igate before)
	+	i Internal Status Listing
	+	l toggle Labels on/off
	+	m toggle dimm not moving since 10min
	+	o toggle Objects/Items on/off

- R toggle Radio tracks on/off	+ p toggle mouse-over Hints
- S Screenshot ppm/bpm	+ q Quit Program
- V make Video map.v4m uncompressed in YUV4MPEG2 format	+ r toggle Radio tracks on/off
- W toggle Wx temperature map (use topo or no map)	+ s toggle show only stations with a selected symbol
- X set Marker 1 to clicked position	+ u toggle tx/rx-Monitor window on/off
- Y set Marker 2 and Line to Marker 1	+ w toggle WX stations and Temperature
- / zoom to Marker 1-2 Square	+ x set Marker 1 to mouse position
- ~ change track colour	+ y set Marker 2 and Line to Marker 1
- + Zoom in	+ B Open Beacon editor
- - Zoom out	+ C Enter Category of POI to be drawn on map
- . zoom to track and show only this (clicked before)	+ D Digi Config open/close
- = same as but with radio tracks	+ F Find Call (with wildcards * ?), Locator, Latitude/Longitude
- 0 show all (and radio tracks off)	+ H Altitude Colour Map (if srtm-Data avaliable)
- 1,2,3,4 Zoom/Pan to stored Views	+ M Compose Message
- 7 use osm map	+ R toggle Radiorange Map on/off
- 9 use osm topo map	+ T toggle Timestamp
- ESC close menus	+ S Screenshot bpm (win), png (linux)
- Cursor up/down/left/right move map, same as click near margin	+ W Rain map (use topo or dark map)
- SHIFT with up/down/left/right/[zoom+]/ [zoom-] in smaller steps	+ < > Step along Beacons/Waypoints of a selected User
- DEL delete selected	+ () Map Brightness +- 5%
	+ / zoom to Marker 1-2 Square
	+ \ shortcut list
	+ ~ change track colour
	+ + Zoom in - Zoom out

		+	. zoom to track and show only this (clicked before)
		+	= same as . but with radio tracks
		+	0 show all (and radio tracks off)
		+	1,2,3,4 Zoom/Pan to stored Views
		+	7,8,9 use map type as configured
		+	ESC close menus
		+	Cursor up/down/left/right move map, same as click near margin
		+	SHIFT with up/down/left/right/[zoom+]/[zoom-] in smaller steps
		+	DEL delete selected (Symbol, Waypoint)
		+	TAB switch between two Views
		+	ctrl-L Reset Image and Mouse parameters to default
		+	ctrl-V Paste
		+	
		+	==[[DXL - APRSmap Download Download]]==
		+	[[Datei:Aprsmap-download.jpg link=DXL - APRSmap Download]]
		+	[[DXL - APRSmap Download APRSmap Download]] - For Windows, Linux and ARM (Raspberry Pi)
-	==Software==	+	==Further operation manual==
-	The software is available for OS like WINDOWS, LINUX and systems based on ARM structures like raspberry pi.	+	more information is up to come
-	===Windows version===		
-	* [[Media:Aprsmap-all.zip download via Wiki]] ([[Datei:Aprsmap-all.zip]])		

- * [<http://oe5dxl.ampr.at> download via HAMNET] with latest updates
"(HAMNET-connection required)"


Aktuelle Version vom 14. August 2021, 14:53 Uhr



Für die deutsche Version dieses Projekts [>>>hier klicken<<](#)



APRSmap is a new APRS client software by OE5DXL, which is based on the [OSM](#) map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk and start it!

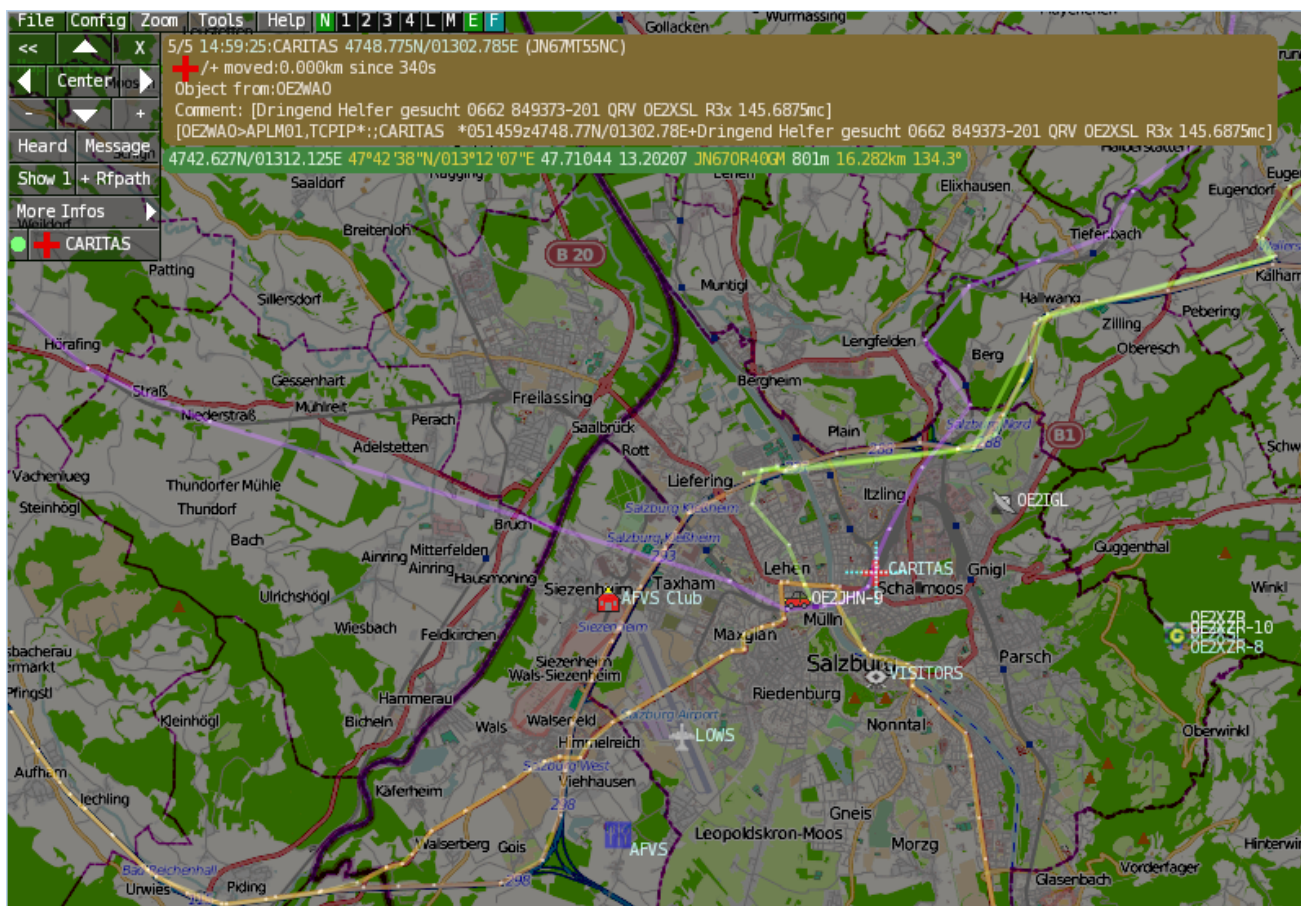

A lot of documentation work will have to be done soon !!

Inhaltsverzeichnis

1 Features	42
2 Installation	42

3	Operation manual and help	42
3.1	Shortcuts	43
4	Download	44
5	Further operation manual	44

Features

- OpenSource and already compiled for windows and linux
- 100% compliance with the current APRS protocol specifications
- No installation required, just copy and start
- No unnecessary menus, focus is on the representation
- IP-based, out-of-the-box network-ready in HAMNET and Internet
- Operations best controlled via shortcuts
- Local serial connection (TNC) possible - operating as an RF IGATE
- Several MapSources can be used. By default, this is OSM - OpenStreetMap
- Downloading map source on demand
- Track filter for delayed / late / repeated packets "f"
- Radio propagation calculation (since v0.36) "R"
- Animation of tracks with timeline "a"
- Animation of the temperature distribution "w"
- Messaging

Installation

After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap.

No installation routine is required, just extract and run the aprsmap.exe

Operation manual and help

>> [Operating instructions](#) - the help in handling the program

APRSmap 1st Start

On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.

- First of all you put in your callsign (MY CALLSIGN) with optional SSID
- Second step is to choose your desired APRS icon (MY SYMBOL)
- Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.
- Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.

for example:
 aprs.oe2xzt.ampr.at (APRS IS connection via HAMNET)
 austria.aprs2.net (APRS IS connection via Internet)

- You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.
- Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.

Shortcuts

```
: delete markers
@ reset <On Next Click> to menu mode
a Animate (Click to Map to set Parameters)
b or <Backspace> go back in position history
c Center (to last clicked Pixel)
d toggle (missing) map download
e toggle Errors only/All for stepping along a track with <>
f Junk Filter toggle on/off
h Heard (click symbol or text of igate before)
i Internal Status Listing
l toggle Labels on/off
m toggle dimm not moving since 10min
o toggle Objects/Items on/off
p toggle mouse-over Hints
q Quit Program
r toggle Radio tracks on/off
s toggle show only stations with a selected symbol
u toggle tx/rx-Monitor window on/off
w toggle WX stations and Temperature
x set Marker 1 to mouse position
y set Marker 2 and Line to Marker 1
B Open Beacon editor
C Enter Category of POI to be drawn on map
D Digi Config open/close
F Find Call (with wildcards * ?), Locator, Latitude/Longitude
H Altitude Colour Map (if srtm-Data available)
M Compose Message
R toggle Radiorange Map on/off
T toggle Timestamp
S Screenshot bpm (win), png (linux)
W Rain map (use topo or dark map)
< > Step along Beacons/Waypoints of a selected User
( ) Map Brightness +/- 5%
/ zoom to Marker 1-2 Square
\ shortcut list
~ change track colour
+ Zoom in - Zoom out
. zoom to track and show only this (clicked before)
= same as . but with radio tracks
0 show all (and radio tracks off)
1,2,3,4 Zoom/Pan to stored Views
7,8,9 use map type as configured
ESC close menus
```

```
Cursor up/down/left/right  move map, same as click near margin
SHIFT with up/down/left/right/[zoom+]/[zoom-]  in smaller steps
DEL    delete selected (Symbol, Waypoint)
TAB    switch between two Views
ctrl-L  Reset Image and Mouse parameters to default
ctrl-V  Paste
```

Download



[APRSmap Download](#) - For Windows, Linux and ARM (Raspberry Pi)

Further operation manual

more information is up to come

DXL - APRSmap englisch und DXL - APRSmap operating: Unterschied zwischen den Seiten

VisuellWikitext

Version vom 8. September 2014, 22:28
Uhr (Quelltext anzeigen)
OE2WAO (Diskussion | Beiträge)

Aktuelle Version vom 14. August 2021,
14:49 Uhr (Quelltext anzeigen)
OE2WAO (Diskussion | Beiträge)
Markierung: 2017-Quelltext-Bearbeitung

Zeile 1:		Zeile 1:	
	[[Kategorie:APRS]]		[[Kategorie:APRS]]
–	[[Datei:Deutschland-flagge.gif]] Für die deutsche Version dieses Projekts [[DXL - APRSmap >>hier klicken<<]]	+	==Program start==
		+	After downloading and saving locally, the '''aprsmap.exe''' program can be started. A separate installation is not required.
–	APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!	+	==Operation==
		+	===First steps===
–	[[Datei:aprsmap.png]]	+	[[Datei:Aprsmap-1st-start.jpg]]
–	A lot of documentation work has to be done soon !!	+	On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.
	==Features==		

-		+	*First of all you put in your callsign (MY CALLSIGN) with optional SSID
-	* OpenSource and already compiled for windows and linux	+	*Second step is to choose your desired APRS icon (MY SYMBOL)
-	* 100%ique compliance with the current APRS protocol specifications	+	*Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.
-	* No installation required, just copy and start	+	*Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.
-	* No unnecessary menus, focus is on the representation	+	
-	* IP-based, out-of-the-box network-ready in HAMNET and Internet	+	for example:
-	* Operation via shortcuts	+	aprs.oe2xzt.ampr.at (APRS IS connection via HAMNET)
-	* Local serial connection (TNC) possible - operating as an RF IGATE	+	austria.aprs2.net (APRS IS connection via Internet)
-	* Several MapSources can be used. By default, this is OSM - OpenStreetMap	+	
-	* Downloading map source on demand	+	*You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.
-	* Track filter for delayed / late / repeated packets "F"	+	*Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.
-	* Radio propagation calculation (since v0.36) "R"		
-	* Animation of tracks with timeline "A"		

-	* Animation of the temperature distribution "W"		
-	* Messaging		
	===Shortcuts===		===Shortcuts===
-	: delete markers	+	Note, shortcut keys are case sensitive!
-	@ reset <On Next Click> to menu mode	+	<nowiki>:</nowiki> delete markers
-	A Animate	+	@ reset <On Next Click> to menu mode
-	B or <Backspace> go back in position history	+	a Animate (Click to Map to set Parameters)
-	C Center (to last clicked Pixel)	+	b or <Backspace> go back in position history
-	E toggle Errors only/All for stepping along a track with <>	+	c Center (to last clicked Pixel)
-	F Junk Filter toggle on/off	+	d toggle (missing) map download
-	H Heard (click symbol or text of igate before)	+	e toggle Errors only/All for stepping along a track with <>
-	I Internal Status Listing	+	f Junk Filter toggle on/off
-	L toggle labels on/off	+	h Heard (click symbol or text of igate before)
-	M toggle dimm not moving since 10min	+	i Internal Status Listing
-	O toggle Objects/Items on/off	+	l toggle Labels on/off
-	Q Quit Program	+	m toggle dimm not moving since 10min
-	R toggle Radio tracks on/off	+	o toggle Objects/Items on/off
-	S Screenshot ppm/bpm	+	p toggle mouse-over Hints
-	V make Video map.y4m uncompressed in YUV4MPEG2 format	+	q Quit Program
-	W toggle Wx temperature map (use topo or no map)	+	r toggle Radio tracks on/off
-	X set Marker 1 to clicked position	+	s toggle show only stations with a selected symbol
-	Y set Marker 2 and Line to Marker 1	+	u toggle tx/rx-Monitor window on/off

-	/ zoom to Marker 1-2 Square	+	w toggle WX stations and Temperature
-	~ change track colour	+	x set Marker 1 to mouse position
-	+ Zoom in	+	y set Marker 2 and Line to Marker 1
-	- Zoom out	+	B Open Beacon editor
-	. zoom to track and show only this (clicked before)	+	C Enter Category of POI to be drawn on map
-	= same as . but with radio tracks	+	D Digi Config open/close
-	0 show all (and radio tracks off)	+	F Find Call (with wildcards * ?), Locator, Latitude/Longitude
-	1,2,3,4 Zoom/Pan to stored Views	+	H Altitude Colour Map (if srtm-Data available)
-	7 use osm map	+	M Compose Message
-	9 use osm topo map	+	R toggle Radiorange Map on/off
-	ESC close menus	+	T toggle Timestamp
-	Cursor up/down/left/right move map, same as click near margin	+	S Screenshot bpm (win), png (linux)
-	SHIFT with up/down/left/right/[zoom+]/[zoom-] in smaller steps	+	W Rain map (use topo or dark map)
-	DEL delete selected	+	< > Step along Beacons/Waypoints of a selected User
		+	() Map Brightness +/- 5%
		+	/ zoom to Marker 1-2 Square
		+	\ shortcut list
		+	~ change track colour
		+	+ Zoom in - Zoom out
		+	. zoom to track and show only this (clicked before)
		+	= same as . but with radio tracks
		+	0 show all (and radio tracks off)
		+	1,2,3,4 Zoom/Pan to stored Views
		+	7,8,9 use map type as configured

- + **ESC** close menus
- + Cursor up/down/left/right move map, same as click near margin
- + SHIFT with up/down/left/right/[zoom+]/[zoom-] in smaller steps
- + **DEL** delete selected (**Symbol, Waypoint**)
- + **TAB** switch between two Views
- + **ctrl-L** Reset Image and Mouse parameters to default
- + **ctrl-V** Paste
- +
- + **===Tips & tricks===**
- +
- + ***Animation: Click on the track of a moving object (e.g. car) and press the "a" key**
- + ***Temperature distribution: Two times "w" (w + w) shows a color distribution of the reported temperatures (sensible min. Zoom level 10 or less)**
- + ***The "0" (zero), ESC and ":" keys often help if you want to have everything displayed again after clicking on the filter or similar.**
- + ***"TAB" key toggles between two independent displays, similar to VFO "A" and "B".**
- +
- +
- + **==Menus==**
- + **[[Datei:Aprsmap-conf-online.PNG]]**
- +

- + In addition to the main menus explained in more detail below, the menu offers further short menus on the right.
- + N Display or switching of the network status. green means connected, orange means not connected or connection problems. If the mouse pointer is moved over the menu, the connection status appears in the popup
- + 1-4....Display or switch the UDP port connections
- + L display the log file data
- + M View the saved messages
- + F display or switching of the track filter (incorrect or implausible position packages)
- + O display or switch the display of pure objects
- + By the way, the mouse position display (green bar with coordinates) can be activated in the CONFIG> MAP PARAMETER> SHOW LOC OF MOUSE menu.
- +
- + ===File===
- + ====Import Log====
- + Import a complete logfile.
- +
- + =====Screenshot=====
- + Save a screenshot in your local user directory, e.g. map1.bmp (Win10 user directories are in the User\AppData folder e.g. C:\Users\User\AppData\Local\VirtualStore\Program Files (x86)\APRSmap)
- +

- + **====Make Video====**
- + **Save a video from e.g. a moving object in .y4m raw video format.**
- +
- + **====Write Log====**
- + **Choose the logfile directory.**
- +
- + **====Keep Log Days====**
- + **Define the ammount of days logs are kept.**
- +
- + **====Quit====**
- + **Exit APRSmap, shortcut key is q.**
- +
- + **====Config====**
- + **====Brightness====**
- + **Setting the respective brightness, times and colors.**
- + **Time Fade Out - time until the display of stations disappears after the time for display (full brightness) has expired**
- + **Time full Bright - time to display received positions**
- + **Brightness Waypoint - Brightness of the waypoint points**
- + **Brightness Text - Brightness of the station texts**
- + **Brightness Symbol - the brightness of the symbols displayed**
- + **Gamma - Gamma value setting of the card**
- + **Brightness Track - the brightness of the route**

- + **Brightness Map - the brightness of the map**
- + **Brightness Object - the brightness of the objects displayed**
- +
- + **====Online====**
- + **The ONLINE area is initially the most important and necessary menu item, which has to be configured individually.**
- + **<u>Basically, when the program is simply started and a data connection is established, other stations can be receive even without specifying your own callsign, position or APRS passcode (RX only mode)</u>. However, in order to act "actively" in the APRS network and to be seen and reached by other stations, this information must be entered accordingly. The "APRS PASScode" must be requested once. To do this, search for ""APRS PASSCODE Generator"" on the Internet.**
- +
- + **====My Call====**
- + **Here you enter the callsign to be used, optionally with SSID.**
- + **(without SSID) Your primary station usually fixed and message capable**
- + **-1 generic additional station, digi, mobile, wx, etc**
- + **-2 generic additional station, digi, mobile, wx, etc**
- + **-3 generic additional station, digi, mobile, wx, etc**
- + **-4 generic additional station, digi, mobile, wx, etc**

- + **-5 Other networks (Dstar, Iphones, Androids, Blackberry's etc)**
- + **-6 Special activity, Satellite ops, camping or 6 meters, etc**
- + **-7 walkie talkies, HT's or other human portable**
- + **-8 boats, sailboats, RV's or second main mobile**
- + **-9 Primary Mobile (usually message capable)**
- + **-10 internet, Iqates, echolink, winlink, AVRS, APRN, etc**
- + **-11 balloons, aircraft, spacecraft, etc**
- + **-12 APRStt, DTMF, RFID, devices, one-way trackers*, etc**
- + **-13 Weather stations**
- + **-14 Truckers or generally full time drivers**
- + **-15 generic additional station, digi, mobile, wx, etc**
- +
- + *** One-way trackers should best use the -12 one-way SSID indicator because the -9's usually mean a ham in full APRS communication both message and voice.**
- + **The -9's can be contacted by APRS message or by Voice on his frequency included in his beacon, or on Voice Alert if he is in simplex range.**
- + **The -12's are just moving Icons on the map and since they have no 2 way communication for ham radio they are not generally of routine interest to other operators.**
- +
- + **=====My Symbol=====**

- + **Self-explanatory**
- +
- + **====My Position=====**
- + **In order to enter your own position in MY POSITION quickly and without any major search effort, simply go first with the zoom into the MAP (preferably ZOOMLEVEL 17) so that you can clearly see your own position. Then open the CONFIG - ONLINE - MY POSITION item and click the SHIFT key to determine your own position. The coordinates are automatically adopted in the context menu and only need to be confirmed with OK.**
- + **====Netbeacontext=====**
- + **The text set here is sent as beacon text via the network connection.**
- +
- + **====Passcode=====**
- + **An APRS PASSCODE is not absolutely necessary for RX, but this code is essential for sending your own data. You can apply for this code online with a waiting period, simply search for APRS IS PASSCODE using the search engine.**
- + **====Server URL=====**
- + **Any APRS server that provides the data in the correct format can be entered as the server URL.**
- + **for example:**
- + **aprs.oe2xzt.ampr.at (for connections via HAMNET)**
- + **austria.aprs2.net (for connections via Internet)**

- + **Another list can be found at `http://www.aprs2.net/serverstats.php`.**
- +
- + **The standard port is 14580 and does not have to be specified.**
- + **Alternative ports are given after the address:**
- + **`aprs.server.com:12345`**
- +
- + **====Serverfilter====**
- + **Suggestion: `" 'm / 100 p / OE -t / t' "`**
- +
- + **The position filter is structured as follows `[Position] / [Radius] eq " 'm / 100' "` for displaying data with a radius of 100km around your own position.**
- +
- + **`" 'P / OE' "` is used to display all OE stations (e.g. mobile) outside the defined radius filter .**
- +
- + **And the mostly unnecessary telemetry traffic is filtered with `" '-t / t' "`.**
- +
- + **`"TIP"`**
- +
- + **settings relating to the server are only adopted when a new connection is made, for this the server connection can either be**
- +

disconnected and re-established in the menu bar under "N", or the corresponding server entry can be deactivated and activated under "Config"> "Online"> "Connect Server".

+

+

+ =====Connect Server=====

+ Activates or deactivates the online connection.

+

+ =====Allow TX to NET=====

+ Activates or deactivates the sending of (own) data to the online network.

+

+ =====Allow Gate RF>NET=====

+ Activates or deactivates the forwarding of APRS data heard locally via HF in the online network.

+

+ =====RF-Ports=====

+

+ =====Timers=====

+

+ =====Map Parameter=====

+

+ =====Show Loc of Mouse=====

+ Activates / deactivates the display of the coordinates, height and distance of the mouse pointer on the map.

+

+ =====Trackfilter=====

- + **Activates / deactivates the intelligent filter function for incorrect or implausible position data (e.g. long lines across the APRS map; chopping or zik-zak in the track as if the route was driven several times - wheel cap lost - caused by a massive delay from Digis delivered packages)**
- +
- + **=====Show Scaler=====**
- +
- + **=====Show Windvane=====**
- + **Activates / deactivates the display of the wind vane at weather stations if this value was supplied.**
- +
- + **=====Show Temp=====**
- + **Activates / deactivates the display of the temperature value at weather stations if this has been delivered.**
- +
- + **=====Load Map Program=====**
- + **Deactivates / activates the card loader. Optionally, the loading program can be selected by clicking on the menu, optionally**
- + **getosm "(standard, activates the external program getosm.exe from OE5KRN) " ""* recommended"**
- + **start sh map.sh "(loading maps in the background)"**
- + **sh qm.sh "(for map download from the Internet)"**
- + **sh qm-hamnet.sh "(for" map download "from HAMNET)"**
- +
- + **=====km/h Text=====**

+ **Freely selectable text of the unit for displaying the speed of moving stations. Default "km / h", can be shortened to "km", for example, to save space.**

+ **=====Show Altitude min m=====**

+

+ **=====Brightness Notmover=====**

+

+ **=====Reset to Default=====**

+

+ **=====Map Moving=====**

+

+ **=====Colours, Font=====**

+

+ **=====Callfilters=====**

+

+ **=====Watch Calls=====**

+

+ **=====Reload Config=====**

+

+ **=====Save Config=====**

+

+ **=====Zoom=====**

+

+ **=====Tools=====**

+

+ **=====Toolbar Off=====**

+

Deactivates the permanently displayed toolbar. The toolbar can then be opened dynamically with a click on the map.

+ **=====On next Click=====**

+	
+	====List====
+	
+	====Choose Maps====
+	
+	=====Reload=====
+	
+	=====Download=====
+	
+	=====tiles_quest=====
+	
+	=====tiles_sat=====
+	
+	=====tiles_cyclemap [9]=====
+	
+	=====tiles_topo [8]=====
+	
+	=====tiles [7]=====
+	
+	====Find====
+	
+	====Radiolink====
+	
+	====Select Data====
+	=====Symbol=====
	When the display is activated (marked by * next to SYMBOL) only the selected symbols are displayed.

+ **These can be switched on / off by clicking on the respective symbols (multiple selection possible). The entire function can be switched on / off by clicking on the wording SYMBOL.**

+ **=====Dimm Notmover=====**

+ **With the on / off switch, it clearly dims the stationary stations and objects in relation to, for example, mobile stations.**

+

+ **=====Rain Colourmap=====**

+

+ **=====Temp Colourmap=====**

+ **Shows a temperature distribution (similar to an isobar map). Shortcut 2x "w". Exit the Colourmap view with ESC or key w again**

+

+ **=====WX Stations=====**

+

+ **=====Show POI=====**

+

+ **=====Show All=====**

+

+ **=====Add Maptypes=====**

+

+ **=====Map directory=====**

+

+ **=====Send Message=====**

+ **Opens the message context menu**

+

+ **=====Animate=====**

Aktuelle Version vom 14. August 2021, 14:49 Uhr

1 Program start	64
2 Operation	64
2.1 First steps	64
2.2 Shortcuts	64

2.3 Tips & tricks	65
3 Menus	66
3.1 File	66
3.1.1 Import Log	66
3.1.2 Screenshot	66
3.1.3 Make Video	66
3.1.4 Write Log	66
3.1.5 Keep Log Days	67
3.1.6 Quit	67
3.2 Config	67
3.2.1 Brightness	67
3.2.2 Online	67
3.2.2.1 My Call	67
3.2.2.2 My Symbol	68
3.2.2.3 My Position	68
3.2.2.4 Netbeacontext	68
3.2.2.5 Passcode	68
3.2.2.6 Server URL	68
3.2.2.7 Serverfilter	68
3.2.2.8 Connect Server	69
3.2.2.9 Allow TX to NET	69
3.2.2.10 Allow Gate RF>NET	69
3.2.3 RF-Ports	69
3.2.4 Timers	69
3.2.5 Map Parameter	69
3.2.5.1 Show Loc of Mouse	69
3.2.5.2 Trackfilter	69
3.2.5.3 Show Scaler	69
3.2.5.4 Show Windvane	69
3.2.5.5 Show Temp	70
3.2.5.6 Load Map Program	70
3.2.5.7 km/h Text	70
3.2.5.8 Show Altitude min m	70
3.2.5.9 Brightness Notmover	70
3.2.5.10 Reset to Default	70
3.2.6 Map Moving	70
3.2.7 Colours, Font	70
3.2.8 Callfilters	70
3.2.9 Watch Calls	70
3.2.10 Reload Config	70
3.2.11 Save Config	70
3.3 Zoom	70
3.4 Tools	70
3.4.1 Toolbar Off	70

3.4.2 On next Click	71
3.4.3 List	71
3.4.4 Choose Maps	71
3.4.4.1 Reload	71
3.4.4.2 Download	71
3.4.4.3 tiles_quest	71
3.4.4.4 tiles_sat	71
3.4.4.5 tiles_cyclemap [9]	71
3.4.4.6 tiles_topo [8]	71
3.4.4.7 tiles [7]	71
3.4.5 Find	71
3.4.6 Radiolink	71
3.4.7 Select Data	71
3.4.7.1 Symbol	71
3.4.7.2 Dimm Notmover	71
3.4.7.3 Rain Colourmap	71
3.4.7.4 Temp Colourmap	71
3.4.7.5 WX Stations	72
3.4.7.6 Show POI	72
3.4.7.7 Show All	72
3.4.8 Add Maptypes	72
3.4.9 Map directory	72
3.4.10 Send Message	72
3.4.11 Animate	72
3.5 Help	72
3.5.1 Version	72
3.5.2 Helptext	72

Program start

After downloading and saving locally, the **aprsmap.exe** program can be started. A separate installation is not required.

Operation

First steps

APRSmap 1st Start

On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.

- First of all you put in your callsign (MY CALLSIGN) with optional SSID
- Second step is to choose your desired APRS icon (MY SYMBOL)
- Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.
- Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.

for example:

aprs.oe2xzt.ampr.at (APRS IS connection via HAMNET)
austria.aprs2.net (APRS IS connection via Internet)

- You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.
- Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.

Shortcuts

Note, shortcut keys are case sensitive!

```
: delete markers
@ reset <On Next Click> to menu mode
a Animate (Click to Map to set Parameters)
b or <Backspace> go back in position history
c Center (to last clicked Pixel)
d toggle (missing) map download
e toggle Errors only/All for stepping along a track with <>
f Junk Filter toggle on/off
h Heard (click symbol or text of igate before)
i Internal Status Listing
l toggle Labels on/off
m toggle dimm not moving since 10min
o toggle Objects/Items on/off
p toggle mouse-over Hints
q Quit Program
```



```
r  toggle Radio tracks on/off
s  toggle show only stations with a selected symbol
u  toggle tx/rx-Monitor window on/off
w  toggle WX stations and Temperature
x  set Marker 1 to mouse position
y  set Marker 2 and Line to Marker 1
B  Open Beacon editor
C  Enter Category of POI to be drawn on map
D  Digi Config open/close
F  Find Call (with wildcards * ?), Locator, Latitude/Longitude
H  Altitude Colour Map (if srtm-Data available)
M  Compose Message
R  toggle Radiorange Map on/off
T  toggle Timestamp
S  Screenshot bpm (win), png (linux)
W  Rain map (use topo or dark map)
< > Step along Beacons/Waypoints of a selected User
( )  Map Brightness +/- 5%
/    zoom to Marker 1-2 Square
\    shortcut list
~    change track colour
+    Zoom in - Zoom out
.    zoom to track and show only this (clicked before)
=    same as . but with radio tracks
0    show all (and radio tracks off)
1,2,3,4 Zoom/Pan to stored Views
7,8,9 use map type as configured
ESC  close menus
Cursor up/down/left/right move map, same as click near margin
SHIFT with up/down/left/right/[zoom+]/[zoom-] in smaller steps
DEL  delete selected (Symbol, Waypoint)
TAB  switch between two Views
ctrl-L Reset Image and Mouse parameters to default
ctrl-V Paste
```

Tips & tricks

- Animation: Click on the track of a moving object (e.g. car) and press the "a" key
- Temperature distribution: Two times "w" (w + w) shows a color distribution of the reported temperatures (sensible min. Zoom level 10 or less)
- The "0" (zero), ESC and ":" keys often help if you want to have everything displayed again after clicking on the filter or similar.
- "TAB" key toggles between two independent displays, similar to VFO "A" and "B".

Menus



In addition to the main menus explained in more detail below, the menu offers further short menus on the right.

N Display or switching of the network status, green means connected, orange means not connected or connection problems. If the mouse pointer is moved over the menu, the connection status appears in the popup
 1-4....Display or switch the UDP port connections
 L display the log file data
 M View the saved messages
 F display or switching of the track filter (incorrect or implausible position packages)
 O display or switch the display of pure objects

By the way, the mouse position display (green bar with coordinates) can be activated in the CONFIG> MAP PARAMETER> SHOW LOC OF MOUSE menu.

File

Import Log

Import a complete logfile.

Screenshot

Save a screenshot in your local user directory, e.g. map1.bmp (Win10 user directories are in the User\AppData folder e.g. C:\Users\User\AppData\Local\VirtualStore\Program Files (x86)\APRSmap)

Make Video

Save a video from e.g. a moving object in .y4m raw video format.

Write Log

Choose the logfile directory.

Keep Log Days

Define the ammount of days logs are kept.

Quit

Exit APRSmap, shortcut key is q.

Config

Brightness

Setting the respective brightness, times and colors.

```
Time Fade Out - time until the display of stations disappears after the time
for display (full brightness) has expired
Time full Bright - time to display received positions
Brightness Waypoint - Brightness of the waypoint points
Brightness Text - Brightness of the station texts
Brightness Symbol - the brightness of the symbols displayed
Gamma - Gamma value setting of the card
Brightness Track - the brightness of the route
Brightness Map - the brightness of the map
Brightness Object - the brightness of the objects displayed
```

Online

The ONLINE area is initially the most important and necessary menu item, which has to be configured individually. Basically, when the program is simply started and a data connection is established, other stations can be receive even without specifying your own callsign, position or APRS passcode (RX only mode). However, in order to act "actively" in the APRS network and to be seen and reached by other stations, this information must be entered accordingly. The *APRS PASScode* must be requested once. To do this, search for "*APRS PASSCODE Generator*" on the Internet.

My Call

Here you enter the callsign to be used, optionally with SSID.

```
(without SSID) Your primary station usually fixed and message capable
-1 generic additional station, digi, mobile, wx, etc
-2 generic additional station, digi, mobile, wx, etc
-3 generic additional station, digi, mobile, wx, etc
-4 generic additional station, digi, mobile, wx, etc
-5 Other networks (Dstar, Iphones, Androids, Blackberry's etc)
-6 Special activity, Satelllite ops, camping or 6 meters, etc
-7 walkie talkies, HT's or other human portable
-8 boats, sailboats, RV's or second main mobile
-9 Primary Mobile (usually message capable)
-10 internet, Igates, echolink, winlink, AVRS, APRN, etc
-11 balloons, aircraft, spacecraft, etc
-12 APRStt, DTMF, RFID, devices, one-way trackers*, etc
-13 Weather stations
-14 Truckers or generally full time drivers
-15 generic additional station, digi, mobile, wx, etc
```

* One-way trackers should best use the -12 one-way SSID indicator because the -9's usually mean a ham in full APRS communication both message and voice. The -9's can be contacted by APRS message or by Voice on his frequency included in his beacon, or on Voice Alert if he is in simplex range. The -12's are just moving Icons on the map and since they have no 2 way communication for ham radio they are not generally of routine interest to other operators.

My Symbol

Self-explanatory

My Position

In order to enter your own position in MY POSITION quickly and without any major search effort, simply go first with the zoom into the MAP (preferably ZOOMLEVEL 17) so that you can clearly see your own position. Then open the CONFIG - ONLINE - MY POSITION item and click the SHIFT key to determine your own position. The coordinates are automatically adopted in the context menu and only need to be confirmed with OK.

Netbeacontext

The text set here is sent as beacon text via the network connection.

Passcode

An APRS PASSCODE is not absolutely necessary for RX, but this code is essential for sending your own data. You can apply for this code online with a waiting period, simply search for APRS IS PASSCODE using the search engine.

Server URL

Any APRS server that provides the data in the correct format can be entered as the server URL.

for example:
aprs.oe2xzt.ampr.at (for connections via HAMNET)
austria.aprs2.net (for connections via Internet)

Another list can be found at <http://www.aprs2.net/serverstats.php>.

The standard port is 14580 and does not have to be specified.

Alternative ports are given after the address:
aprs.server.com:12345

Serverfilter

Suggestion: " **m / 100 p / OE -t / t** "

The position filter is structured as follows [Position] / [Radius] eg " **m** / **100** " for displaying data with a radius of 100km around your own position.

" **P** / **OE** " is used to display all OE stations (e.g. mobile) outside the defined radius filter .

And the mostly unnecessary telemetry traffic is filtered with " **-t** / **t** ".

TIP

settings relating to the server are only adopted when a new connection is made, for this the server connection can either be disconnected and re-established in the menu bar under "N", or the corresponding server entry can be deactivated and activated under "Config"> "Online"> "Connect Server" .

Connect Server

Activates or deactivates the online connection.

Allow TX to NET

Activates or deactivates the sending of (own) data to the online network.

Allow Gate RF>NET

Activates or deactivates the forwarding of APRS data heard locally via HF in the online network.

RF-Ports

Timers

Map Parameter

Show Loc of Mouse

Activates / deactivates the display of the coordinates, height and distance of the mouse pointer on the map.

Trackfilter

Activates / deactivates the intelligent filter function for incorrect or implausible position data (e.g. long lines across the APRS map; chopping or zik-zak in the track as if the route was driven several times - wheel cap lost - caused by a massive delay from Digis delivered packages)

Show Scaler

Show Windvane

Activates / deactivates the display of the wind vane at weather stations if this value was supplied.

Show Temp

Activates / deactivates the display of the temperature value at weather stations if this has been delivered.

Load Map Program

Deactivates / activates the card loader. Optionally, the loading program can be selected by clicking on the menu, optionally

```
getosm (standard, activates the external program getosm.exe from OE5KRN) *  
recommended  
start sh map.sh (loading maps in the background)  
sh gm.sh (for map download from the Internet)  
sh gm-hamnet.sh (for map download from HAMNET)
```

km/h Text

Freely selectable text of the unit for displaying the speed of moving stations. Default "km / h", can be shortened to "km", for example, to save space.

Show Altitude min m

Brightness Notmover

Reset to Default

Map Moving

Colours, Font

Callfilters

Watch Calls

Reload Config

Save Config

Zoom

Tools

Toolbar Off

Deactivates the permanently displayed toolbar. The toolbar can then be opened dynamically with a click on the map.

On next Click

List

Choose Maps

Reload

Download

tiles_quest

tiles_sat

tiles_cyclemap [9]

tiles_topo [8]

tiles [7]

Find

Radiolink

Select Data

Symbol

When the display is activated (marked by * next to SYMBOL) only the selected symbols are displayed. These can be switched on / off by clicking on the respective symbols (multiple selection possible). The entire function can be switched on / off by clicking on the wording SYMBOL.

Dimm Notmover

With the on / off switch, it clearly dims the stationary stations and objects in relation to, for example, mobile stations.

Rain Colourmap

Temp Colourmap

Shows a temperature distribution (similar to an isobar map). Shortcut 2x "w". Exit the Colourmap view with ESC or key w again

WX Stations

Show POI

Show All

Add Maptypes

Map directory

Send Message

Opens the message context menu

Animate

Help**Version**

Shows the currently installed version of APRSmap. The letter in brackets indicates the operating system, followed by the version number of the software.

```
aprsm(w) 0.79 by OE5DXL
```

Helptext

Opens the program-internal help context.

[<< Back to DXL - APRSmap overview](#)