 
 


Inhaltsverzeichnis

1. DXL - APRSmap englisch	33
2. Benutzer:OE2WAO	7
3. DXL - APRSmap	13
4. DXL - APRSmap Download	22
5. DXL - APRSmap operating	38



APRSmap is a new APRS client software by OE5DXL, which is based on the [OSM](#) map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk and start it!

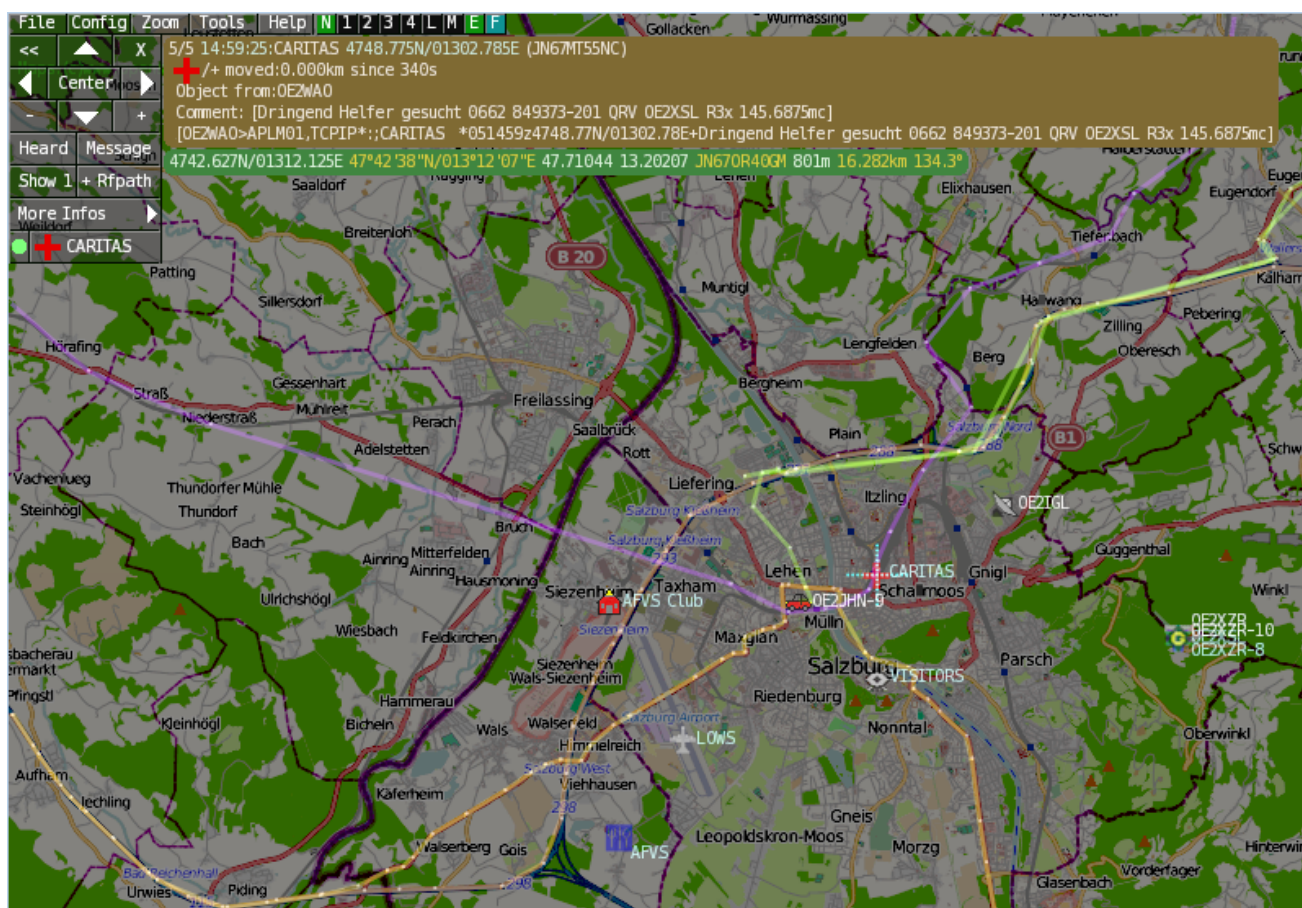

A lot of documentation work will have to be done soon !!

Inhaltsverzeichnis

1 Features	35
2 Installation	35
3 Operation manual and help	35
3.1 Shortcuts	36
4 Download	37
5 Further operation manual	37

Features

- OpenSource and already compiled for windows and linux
- 100% compliance with the current APRS protocol specifications
- No installation required, just copy and start
- No unnecessary menus, focus is on the representation
- IP-based, out-of-the-box network-ready in HAMNET and Internet
- Operations best controlled via shortcuts
- Local serial connection (TNC) possible - operating as an RF IGATE
- Several MapSources can be used. By default, this is OSM - OpenStreetMap
- Downloading map source on demand
- Track filter for delayed / late / repeated packets "f"
- Radio propagation calculation (since v0.36) "R"
- Animation of tracks with timeline "a"
- Animation of the temperature distribution "w"
- Messaging

Installation

After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap.

No installation routine is required, just extract and run the aprsmap.exe

Operation manual and help

>> [Operating instructions](#) - the help in handling the program

APRSmap 1st Start

On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.

- First of all you put in your callsign (MY CALLSIGN) with optional SSID
- Second step is to choose your desired APRS icon (MY SYMBOL)
- Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.
- Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.

for example:
 aprs.oe2xzt.ampr.at (APRS IS connection via HAMNET)
 austria.aprs2.net (APRS IS connection via Internet)

 
- You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.
- Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.

Shortcuts

```
: delete markers
@ reset <On Next Click> to menu mode
a Animate (Click to Map to set Parameters)
b or <Backspace> go back in position history
c Center (to last clicked Pixel)
d toggle (missing) map download
e toggle Errors only/All for stepping along a track with <>
f Junk Filter toggle on/off
h Heard (click symbol or text of igate before)
i Internal Status Listing
l toggle Labels on/off
m toggle dimm not moving since 10min
o toggle Objects/Items on/off
p toggle mouse-over Hints
q Quit Program
r toggle Radio tracks on/off
s toggle show only stations with a selected symbol
u toggle tx/rx-Monitor window on/off
w toggle WX stations and Temperature
x set Marker 1 to mouse position
y set Marker 2 and Line to Marker 1
B Open Beacon editor
C Enter Category of POI to be drawn on map
D Digi Config open/close
F Find Call (with wildcards * ?), Locator, Latitude/Longitude
H Altitude Colour Map (if srtm-Data available)
M Compose Message
R toggle Radiorange Map on/off
T toggle Timestamp
S Screenshot bpm (win), png (linux)
W Rain map (use topo or dark map)
< > Step along Beacons/Waypoints of a selected User
( ) Map Brightness +/- 5%
/ zoom to Marker 1-2 Square
\ shortcut list
~ change track colour
+ Zoom in - Zoom out
. zoom to track and show only this (clicked before)
= same as . but with radio tracks
0 show all (and radio tracks off)
1,2,3,4 Zoom/Pan to stored Views
7,8,9 use map type as configured
ESC close menus
```

```
Cursor up/down/left/right  move map, same as click near margin
SHIFT with up/down/left/right/[zoom+]/[zoom-]  in smaller steps
DEL    delete selected (Symbol, Waypoint)
TAB    switch between two Views
ctrl-L  Reset Image and Mouse parameters to default
ctrl-V  Paste
```

Download



[APRSmap Download](#) - For Windows, Linux and ARM (Raspberry Pi)

Further operation manual

more information is up to come

DXL - APRSmap englisch und Benutzer:OE2WAO: Unterschied zwischen den Seiten

Visuell Wikitext

Version vom 14. August 2021, 01:31 Uhr

([Quelltext anzeigen](#))

[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))

K

Markierung: [Visuelle Bearbeitung](#)

Aktuelle Version vom 9. August 2020, 23:

41 Uhr ([Quelltext anzeigen](#))

[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))

(Die Seite wurde neu angelegt:

„<https://oe2wao.info>“)

Zeile 1:

– **[[Kategorie:APRS]]**

–

– **[[Datei:Deutschland-flagge.gif | link=DXL - APRSmap]] Für die deutsche Version dieses Projekts [[DXL - APRSmap | >>hier klicken<<]]**

–

– **[[Datei:Aprsmap-download.jpg | link=DXL - APRSmap Download]]**

–

– **APRSmap is a new APRS client software by OE5DXL, which is based on the [<http://www.osm.org> OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!**

–

– **[[Datei:Aprsmap.png]]**

–

– **A lot of documentation work will have to be done soon !!**

–

– **==Features==**

–

Zeile 1:

+ **<https://oe2wao.info>**

- ***OpenSource and already compiled for windows and linux**
- ***100% compliance with the current APRS protocol specifications**
- ***No installation required, just copy and start**
- ***No unnecessary menus, focus is on the representation**
- ***IP-based, out-of-the-box network-ready in HAMNET and Internet**
- ***Operations best controlled via shortcuts**
- ***Local serial connection (TNC) possible - operating as an RF IGATE**
- ***Several MapSources can be used. By default, this is OSM - OpenStreetMap**
- ***Downloading map source on demand**
- ***Track filter for delayed / late / repeated packets "f"**
- ***Radio propagation calculation (since v0.36) "R"**
- ***Animation of tracks with timeline "a"**
- ***Animation of the temperature distribution "w"**
- ***Messaging**
-
-
- **==Installation==**
- **After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap.
**
- **No installation routine is required, just extract and run the aprsmap.exe**
-

-
- **==First steps==**
- **[[Datei:Aprsmap-1st-start.jpg]]**
-
- **On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.**
-
- ***First of all you put in your callsign (MY CALLSIGN) with optional SSID**
- ***Second step is to choose your desired APRS icon (MY SYMBOL)**
- ***Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.**
- ***Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.**
-
- **for example:**
- **aprs.oe2xzt.ampr.at (APRS IS connection via HAMNET)**
- **austria.aprs2.net (APRS IS connection via Internet)**
-

– ***You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.**

– ***Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.**

– **===Shortcuts===**

– **: delete markers**

– **@ reset <On Next Click> to menu mode**

– **a Animate (Click to Map to set Parameters)**

– **b or <Backspace> go back in position history**

– **c Center (to last clicked Pixel)**

– **d toggle (missing) map download**

– **e toggle Errors only/All for stepping along a track with <>**

– **f Junk Filter toggle on/off**

– **h Heard (click symbol or text ofigate before)**

– **i Internal Status Listing**

– **l toggle Labels on/off**

– **m toggle dimm not moving since 10min**

– **o toggle Objects/Items on/off**

– **p toggle mouse-over Hints**

– **q Quit Program**

– **r toggle Radio tracks on/off**

– **s toggle show only stations with a selected symbol**

- **u** toggle tx/rx-Monitor window on/off
- **w** toggle WX stations and Temperature
- **x** set Marker 1 to mouse position
- **y** set Marker 2 and Line to Marker 1
- **B** Open Beacon editor
- **C** Enter Category of POI to be drawn on map
- **D** Digi Config open/close
- **F** Find Call (with wildcards * ?), Locator, Latitude/Longitude
- **H** Altitude Colour Map (if srtm-Data available)
- **M** Compose Message
- **R** toggle Radiorange Map on/off
- **T** toggle Timestamp
- **S** Screenshot bpm (win), png (linux)
- **W** Rain map (use topo or dark map)
- **< >** Step along Beacons/Waypoints of a selected User
- **()** Map Brightness +- 5%
- **/** zoom to Marker 1-2 Square
- **** shortcut list
- **~** change track colour
- **+** Zoom in - Zoom out
- **.** zoom to track and show only this (clicked before)
- **=** same as . but with radio tracks
- **0** show all (and radio tracks off)
- **1,2,3,4** Zoom/Pan to stored Views
- **7,8,9** use map type as configured
- **ESC** close menus

- **Cursor up/down/left/right** move map, same as click near margin
- **SHIFT with up/down/left/right/[zoom+]/[zoom-]** in smaller steps
- **DEL** delete selected (Symbol, Waypoint)
- **TAB** switch between two Views
- **ctrl-L** Reset Image and Mouse parameters to default
- **ctrl-V** Paste
-
- **==[[DXL - APRSmap Download | Download]]==**
- **[[Datei:Aprsmap-download.jpg | link=DXL - APRSmap Download]]**
-
- **[[DXL - APRSmap Download | APRSmap Download]] - For Windows, Linux and ARM (Raspberry Pi)**
-
- **==Further operation manual==**
- **more information is up to come**

Aktuelle Version vom 9. August 2020, 23:41 Uhr

<https://oe2wao.info>

DXL - APRSmap englisch und DXL - APRSmap: Unterschied zwischen den Seiten

VisuellWikitext

Version vom 14. August 2021, 01:31 Uhr
(**Quelltext anzeigen**)

OE2WAO ([Diskussion](#) | [Beiträge](#))

K

Markierung: **Visuelle Bearbeitung**

Aktuelle Version vom 9. April 2021, 09:08 Uhr
(**Quelltext anzeigen**)

OE2WAO ([Diskussion](#) | [Beiträge](#))

K

Markierung: **Visuelle Bearbeitung**

Zeile 1:

[[Kategorie:APRS]]

-

[[Datei:**Deutschland-flagge.gif** | link=DXL - APRSmap]] **Für die deutsche Version dieses Projekts** [[DXL - APRSmap | >>**hier klicken**<<]]

-

[[Datei:Aprsmap-download.jpg | link=DXL - APRSmap Download]]

APRSmap **is a new APRS client software by OE5DXL, which is based on the** [http://www.osm.org OSM] **map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!**

Zeile 1:

[[Kategorie:APRS]]

+

[[Kategorie:Digitaler Backbone]]

+

[[Datei:**Englisch.jpg** | link=DXL - APRSmap **englisch**]] **For english version on this project** [[DXL - APRSmap **englisch** | >>**click here**<<]]

+

[[Datei:Aprsmap-download.jpg | link=DXL - APRSmap Download]]

+

:<code>"**Aktuelle Programmversion v0.79**"</code>

+

==**Einleitung**==

+

APRSmap **ist ein von "OE5DXL Christian"** entwickelter, **<u>kostenloser</u> APRS Client mit grafischer Oberfläche, welcher als Basis das Kartenmaterial von** [http://www.osm.org OSM] **benutzt.**

[[Datei:Aprsmap.png]]	[[Datei:Aprsmap.png]]
-	
- A lot of documentation work will have to be done soon !!	
==Features==	==Features==
- *OpenSource and already compiled for windows and linux	+ *OpenSource und bereits fertig für Windows und Linux compiliert
- *100% compliance with the current APR S protocol specifications	+ *100% ige Einhaltung der aktuellen APR S Protokoll Vorgaben
- * No installation required, just copy and start	+ * Keine Installation erforderlich, nur kopieren und starten
- * No unnecessary menus, focus is on the representation	+ * Keine überflüssigen Menüs, Fokus auf der Darstellung
- *IP-based, out-of-the-box network-ready in HAMNET and Internet	+ *IP-basiert, somit out-of-the-box netzwerkfähig im HAMNET sowie Internet
- * Operations best controlled via shortcuts	+ * Bedienung idealerweise über Shortcuts
- * Local serial connection (TNC) possible - operating as an RF IGATE	+ * Lokale serielle Anbindung (TNC) möglich - Betrieb als HF IGATE
- * Several MapSources can be used. By default, this is OSM - OpenStreetMap	+ * Zur Darstellung können mehrere Mapsources verwendet werden. Standardmäßig ist dies OSM - OpenStreetMap
- * Downloading map source on demand	+ * Trackfilter für verzögert/verspätet/wiederholte Pakete "f"
- * Track filter for delayed / late / repeated packets "f"	+ * Geländeschnitt und Funkausbreitungsberechnung (ab v0.36) "R"
- * Radio propagation calculation (since v0.36) "R"	+ *Animation von Tracks mit Zeitleiste "a"
- *Animation of tracks with timeline "a"	+ *Animation der Temperaturverteilung "w"
- *Animation of the temperature distribution "w"	
*Messaging	*Messaging

		+	==[[DXL - APRSmap Bedienung Bedienung und Hilfe]]==
-	==Installation==	+	[[DXL - APRSmap Bedienung Bedienungsanleitung]] - Die Hilfe beim Umgang mit dem Programm
-	After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap. 		
-	No installation routine is required, just extract and run the aprsmap.exe		
		+	[[Datei:Aprsmap-1st-start.jpg link=DXL - APRSmap_Bedienung#Erste_Schritte]]
-	==First steps==	+	==[[DXL - APRSmap Download Download]]==
-	[[Datei:Aprsmap-1st-start.jpg]]	+	[[DXL - APRSmap Download APRSmap Download]] - Für Windows, Linux und ARM (Raspberry Pi)
-	On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.	+	[[Datei:Aprsmap-download.jpg link=DXL - APRSmap Download]]
-			
-	*First of all you put in your callsign (MY CALLSIGN) with optional SSID		
-	*Second step is to choose your desired APRS icon (MY SYMBOL)		

- *Next you will zoom to your OTH as far as you can, 100% identifying your home (zoom level >16). Then open **ONLINE - MY POSITION** and point to your home with the cursor. While push and hold the **SHIFT** key click on your home. The coordinates will be copied into the **MY POSITION** field. Just click **OK** to save them.

- *Now you can set the **SERVER URL** by just inserting your favorite **APRS IS**. Click **ADD** to save this entry.

- for example:

- **aprs.oe2xzt.ampr.at** (APRS IS connection via HAMNET)

- **austria.aprs2.net** (APRS IS connection via Internet)

- *You also need to enter a valid **APRS PASSCODE** to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on **APRS PASSCODE** to find a possibility on getting your code.

- *Last but not least you have to activate **CONNECT SERVER** to get data from an to the APRS network.

- **===Shortcuts===**

- **: delete markers**

- **@ reset <On Next Click> to menu mode**

- **a Animate (Click to Map to set Parameters)**

- **b or <Backspace> go back in position history**

==Referenz==

Das Programm APRSmap wurde für den ÖVSV Innovationspreis 2013 nominiert.

==Weitere Projekte==

Weiter passende Projekte von OE5DXL aus dieser Serie sind

- **c** Center (to last clicked Pixel)
- **d** toggle (missing) map download
- **e** toggle Errors only/All for stepping along a track with <>
- **f** Junk Filter toggle on/off
- **h** Heard (click symbol or text ofigate before)
- **i** Internal Status Listing
- **l** toggle Labels on/off
- **m** toggle dimm not moving since 10min
- **o** toggle Objects/Items on/off
- **p** toggle mouse-over Hints
- **q** Quit Program
- **r** toggle Radio tracks on/off
- **s** toggle show only stations with a selected symbol
- **u** toggle tx/rx-Monitor window on/off
- **w** toggle WX stations and Temperature
- **x** set Marker 1 to mouse position
- **y** set Marker 2 and Line to Marker 1
- **B** Open Beacon editor
- **C** Enter Category of POI to be drawn on map
- **D** Digi Config open/close
- **F** Find Call (with wildcards * ?), Locator, Latitude/Longitude
- **H** Altitude Colour Map (if srtm-Data available)
- **M** Compose Message
- **R** toggle Radiorange Map on/off
- **T** toggle Timestamp

- **S** Screenshot bpm (win), png (linux)
- **W** Rain map (use topo or dark map)
- **< >** Step along Beacons/Waypoints of a selected User
- **()** Map Brightness +- 5%
- **/** zoom to Marker 1-2 Square
- **** shortcut list
- **~** change track colour
- **+** Zoom in - Zoom out
- **.** zoom to track and show only this (clicked before)
- **=** same as . but with radio tracks
- **0** show all (and radio tracks off)
- **1,2,3,4** Zoom/Pan to stored Views
- **7,8,9** use map type as configured
- **ESC** close menus
- **Cursor up/down/left/right** move map, same as click near margin
- **SHIFT with up/down/left/right/[zoom+]/[zoom-]** in smaller steps
- **DEL** delete selected (Symbol, Waypoint)
- **TAB** switch between two Views
- **ctrl-L** Reset Image and Mouse parameters to default
- **ctrl-V** Paste
-
- **==[[DXL - APRSmap Download | Download]]==**
- **[[Datei:Aprsmap-download.jpg | link=DXL - APRSmap Download]]**

– **[[DXL - APRSmap Download | APRSmap Download]] - For Windows, Linux and ARM (Raspberry Pi)**

+

***[[DXL - APRStracker]] - Hard- und Software für einen minimalistischen APRS Tracker**

+

***[[TCE Tynvcore Linux Projekt]] - Der mächtige und innovative Digipeater für APRS, Packet Radio, Echolink, u.v. m.**

– **==Further operation manual==**

+

==Weblinks==

– **more information is up to come**

+

Kurzlink hier her: <http://aprsmap.oevsv.at>

Aktuelle Version vom 9. April 2021, 09:08 Uhr



For english version on this project >>[click here](#)<<



APRSmap Download

 
Aktuelle Programmversion v0.79

Inhaltsverzeichnis

1 Einleitung	20
2 Features	20
3 Bedienung und Hilfe	21
4 Download	21
5 Referenz	21
6 Weitere Projekte	21
7 Weblinks	21

Einleitung

APRSmap ist ein von **OE5DXL Christian** entwickelter, kostenloser APRS Client mit grafischer Oberfläche, welcher als Basis das Kartenmaterial von **OSM** benutzt.

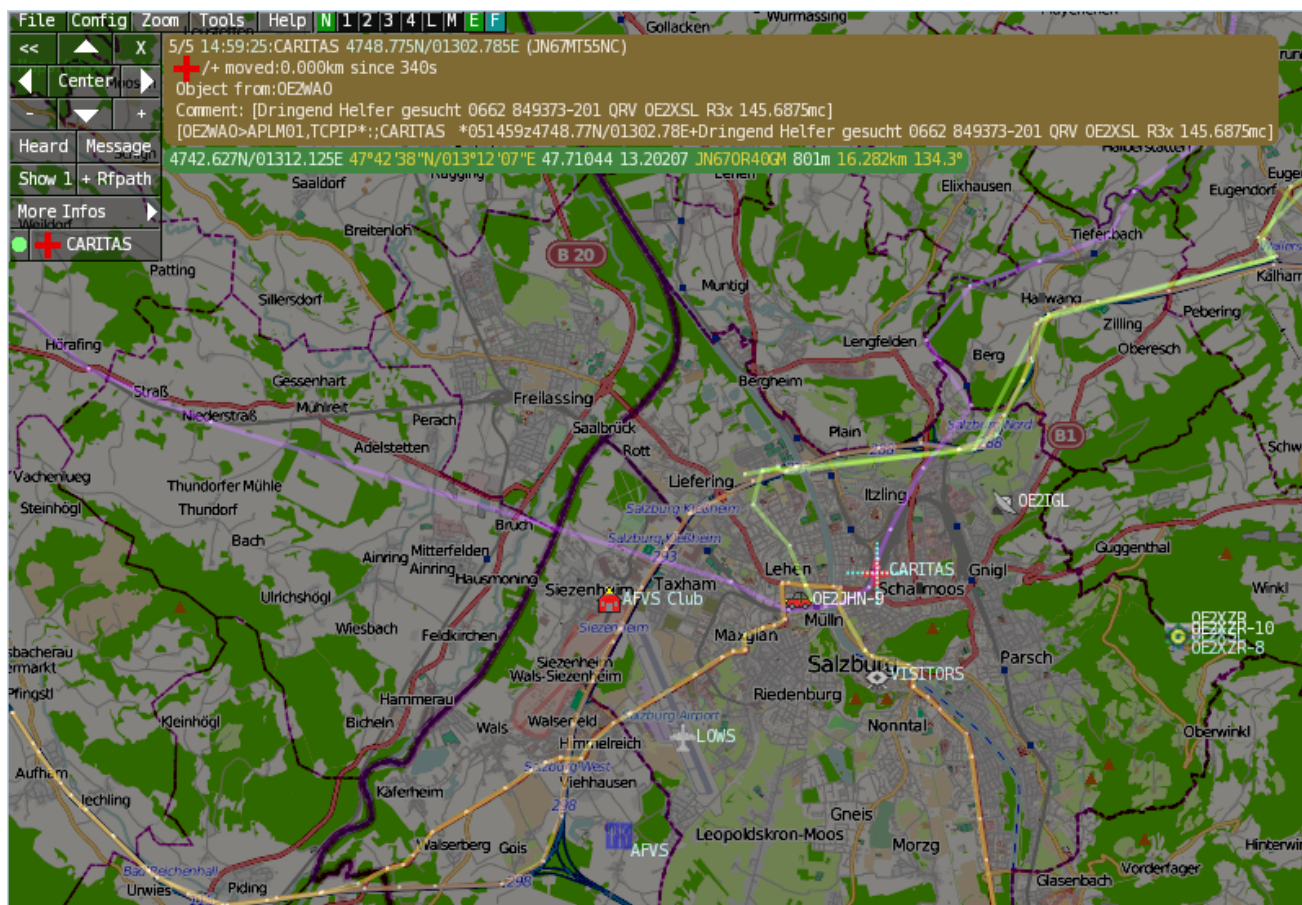

Features

- OpenSource und bereits fertig für Windows und Linux compiliert
- 100%ige Einhaltung der aktuellen APRS Protokoll Vorgaben
- Keine Installation erforderlich, nur kopieren und starten
- Keine überflüssigen Menüs, Fokus auf der Darstellung
- IP-basiert, somit out-of-the-box netzwerkfähig im HAMNET sowie Internet
- Bedienung idealerweise über Shortcuts
- Lokale serielle Anbindung (TNC) möglich - Betrieb als HF IGATE
- Zur Darstellung können mehrere Mapsources verwendet werden. Standardmäßig ist dies OSM - OpenStreetMap
- Trackfilter für verzögert/verspätet/wiederholte Pakete "f"
- Geländeschnitt und Funkausbreitungsberechnung (ab v0.36) "R"
- Animation von Tracks mit Zeitleiste "a"
- Animation der Temperaturverteilung "w"
- Messaging

 
Bedienung und Hilfe

[Bedienungsanleitung](#) - Die Hilfe beim Umgang mit dem Programm



Download

[APRSmap Download](#) - Für Windows, Linux und ARM (Raspberry Pi)



Referenz

Das Programm APRSmap wurde für den ÖVSV Innovationspreis 2013 nominiert.

Weitere Projekte

Weiter passende Projekte von OE5DXL aus dieser Serie sind

- [DXL - APRStracker](#) - Hard- und Software für einen minimalistischen APRS Tracker
- [TCE Tinycore Linux Projekt](#) - Der mächtige und innovative Digipeater für APRS, Packet Radio, Echolink, u.v.m.

Weblinks

Kurzlink hier her: <http://aprsmap.oevsv.at>

DXL - APRSmap englisch und DXL - APRSmap Download: Unterschied zwischen den Seiten

VisuellWikitext

Version vom 14. August 2021, 01:31 Uhr
([Quelltext anzeigen](#))

[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))

K

Markierung: [Visuelle Bearbeitung](#)

Aktuelle Version vom 2. Januar 2023, 13:16 Uhr ([Quelltext anzeigen](#))

[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))

(SRTM Info hinzugefügt)

Markierung: [Visuelle Bearbeitung](#)

Zeile 1:

[[Kategorie:APRS]]

Zeile 1:

[[Kategorie:APRS]]

+

**D: Die Software gibt es je in einer Linux- und einer Windowsversion, sowie den Sourcecode zum selbst compilieren.
**

+

Dabei benötigt APRSmap keine Installationroutine. Die Dateien im Archiv müssen lediglich entpackt und lokal gespeichert werden (bspw. unter C:\APRSmap).

-

[[Datei:Deutschland-flagge.gif | link=DXL - APRSmap]] **Für die deutsche Version dieses Projekts**
[[DXL - APRSmap | >>hier klicken<<]]

+

**"E: The software is available for OS like WINDOWS, LINUX and systems based on ARM structures like raspberry pi."
**

+

"There is no installation routine. Just download the archive and save the files locally on your hard disc or removable drive" (e.g. under C:\APRSmap)"."

-

[[Datei:Aprsmap-download.jpg | link=DXL - APRSmap Download]]

+

[[Datei:Aprsmap-1st-start.jpg | link=DXL - APRSmap_Bedienung#Erste_Schritte]]

- **APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!**

- **[[Datei:Aprsmap.png]]**

+

==Windows==

+

D: Die Dateien aus dem heruntergeladenen Archiv werden lokal in den Unterordner /APRSMAP (muss selbst angelegt werden) entpackt bzw. gespeichert.

- **A lot of documentation work will have to be done soon !!**

+

"E: The files from the downloaded archive are unpacked and saved locally in the subfolder /APRSMAP (must be created yourself)."

- **==Features==**

+

***[[Datei:Aprsmap-download-win-inet.jpg|link=https://wiki.oevsv.at/w/nsfr:img:auth.php/b/bd/Aprsmap-all.zip]] >> "[[Medium:Aprsmap-all.zip|APRSmap Download via Wiki]]" << (Detail Version [[Datei:Aprsmap-all.zip]])**

- ***OpenSource and already compiled for windows and linux**

- ***100% compliance with the current APRS protocol specifications**

- ***No installation required, just copy and start**

- ***No unnecessary menus, focus is on the representation**

- ***IP-based, out-of-the-box network-ready in HAMNET and Internet**

- *Operations best controlled via shortcuts
- *Local serial connection (TNC) possible - operating as an RF IGATE
- *Several MapSources can be used. By default, this is OSM - OpenStreetMap
- *Downloading map source on demand
- *Track filter for delayed / late / repeated packets "f"
- *Radio propagation calculation (since v0.36) "R"
- *Animation of tracks with timeline "a"
- *Animation of the temperature distribution "w"
- *Messaging

*[[Datei:Aprsmap-download-win-hamnet.jpg | link=http://oe5dxl.ampr.at]] APRSmap Download via HAMNET mit aktuellen Updates "(HAMNET-Verbindung erforderlich - HAMNET connection required)"

- ==Installation==
- After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap.

- No installation routine is required, just extract and run the aprsmap.exe

""Win32 Dateiliste""

- ==First steps==

Übersicht der [[APRSmap-Dateien]] unter Win32 Betriebssystemen.

- [[Datei:Aprsmap-1st-start.jpg]]

-	On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.	+	==Linux==
		+	===HAMNET===
-	*First of all you put in your callsign (MY CALLSIGN) with optional SSID	+	*[http://oe5dxl.ampr.at] - x86 (mit aktuellen Updates)
-	*Second step is to choose your desired APRS icon (MY SYMBOL)		
-	*Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.		
-	*Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.		
-	for example:	+	===Internet===
-	aprs.oe2xzt.ampr.at (APRS IS connection via HAMNET)	+	komplette dxlAPRS Toolchain fertig compiliert für folgende Systeme:
-	austria.aprs2.net (APRS IS connection via Internet)		
-	*You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.	+	*[https://github.com/oe5hpm/dxlAPRS] - Sourcecode

-	*Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.	+	*[http://dxlaprs.hamspirit.at/dxlaprs_x86-current.tgz] - x86
		+	*[http://dxlaprs.hamspirit.at/dxlaprs_armv7hf-current.tgz] - ARMv7hf (Cortex-A8, AM335x, BeagleBone, ...)
		+	*[http://dxlaprs.hamspirit.at/dxlaprs_armv6-current.tgz] - ARMv6 (Raspberry Pi)
-	===Shortcuts===	+	==ARM - Raspberry Pi==
-	: delete markers	+	[[aprsDXL auf ARM resp. Raspberry Pi]
-	@ reset <On Next Click> to menu mode		
-	a Animate (Click to Map to set Parameters)		
-	b or <Backspace> go back in position history		
-	c Center (to last clicked Pixel)		
-	d toggle (missing) map download		
-	e toggle Errors only/All for stepping along a track with <>		
-	f Junk Filter toggle on/off		
-	h Heard (click symbol or text ofigate before)		
-	i Internal Status Listing		
-	l toggle Labels on/off		
-	m toggle dimm not moving since 10min		
-	o toggle Objects/Items on/off		
-	p toggle mouse-over Hints		
-	q Quit Program		
-	r toggle Radio tracks on/off		

- **s** toggle show only stations with a selected symbol
- **u** toggle tx/rx-Monitor window on/off
- **w** toggle WX stations and Temperature
- **x** set Marker 1 to mouse position
- **y** set Marker 2 and Line to Marker 1
- **B** Open Beacon editor
- **C** Enter Category of POI to be drawn on map
- **D** Digi Config open/close
- **F** Find Call (with wildcards * ?), Locator, Latitude/Longitude
- **H** Altitude Colour Map (if srtm-Data available)
- **M** Compose Message
- **R** toggle Radiorange Map on/off
- **T** toggle Timestamp
- **S** Screenshot bpm (win), png (linux)
- **W** Rain map (use topo or dark map)
- **< >** Step along Beacons/Waypoints of a selected User
- **()** Map Brightness +- 5%
- **/** zoom to Marker 1-2 Square
- **** shortcut list
- **~** change track colour
- **+** Zoom in - Zoom out
- **.** zoom to track and show only this (clicked before)
- **=** same as . but with radio tracks
- **0** show all (and radio tracks off)
- **1,2,3,4** Zoom/Pan to stored Views

– 7,8,9 use map type as configured

– ESC close menus

– Cursor up/down/left/right move map, same as click near margin

– SHIFT with up/down/left/right/[zoom+]/[zoom-] in smaller steps

– DEL delete selected (Symbol, Waypoint)

– TAB switch between two Views

– ctrl-L Reset Image and Mouse parameters to default

– ctrl-V Paste

– ==[[DXL - APRSmap Download | Download]]==

– [[Datei:Aprsmap-download.jpg | link=DXL - APRSmap Download]]

– [[DXL - APRSmap Download | APRSmap Download]] - For Windows, Linux and ARM (Raspberry Pi)

– ==Further operation manual==

– more information is up to come

==POI Files==

+ D: Österreichische POI (point of interest) Dateien für APRSmap.

+ "E: Austrian POI (point of interest) files for use in APRSmap."

+ [[Medium:APRSmap-poi.zip| APRSmap POI Download]]

+ ==Source Code==

+ Die Sourcen vom dxiAPRS-Projekt sind auf Github veröffentlicht.

+ Aus diesen kann derzeit für folgende Plattformen gebaut werden:

- +
- +
- +
- +
- +
- +
- +
- +
- +
- +
- +
- +
- +
- +
- +

- + http://web.oe2xzt.ampr.org/download/?dir=Digital_modes/APRS
- +
- +
- +
- + [\[\[DXL - APRSmap | << Zurück zur DXL-APRSmap Übersicht\]\]](#)

Aktuelle Version vom 2. Januar 2023, 13:16 Uhr

D: Die Software gibt es je in einer Linux- und einer Windowsversion, sowie den Sourcecode zum selbst compilieren.

Dabei benötigt APRSmap keine Installationroutine. Die Dateien im Archiv müssen lediglich entpackt und lokal gespeichert werden (bspw. unter C:\APRSmap).

E: The software is available for OS like WINDOWS, LINUX and systems based on ARM structures like raspberry pi.

There is no installation routine. Just download the archive and save the files locally on your hard disc or removable drive (e.g. under C:\APRSmap).

APRSmap 1st Start

Inhaltsverzeichnis

1 Windows	31
2 Linux	31
2.1 HAMNET	31
2.2 Internet	31
3 ARM - Raspberry Pi	31
4 POI Files	31
5 Source Code	32
6 Release Notes	32
7 SRTM Höhendaten zur Funkausbreitungs- und Wegstreckenberechnung	32

Windows

D: Die Dateien aus dem heruntergeladenen Archiv werden lokal in den Unterordner /APRSMAP (muss selbst angelegt werden) entpackt bzw. gespeichert.

E: The files from the downloaded archive are unpacked and saved locally in the subfolder /APRSMAP (must be created yourself).

-  **Download via Internet** >> [APRSmapi Download via Wiki](#) << (Detail
Version [Datei:Aprsmap-all.zip](#))
-  **Download via HAMNET** APRSmapi Download via HAMNET mit aktuellen Updates (*HAMNET-Verbindung erforderlich - HAMNET connection required*)

Win32 Dateiliste

Übersicht der [APRSmapi-Dateien](#) unter Win32 Betriebssystemen.

Linux

HAMNET

- [\[1\]](#) - x86 (mit aktuellen Updates)

Internet

komplette dxlAPRS Toolchain fertig compiliert für folgende Systeme:

- [\[2\]](#) - Sourcecode
- [\[3\]](#) - x86
- [\[4\]](#) - ARMv7hf (Cortex-A8, AM335x, BeagleBone, ...)
- [\[5\]](#) - ARMv6 (Raspberry Pi)

ARM - Raspberry Pi

[aprsDXL auf ARM resp. Raspberry Pi](#)

POI Files

D: Österreichische POI (point of interest) Dateien für APRSmap.

E: Austrian POI (point of interest) files for use in APRSmap.

[APRSmapi POI Download](#)

Source Code

Die Sourcen vom dxlAPRS-Projekt sind auf Github veröffentlicht. Aus diesen kann derzeit für folgende Plattformen gebaut werden:

- x86
- armv6 (Raspberry Pi)
- armv7 (bur am335x pp, Beaglebone, ...)

<https://github.com/oe5hpm/dxlAPRS>

Release Notes

[APRSmap Release notes](#)

SRTM Höhendaten zur Funkausbreitungs- und Wegstreckenberechnung

D: Um die Funktion "Radiolink" verwenden zu können, sind zur Berechnung der Geländegegebenheiten exakte Höhendaten erforderlich. Diese werden im entsprechenden \OSM Subordner des APRSmap Arbeitsverzeichnisses abgelegt. APRSmap selbst benutzt dabei jeweils die zur Verfügung stehenden Daten mit der höchsten Auflösung. Die Daten sind ausschließlich im HAMNET zu finden unter:

E: In order to be able to use the "Radiolink" function, exact elevation data is required to calculate the terrain conditions. These are stored in the corresponding \OSM subfolder of the APRSmap working directory. APRSmap itself uses the available data with the highest resolution. The data can only be found in HAMNET at:

http://web.oe2xzt.ampr.org/download/?dir=Digital_modes/APRS

[<< Zurück zur DXL-APRSmap Übersicht](#)

DXL - APRSmap englisch: Unterschied zwischen den Versionen

Versionsgeschichte interaktiv durchsuchen

Visuell Wikitext

Version vom 14. August 2021, 01:31 Uhr

([Quelltext anzeigen](#))

OE2WAO ([Diskussion](#) | [Beiträge](#))

K

Markierung: [Visuelle Bearbeitung](#)

[← Zum vorherigen Versionsunterschied](#)

Aktuelle Version vom 14. August 2021,

14:53 Uhr ([Quelltext anzeigen](#))

OE2WAO ([Diskussion](#) | [Beiträge](#))

K

Markierung: [Visuelle Bearbeitung](#)


(2 dazwischenliegende Versionen desselben Benutzers werden nicht angezeigt)

Zeile 34:	Zeile 34:
- ==First steps==	+ ==Operation manual and help==
	+ [[DXL - APRSmap operating >> Operating instructions]] - the help in handling the program
	+
	+
	+
[[Datei:Aprsmap-1st-start.jpg]]	[[Datei:Aprsmap-1st-start.jpg]]
Zeile 52:	Zeile 56:
===Shortcuts===	===Shortcuts===
- : delete markers	+ <nowiki>:</nowiki> delete markers
@ reset <On Next Click> to menu mode	@ reset <On Next Click> to menu mode
a Animate (Click to Map to set Parameters)	a Animate (Click to Map to set Parameters)


Aktuelle Version vom 14. August 2021, 14:53 Uhr



 Für die deutsche Version dieses Projekts [>>hier klicken<<](#)



 APRSmap is a new APRS client software by OE5DXL, which is based on the [OSM](#) map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk and start it!

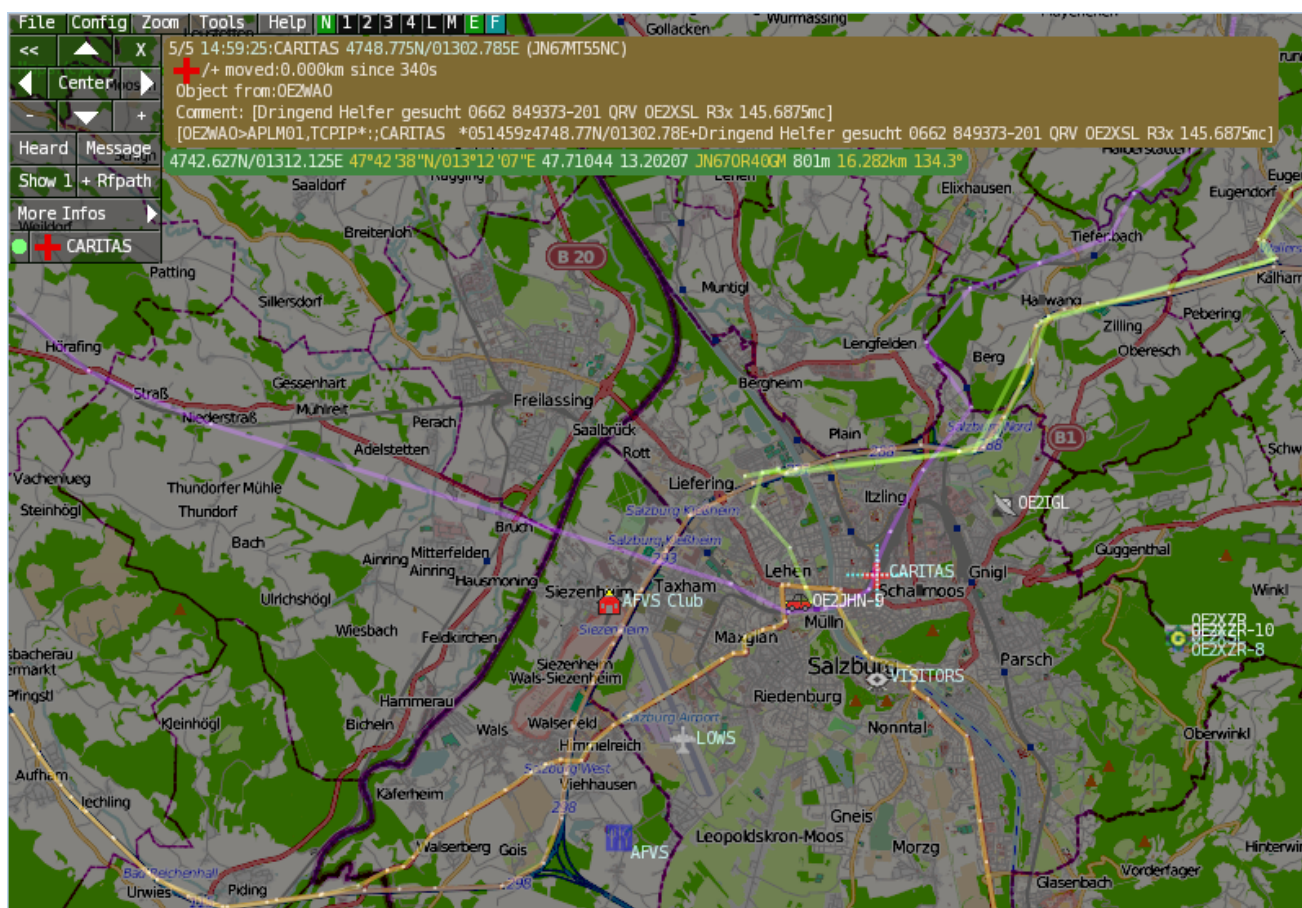

A lot of documentation work will have to be done soon !!

Inhaltsverzeichnis

1 Features	35
2 Installation	35
3 Operation manual and help	35
3.1 Shortcuts	36
4 Download	37
5 Further operation manual	37

Features

- OpenSource and already compiled for windows and linux
- 100% compliance with the current APRS protocol specifications
- No installation required, just copy and start
- No unnecessary menus, focus is on the representation
- IP-based, out-of-the-box network-ready in HAMNET and Internet
- Operations best controlled via shortcuts
- Local serial connection (TNC) possible - operating as an RF IGATE
- Several MapSources can be used. By default, this is OSM - OpenStreetMap
- Downloading map source on demand
- Track filter for delayed / late / repeated packets "f"
- Radio propagation calculation (since v0.36) "R"
- Animation of tracks with timeline "a"
- Animation of the temperature distribution "w"
- Messaging

Installation

After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap.

No installation routine is required, just extract and run the aprsmap.exe

Operation manual and help

>> [Operating instructions](#) - the help in handling the program

APRSmap 1st Start

On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.

- First of all you put in your callsign (MY CALLSIGN) with optional SSID
- Second step is to choose your desired APRS icon (MY SYMBOL)
- Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.
- Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.

for example:
 aprs.oe2xzt.ampr.at (APRS IS connection via HAMNET)
 austria.aprs2.net (APRS IS connection via Internet)

 
- You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.
- Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.

Shortcuts

```
: delete markers
@ reset <On Next Click> to menu mode
a Animate (Click to Map to set Parameters)
b or <Backspace> go back in position history
c Center (to last clicked Pixel)
d toggle (missing) map download
e toggle Errors only/All for stepping along a track with <>
f Junk Filter toggle on/off
h Heard (click symbol or text of igate before)
i Internal Status Listing
l toggle Labels on/off
m toggle dimm not moving since 10min
o toggle Objects/Items on/off
p toggle mouse-over Hints
q Quit Program
r toggle Radio tracks on/off
s toggle show only stations with a selected symbol
u toggle tx/rx-Monitor window on/off
w toggle WX stations and Temperature
x set Marker 1 to mouse position
y set Marker 2 and Line to Marker 1
B Open Beacon editor
C Enter Category of POI to be drawn on map
D Digi Config open/close
F Find Call (with wildcards * ?), Locator, Latitude/Longitude
H Altitude Colour Map (if srtm-Data available)
M Compose Message
R toggle Radiorange Map on/off
T toggle Timestamp
S Screenshot bpm (win), png (linux)
W Rain map (use topo or dark map)
< > Step along Beacons/Waypoints of a selected User
( ) Map Brightness +/- 5%
/ zoom to Marker 1-2 Square
\ shortcut list
~ change track colour
+ Zoom in - Zoom out
. zoom to track and show only this (clicked before)
= same as . but with radio tracks
0 show all (and radio tracks off)
1,2,3,4 Zoom/Pan to stored Views
7,8,9 use map type as configured
ESC close menus
```

```
Cursor up/down/left/right  move map, same as click near margin
SHIFT with up/down/left/right/[zoom+]/[zoom-]  in smaller steps
DEL    delete selected (Symbol, Waypoint)
TAB    switch between two Views
ctrl-L  Reset Image and Mouse parameters to default
ctrl-V  Paste
```

Download



[APRSmap Download](#) - For Windows, Linux and ARM (Raspberry Pi)

Further operation manual

more information is up to come

DXL - APRSmap englisch und DXL - APRSmap operating: Unterschied zwischen den Seiten

VisuellWikitext

Version vom 14. August 2021, 01:31 Uhr

([Quelltext anzeigen](#))

[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))

K

Markierung: [Visuelle Bearbeitung](#)

Aktuelle Version vom 14. August 2021,
14:49 Uhr ([Quelltext anzeigen](#))

[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))

Markierung: 2017-Quelltext-Bearbeitung

Zeile 1:

[[Kategorie:APRS]]

-

[[Datei:Deutschland-flagge.qif | link=DXL - APRSmap]] Für die deutsche Version dieses Projekts [[DXL - APRSmap | >>hier klicken<<]]

-

[[Datei:Aprsmap-download.jpg | link=DXL - APRSmap Download]]

-

APRSmap is a new APRS client software by OE5DXL, which is based on the [http://www.osm.org OSM] map source. It allows a lot of features in only one program by a good usability. NO installation is required, just put it on a disk an start it!

-

[[Datei:Aprsmap.png]]

-

A lot of documentation work will have to be done soon !!

Zeile 1:

[[Kategorie:APRS]]

+

==Program start==

+

After downloading and saving locally, the "'aprsmmap.exe"' program can be started. A separate installation is not required.

+

==Operation==

+

===First steps===

-
- **==Features==**
-
- ***OpenSource and already compiled for windows and linux**
- ***100% compliance with the current APRS protocol specifications**
- ***No installation required, just copy and start**
- ***No unnecessary menus, focus is on the representation**
- ***IP-based, out-of-the-box network-ready in HAMNET and Internet**
- ***Operations best controlled via shortcuts**
- ***Local serial connection (TNC) possible - operating as an RF IGATE**
- ***Several MapSources can be used. By default, this is OSM - OpenStreetMap**
- ***Downloading map source on demand**
- ***Track filter for delayed / late / repeated packets "f"**
- ***Radio propagation calculation (since v0.36) "R"**
- ***Animation of tracks with timeline "a"**
- ***Animation of the temperature distribution "w"**
- ***Messaging**
-
-
- **==Installation==**
- **After downloading the program you only have to extract the files into a subfolder of your program files folder, e.g. /APRSmap.
**

– **No installation routine is required, just extract and run the aprsmap.exe**

–

–

– **==First steps==**

[[Datei:Aprsmap-1st-start.jpg]]

Zeile 52:

===Shortcuts===

– : delete markers

@ reset <On Next Click> to menu mode

a Animate (Click to Map to set Parameters)

Zeile 102:

ctrl-V Paste

– **==[[DXL - APRSmap Download | Download]]==**

– **[[Datei:Aprsmap-download.jpg | link=DXL - APRSmap Download]]**

[[Datei:Aprsmap-1st-start.jpg]]

Zeile 24:

===Shortcuts===

+ **Note, shortcut keys are case sensitive!**

+ **<nowiki>:</nowiki>** delete markers

@ reset <On Next Click> to menu mode

a Animate (Click to Map to set Parameters)

Zeile 75:

ctrl-V Paste

===Tips & tricks===

+ ***Animation: Click on the track of a moving object (e.g. car) and press the "a" key**

+ ***Temperature distribution: Two times "w" (w + w) shows a color distribution of the reported temperatures (sensible min. Zoom level 10 or less)**

+ ***The "0" (zero), ESC and ":" keys often help if you want to have everything displayed again after clicking on the filter or similar.**

+ ***"TAB" key toggles between two independent displays, similar to VFO "A" and "B".**

+

+

+ **==Menus==**

+ **[[Datei:Aprsmap-conf-online.PNG]]**

+

+ **In addition to the main menus explained in more detail below, the menu offers further short menus on the right.**

+ **N Display or switching of the network status, green means connected, orange means not connected or connection problems. If the mouse pointer is moved over the menu, the connection status appears in the popup**

+ **1-4....Display or switch the UDP port connections**

+ **L display the log file data**

+ **M View the saved messages**

+ **F display or switching of the track filter (incorrect or implausible position packages)**

+ **O display or switch the display of pure objects**

+ **By the way, the mouse position display (green bar with coordinates) can be activated in the CONFIG> MAP PARAMETER> SHOW LOC OF MOUSE menu.**

+

+ **===File===**

+ **====Import Log=====**

+ **Import a complete logfile.**

- +
- + **====Screenshot=====**
- + **Save a screenshot in your local user directory, e.g. map1.bmp (Win10 user directories are in the User\AppData folder e.g. C:\Users\User\AppData\Local\VirtualStore\Program Files (x86)\APRSmap)**
- +
- + **====Make Video=====**
- + **Save a video from e.g. a moving object in .y4m raw video format.**
- +
- + **====Write Log=====**
- + **Choose the logfile directory.**
- +
- + **====Keep Log Days=====**
- + **Define the ammount of days logs are kept.**
- +
- + **====Quit=====**
- + **Exit APRSmap, shortcut key is q.**
- +
- + **====Config=====**
- + **====Brightness=====**
- + **Setting the respective brightness, times and colors.**
- + **Time Fade Out - time until the display of stations disappears after the time for display (full brightness) has expired**
- + **Time full Bright - time to display received positions**

- + **Brightness Wavpoint - Brightness of the waypoint points**
- + **Brightness Text - Brightness of the station texts**
- + **Brightness Symbol - the brightness of the symbols displayed**
- + **Gamma - Gamma value setting of the card**
- + **Brightness Track - the brightness of the route**
- + **Brightness Map - the brightness of the map**
- + **Brightness Object - the brightness of the objects displayed**
- +
- + **====Online====**
- + **The ONLINE area is initially the most important and necessary menu item, which has to be configured individually.**
- + **<u>Basically, when the program is simply started and a data connection is established, other stations can be receive even without specifying your own callsign, position or APRS passcode (RX only mode)</u>.**
- + **However, in order to act "actively" in the APRS network and to be seen and reached by other stations, this information must be entered accordingly. The "APRS PASScode" must be requested once. To do this, search for ""APRS PASSCODE Generator"" on the Internet.**
- +
- + **=====My Call=====**
- + **Here you enter the callsign to be used, optionally with SSID.**

- + **(without SSID) Your primary station usually fixed and message capable**
- + **-1 generic additional station, digi, mobile, wx, etc**
- + **-2 generic additional station, digi, mobile, wx, etc**
- + **-3 generic additional station, digi, mobile, wx, etc**
- + **-4 generic additional station, digi, mobile, wx, etc**
- + **-5 Other networks (Dstar, Iphones, Androids, Blackberry's etc)**
- + **-6 Special activity, Satellite ops, camping or 6 meters, etc**
- + **-7 walkie talkies, HT's or other human portable**
- + **-8 boats, sailboats, RV's or second main mobile**
- + **-9 Primary Mobile (usually message capable)**
- + **-10 internet, Iqates, echolink, winlink, AVRS, APRN, etc**
- + **-11 balloons, aircraft, spacecraft, etc**
- + **-12 APRStt, DTMF, RFID, devices, one-way trackers*, etc**
- + **-13 Weather stations**
- + **-14 Truckers or generally full time drivers**
- + **-15 generic additional station, digi, mobile, wx, etc**
- + *** One-way trackers should best use the -12 one-way SSID indicator because the -9's usually mean a ham in full APRS communication both message and voice.**

- + **The -9's can be contacted by APRS message or by Voice on his frequency included in his beacon, or on Voice Alert if he is in simplex range.**
- + **The -12's are just moving Icons on the map and since they have no 2 way communication for ham radio they are not generally of routine interest to other operators.**
- + **=====My Symbol=====**
- + **Self-explanatory**
- + **=====My Position=====**
- + **In order to enter your own position in MY POSITION quickly and without any major search effort, simply go first with the zoom into the MAP (preferably ZOOMLEVEL 17) so that you can clearly see your own position. Then open the CONFIG - ONLINE - MY POSITION item and click the SHIFT key to determine your own position. The coordinates are automatically adopted in the context menu and only need to be confirmed with OK.**
- + **=====Netbeacontext=====**
- + **The text set here is sent as beacon text via the network connection.**
- + **=====Passcode=====**
- + **An APRS PASSCODE is not absolutely necessary for RX, but this code is essential for sending your own data. You can apply for this code online with a waiting period, simply search for APRS IS PASSCODE using the search engine.**

- + **=====Server URL=====**
- + **Any APRS server that provides the data in the correct format can be entered as the server URL.**
- + **for example:**
- + **aprs.oe2xzt.ampr.at (for connections via HAMNET)**
- + **austria.aprs2.net (for connections via Internet)**
- + **Another list can be found at <http://www.aprs2.net/serverstats.php>.**
- +
- + **The standard port is 14580 and does not have to be specified.**
- + **Alternative ports are given after the address:**
- + **aprs.server.com:12345**
- +
- + **=====Serverfilter=====**
- + **Suggestion: " 'm / 100 p / OE -t / t' "**
- +
- + **The position filter is structured as follows [Position] / [Radius] eq " 'm / 100' " for displaying data with a radius of 100km around your own position.**
- +
- + **" 'P / OE' " is used to display all OE stations (e.g. mobile) outside the defined radius filter .**
- +
- + **And the mostly unnecessary telemetry traffic is filtered with " '-t / t' ".**
- +

- + **"TIP"**
- +
- + settings relating to the server are only adopted when a new connection is made, for this the server connection can either be disconnected and re-established in the menu bar under "N", or the corresponding server entry can be deactivated and activated under "Config"> "Online"> "Connect Server".
- + **
**
- +
- + **====Connect Server====**
- + **Activates or deactivates the online connection.**
- +
- + **====Allow TX to NET====**
- + **Activates or deactivates the sending of (own) data to the online network.**
- +
- + **====Allow Gate RF>NET====**
- + **Activates or deactivates the forwarding of APRS data heard locally via HF in the online network.**
- +
- + **====RF-Ports====**
- +
- + **====Timers====**
- +
- + **====Map Parameter====**
- +
- + **====Show Loc of Mouse====**

+ **Activates / deactivates the display of the coordinates, height and distance of the mouse pointer on the map.**

+

+ **=====Trackfilter=====**

+ **Activates / deactivates the intelligent filter function for incorrect or implausible position data (e.g. long lines across the APRS map; chopping or zik-zak in the track as if the route was driven several times - wheel cap lost - caused by a massive delay from Digis delivered packages)**

+

+ **=====Show Scaler=====**

+

+ **=====Show Windvane=====**

+ **Activates / deactivates the display of the wind vane at weather stations if this value was supplied.**

+

+ **=====Show Temp=====**

+ **Activates / deactivates the display of the temperature value at weather stations if this has been delivered.**

+

+ **=====Load Map Program=====**

+ **Deactivates / activates the card loader. Optionally, the loading program can be selected by clicking on the menu, optionally**

+ **getosm "(standard, activates the external program getosm.exe from OE5KRN) " ""* recommended"**

+

start sh map.sh "(loading maps in the background)"

+	sh qm.sh "(for map download from the Internet)"	
+	sh qm-hamnet.sh "(for" map download "from HAMNET)"	
+		
+	=====km/h Text=====	
+	Freely selectable text of the unit for displaying the speed of moving stations. Default "km / h", can be shortened to "km", for example, to save space.	
+	=====Show Altitude min m=====	
+		
+	=====Brightness Notmover=====	
+		
+	=====Reset to Default=====	
+		
+	=====Map Moving=====	
+		
+	=====Colours, Font=====	
+		
+	=====Callfilters=====	
+		
+	=====Watch Calls=====	
+		
+	=====Reload Config=====	
+		
+	=====Save Config=====	
+		
+	=====Zoom=====	
+		
+	=====Tools=====	

+	====Toolbar Off====	
+	Deactivates the permanently displayed toolbar. The toolbar can then be opened dynamically with a click on the map.	
+	====On next Click====	
+		
+	====List====	
+		
+	====Choose Maps====	
+		
+	====Reload====	
+		
+	====Download====	
+		
+	====tiles_quest====	
+		
+	====tiles_sat====	
+		
+	====tiles_cyclemap [9]====	
+		
+	====tiles_topo [8]====	
+		
+	====tiles [7]====	
+		
+	====Find====	
+		
+	====Radiolink====	
+		
+	====Select Data====	
+	====Symbol====	

+ When the display is activated (marked by * next to SYMBOL) only the selected symbols are displayed. These can be switched on / off by clicking on the respective symbols (multiple selection possible). The entire function can be switched on / off by clicking on the wording SYMBOL.

+ =====Dimm Notmover=====

+ With the on / off switch, it clearly dims the stationary stations and objects in relation to, for example, mobile stations.

+

+ =====Rain Colourmap=====

+

+ =====Temp Colourmap=====

+ Shows a temperature distribution (similar to an isobar map). Shortcut 2x "w". Exit the Colourmap view with ESC or key w again

+

+ =====WX Stations=====

+

+ =====Show POI=====

+

+ =====Show All=====

+

+ =====Add Maptypes=====

+

+ =====Map directory=====

+

+ =====Send Message=====

+ Opens the message context menu

Aktuelle Version vom 14. August 2021, 14:49 Uhr

1 Program start	55
2 Operation	55
2.1 First steps	55
2.2 Shortcuts	55
2.3 Tips & tricks	56

3	Menu	57
3.1	File	57
3.1.1	Import Log	57
3.1.2	Screenshot	57
3.1.3	Make Video	57
3.1.4	Write Log	57
3.1.5	Keep Log Days	58
3.1.6	Quit	58
3.2	Config	58
3.2.1	Brightness	58
3.2.2	Online	58
3.2.2.1	My Call	58
3.2.2.2	My Symbol	59
3.2.2.3	My Position	59
3.2.2.4	Netbeacontext	59
3.2.2.5	Passcode	59
3.2.2.6	Server URL	59
3.2.2.7	Serverfilter	59
3.2.2.8	Connect Server	60
3.2.2.9	Allow TX to NET	60
3.2.2.10	Allow Gate RF>NET	60
3.2.3	RF-Ports	60
3.2.4	Timers	60
3.2.5	Map Parameter	60
3.2.5.1	Show Loc of Mouse	60
3.2.5.2	Trackfilter	60
3.2.5.3	Show Scaler	60
3.2.5.4	Show Windvane	60
3.2.5.5	Show Temp	61
3.2.5.6	Load Map Program	61
3.2.5.7	km/h Text	61
3.2.5.8	Show Altitude min m	61
3.2.5.9	Brightness Notmover	61
3.2.5.10	Reset to Default	61
3.2.6	Map Moving	61
3.2.7	Colours, Font	61
3.2.8	Callfilters	61
3.2.9	Watch Calls	61
3.2.10	Reload Config	61
3.2.11	Save Config	61
3.3	Zoom	61
3.4	Tools	61
3.4.1	Toolbar Off	61
3.4.2	On next Click	62

3.4.3 List	62
3.4.4 Choose Maps	62
3.4.4.1 Reload	62
3.4.4.2 Download	62
3.4.4.3 tiles_quest	62
3.4.4.4 tiles_sat	62
3.4.4.5 tiles_cyclemap [9]	62
3.4.4.6 tiles_topo [8]	62
3.4.4.7 tiles [7]	62
3.4.5 Find	62
3.4.6 Radiolink	62
3.4.7 Select Data	62
3.4.7.1 Symbol	62
3.4.7.2 Dimm Notmover	62
3.4.7.3 Rain Colourmap	62
3.4.7.4 Temp Colourmap	62
3.4.7.5 WX Stations	63
3.4.7.6 Show POI	63
3.4.7.7 Show All	63
3.4.8 Add Maptypes	63
3.4.9 Map directory	63
3.4.10 Send Message	63
3.4.11 Animate	63
3.5 Help	63
3.5.1 Version	63
3.5.2 Helptext	63

Program start

After downloading and saving locally, the **aprsmap.exe** program can be started. A separate installation is not required.

Operation

First steps

APRSmap 1st Start

On the first start of the program it is necessary to do some configuration. The most important things you have to adjust are in the ONLINE menu. You best configure all steps from up till down.

- First of all you put in your callsign (MY CALLSIGN) with optional SSID
- Second step is to choose your desired APRS icon (MY SYMBOL)
- Next you will zoom to your QTH as far as you can, 100% identifying your home (zoom level >16). Then open ONLINE - MY POSITION and point to your home with the cursor. While push and hold the SHIFT key click on your home. The coordinates will be copied into the MY POSITION field. Just click OK to save them.
- Now you can set the SERVER URL by just inserting your favorite APRS IS. Click ADD to save this entry.

for example:

aprs.oe2xzt.ampr.at (APRS IS connection via HAMNET)
austria.aprs2.net (APRS IS connection via Internet)

- You also need to enter a valid APRS PASSCODE to transmit packets to the APRS network (not needed in case of only RX). Just do a internet search on APRS PASSCODE to find a possibility on getting your code.
- Last but not least you have to activate CONNECT SERVER to get data from an to the APRS network.

Shortcuts

Note, shortcut keys are case sensitive!

```
: delete markers
@ reset <On Next Click> to menu mode
a Animate (Click to Map to set Parameters)
b or <Backspace> go back in position history
c Center (to last clicked Pixel)
d toggle (missing) map download
e toggle Errors only/All for stepping along a track with <>
f Junk Filter toggle on/off
h Heard (click symbol or text of igate before)
i Internal Status Listing
l toggle Labels on/off
m toggle dimm not moving since 10min
o toggle Objects/Items on/off
p toggle mouse-over Hints
q Quit Program
```

```

r  toggle Radio tracks on/off
s  toggle show only stations with a selected symbol
u  toggle tx/rx-Monitor window on/off
w  toggle WX stations and Temperature
x  set Marker 1 to mouse position
y  set Marker 2 and Line to Marker 1
B  Open Beacon editor
C  Enter Category of POI to be drawn on map
D  Digi Config open/close
F  Find Call (with wildcards * ?), Locator, Latitude/Longitude
H  Altitude Colour Map (if srtm-Data available)
M  Compose Message
R  toggle Radiorange Map on/off
T  toggle Timestamp
S  Screenshot bpm (win), png (linux)
W  Rain map (use topo or dark map)
< > Step along Beacons/Waypoints of a selected User
( )  Map Brightness +/- 5%
/    zoom to Marker 1-2 Square
\    shortcut list
~    change track colour
+    Zoom in - Zoom out
.    zoom to track and show only this (clicked before)
=    same as . but with radio tracks
0    show all (and radio tracks off)
1,2,3,4 Zoom/Pan to stored Views
7,8,9 use map type as configured
ESC  close menus
Cursor up/down/left/right move map, same as click near margin
SHIFT with up/down/left/right/[zoom+]/[zoom-] in smaller steps
DEL  delete selected (Symbol, Waypoint)
TAB  switch between two Views
ctrl-L Reset Image and Mouse parameters to default
ctrl-V Paste

```

Tips & tricks

- Animation: Click on the track of a moving object (e.g. car) and press the "a" key
- Temperature distribution: Two times "w" (w + w) shows a color distribution of the reported temperatures (sensible min. Zoom level 10 or less)
- The "0" (zero), ESC and ":" keys often help if you want to have everything displayed again after clicking on the filter or similar.
- "TAB" key toggles between two independent displays, similar to VFO "A" and "B".

Menus



In addition to the main menus explained in more detail below, the menu offers further short menus on the right.

N Display or switching of the network status, green means connected, orange means not connected or connection problems. If the mouse pointer is moved over the menu, the connection status appears in the popup
 1-4....Display or switch the UDP port connections
 L display the log file data
 M View the saved messages
 F display or switching of the track filter (incorrect or implausible position packages)
 O display or switch the display of pure objects

By the way, the mouse position display (green bar with coordinates) can be activated in the CONFIG> MAP PARAMETER> SHOW LOC OF MOUSE menu.

File

Import Log

Import a complete logfile.

Screenshot

Save a screenshot in your local user directory, e.g. map1.bmp (Win10 user directories are in the User\AppData folder e.g. C:\Users\User\AppData\Local\VirtualStore\Program Files (x86)\APRSmap)

Make Video

Save a video from e.g. a moving object in .y4m raw video format.

Write Log

Choose the logfile directory.

Keep Log Days

Define the ammount of days logs are kept.

Quit

Exit APRSmap, shortcut key is q.

Config

Brightness

Setting the respective brightness, times and colors.

```
Time Fade Out - time until the display of stations disappears after the time
for display (full brightness) has expired
Time full Bright - time to display received positions
Brightness Waypoint - Brightness of the waypoint points
Brightness Text - Brightness of the station texts
Brightness Symbol - the brightness of the symbols displayed
Gamma - Gamma value setting of the card
Brightness Track - the brightness of the route
Brightness Map - the brightness of the map
Brightness Object - the brightness of the objects displayed
```

Online

The ONLINE area is initially the most important and necessary menu item, which has to be configured individually. Basically, when the program is simply started and a data connection is established, other stations can be receive even without specifying your own callsign, position or APRS passcode (RX only mode). However, in order to act "actively" in the APRS network and to be seen and reached by other stations, this information must be entered accordingly. The *APRS PASScode* must be requested once. To do this, search for "*APRS PASSCODE Generator*" on the Internet.

My Call

Here you enter the callsign to be used, optionally with SSID.

```
(without SSID) Your primary station usually fixed and message capable
-1 generic additional station, digi, mobile, wx, etc
-2 generic additional station, digi, mobile, wx, etc
-3 generic additional station, digi, mobile, wx, etc
-4 generic additional station, digi, mobile, wx, etc
-5 Other networks (Dstar, Iphones, Androids, Blackberry's etc)
-6 Special activity, Satelllite ops, camping or 6 meters, etc
-7 walkie talkies, HT's or other human portable
-8 boats, sailboats, RV's or second main mobile
-9 Primary Mobile (usually message capable)
-10 internet, Igates, echolink, winlink, AVRS, APRN, etc
-11 balloons, aircraft, spacecraft, etc
-12 APRStt, DTMF, RFID, devices, one-way trackers*, etc
-13 Weather stations
-14 Truckers or generally full time drivers
-15 generic additional station, digi, mobile, wx, etc
```

* One-way trackers should best use the -12 one-way SSID indicator because the -9's usually mean a ham in full APRS communication both message and voice. The -9's can be contacted by APRS message or by Voice on his frequency included in his beacon, or on Voice Alert if he is in simplex range. The -12's are just moving Icons on the map and since they have no 2 way communication for ham radio they are not generally of routine interest to other operators.

My Symbol

Self-explanatory

My Position

In order to enter your own position in MY POSITION quickly and without any major search effort, simply go first with the zoom into the MAP (preferably ZOOMLEVEL 17) so that you can clearly see your own position. Then open the CONFIG - ONLINE - MY POSITION item and click the SHIFT key to determine your own position. The coordinates are automatically adopted in the context menu and only need to be confirmed with OK.

Netbeacontext

The text set here is sent as beacon text via the network connection.

Passcode

An APRS PASSCODE is not absolutely necessary for RX, but this code is essential for sending your own data. You can apply for this code online with a waiting period, simply search for APRS IS PASSCODE using the search engine.

Server URL

Any APRS server that provides the data in the correct format can be entered as the server URL.

for example:
aprs.oe2xzt.ampr.at (for connections via HAMNET)
austria.aprs2.net (for connections via Internet)

Another list can be found at <http://www.aprs2.net/serverstats.php>.

The standard port is 14580 and does not have to be specified.

Alternative ports are given after the address:
aprs.server.com:12345

Serverfilter

Suggestion: " **m / 100 p / OE -t / t** "

The position filter is structured as follows [Position] / [Radius] eg " **m / 100** " for displaying data with a radius of 100km around your own position.

" **P / OE** " is used to display all OE stations (e.g. mobile) outside the defined radius filter .

And the mostly unnecessary telemetry traffic is filtered with " **-t / t** ".

TIP

settings relating to the server are only adopted when a new connection is made, for this the server connection can either be disconnected and re-established in the menu bar under "N", or the corresponding server entry can be deactivated and activated under "Config"> "Online"> "Connect Server" .

Connect Server

Activates or deactivates the online connection.

Allow TX to NET

Activates or deactivates the sending of (own) data to the online network.

Allow Gate RF>NET

Activates or deactivates the forwarding of APRS data heard locally via HF in the online network.

RF-Ports

Timers

Map Parameter

Show Loc of Mouse

Activates / deactivates the display of the coordinates, height and distance of the mouse pointer on the map.

Trackfilter

Activates / deactivates the intelligent filter function for incorrect or implausible position data (e.g. long lines across the APRS map; chopping or zik-zak in the track as if the route was driven several times - wheel cap lost - caused by a massive delay from Digis delivered packages)

Show Scaler

Show Windvane

Activates / deactivates the display of the wind vane at weather stations if this value was supplied.

Show Temp

Activates / deactivates the display of the temperature value at weather stations if this has been delivered.

Load Map Program

Deactivates / activates the card loader. Optionally, the loading program can be selected by clicking on the menu, optionally

```
getosm (standard, activates the external program getosm.exe from OE5KRN)  *  
recommended  
start sh map.sh (loading maps in the background)  
sh gm.sh    (for map download from the Internet)  
sh gm-hamnet.sh (for map download from HAMNET)
```

km/h Text

Freely selectable text of the unit for displaying the speed of moving stations. Default "km / h", can be shortened to "km", for example, to save space.

Show Altitude min m

Brightness Notmover

Reset to Default

Map Moving

Colours, Font

Callfilters

Watch Calls

Reload Config

Save Config

Zoom

Tools

Toolbar Off

Deactivates the permanently displayed toolbar. The toolbar can then be opened dynamically with a click on the map.

On next Click

List

Choose Maps

Reload

Download

tiles_quest

tiles_sat

tiles_cyclemap [9]

tiles_topo [8]

tiles [7]

Find

Radiolink

Select Data

Symbol

When the display is activated (marked by * next to SYMBOL) only the selected symbols are displayed. These can be switched on / off by clicking on the respective symbols (multiple selection possible). The entire function can be switched on / off by clicking on the wording SYMBOL.

Dimm Notmover

With the on / off switch, it clearly dims the stationary stations and objects in relation to, for example, mobile stations.

Rain Colourmap

Temp Colourmap

Shows a temperature distribution (similar to an isobar map). Shortcut 2x "w". Exit the Colourmap view with ESC or key w again

WX Stations

Show POI

Show All

Add Maptypes

Map directory

Send Message

Opens the message context menu

Animate

Help**Version**

Shows the currently installed version of APRSmap. The letter in brackets indicates the operating system, followed by the version number of the software.

```
aprsm(w) 0.79 by OE5DXL
```

Helptext

Opens the program-internal help context.

[<< Back to DXL - APRSmap overview](#)