

Inhaltsverzeichnis

--

OPEN-HYTERA-OE-MASTER-ENGLISH

[Versionsgeschichte interaktiv durchsuchen](#)
[Visuell Wikitext](#)

Version vom 31. August 2013, 20:03 Uhr
(Quelltext anzeigen)
 Oe1kbc ([Diskussion](#) | [Beiträge](#))
[← Zum vorherigen Versionsunterschied](#)

Aktuelle Version vom 1. Februar 2014, 09:28 Uhr (Quelltext anzeigen)
 Oe1kbc ([Diskussion](#) | [Beiträge](#))

(15 dazwischenliegende Versionen desselben Benutzers werden nicht angezeigt)

<p>Zeile 1:</p> <p>– [[Kategorie:DMR]]</p> <p>– == DMR WinMaster ==</p> <p>by: Kurt OE1KBC oe1kbc@oevsv.at</p>	<p>Zeile 1:</p> <p>+ == DMR DigitalMaster ==</p> <p>by: Kurt OE1KBC oe1kbc@oevsv.at</p>
<p>Zeile 9:</p> <p>== Parameters ==</p> <p>* Repeater Type: "IP Multi-Site Master"</p> <p>– * Jitter Buffer Length: "3"</p> <p>* Authentication Key: "!! leave empty !!"</p> <p>* IP Multi-site Networking UDP Port: "62015"</p>	<p>Zeile 8:</p> <p>== Parameters ==</p> <p>* Repeater Type: "IP Multi-Site Master"</p> <p>+ * Jitter Buffer Length: "8"</p> <p>* Authentication Key: "!! leave empty !!"</p> <p>* IP Multi-site Networking UDP Port: "62015"</p>
<p>Zeile 15:</p> <p>* IP Multi-Site Service: "checked"</p> <p>* IP Multi-Site Service UDP Port: "62016"</p> <p>– * RDAC: "unchecked"</p> <p>* Super Master Service: "checked"</p> <p>* Super Master IP: "178.188.156.53"</p> <p>* Super Master UDP Port: "62005"</p> <p>* Super Master Multi-Site Service: "checked"</p> <p>– * Super Master Multi-Site UDP Port: "62006"</p>	<p>Zeile 14:</p> <p>* IP Multi-Site Service: "checked"</p> <p>* IP Multi-Site Service UDP Port: "62016"</p> <p>+ * RDAC: "checked"</p> <p>+ * Remote RDAC UDP Port: "62017"</p> <p>* Super Master Service: "checked"</p> <p>* Super Master IP: "178.188.156.53"</p> <p>* Super Master UDP Port: "62005"</p> <p>* Super Master Multi-Site Service: "checked"</p> <p>+ * Super Master Multi-Site UDP Port: "62006" as standard port. Please ask WinMaster SYSOP for your own individual port</p>

		+ * Super Master RDAC Service: "checked"
		+ * Super Master RDAC UDP Port: "62007"
-	Please note: Use the UDP-Port "62006" only for the first tests and QSOs. After that you will get a fixed UDP-Port. This Port identify you repeater to routing- and informations systems. 	
-	Only with a fix UDP-Port you can use all the features in the WinMaster system. You can get this fix port form your WinMaster administrator. In Austria please contact me oe1kbc@oevsv.at 	
-	== Server ID ==	+ == Server ID using RDAC Service ==
-	The HYTERA Repeaters to not give their ID to the network streams so i've to take this information from "Super Master Multi-Site UDP" Port. 	+ DigitalMaster versions larger then 8.0 are able to read the programmed Repeater Parameters.
-	Therefore, if you use the default UPD-Port 62006 no Server-ID can be calculated. 	+ * DMR Repeater ID
-	In coordination with Torsten DG1HT (for BMaster and SMaster) and OE1KBC (for WinMaster) we have the following possibilities: 	+ * Repeater callsign
-	Super Master Multi-Site UDP Port: "6FRL" 	+ * Repeater TX frequency
-	6....fix 	+ * Repeater RX frequency or shift
-	F....counting no. per region 1-4 	
-	R....Region 1-9 (in OE it is the state 1-9 in DL the first position of the postal code) 	

<p>LL...country code - only the last both digits - (OE...2<32> DL...2<62> HB9...2<28> US...3<10>)
</p>	
<p>e.g.:
</p>	<p>A Repeater with activated Super Master RDAC Service is able to transfer the parameters to the DigitalMaster. This information will be transferred to the S/BMaster system. So we can display this informations on the Dashboard. Please keep in mind to coordinate the Repeter IDs and store them to the DMR-MARC database. So we do not run in conflicts on international calls.</p>
<p>the second repeater in region 8 in OE ""62832"" or
</p>	
<p>the third repeater in postal region 4 in DL ""63462"" or
</p>	
<p>the forth repeater in region 7 in US""64710""
</p>	
<p>== Timeslots / Talkgroups ==</p>	<p>== Timeslots / Talkgroups ==</p>
<p>* local QSOs - the timeslot TS1 should be complete free for local QSOs. Please use TG9 to be compatible to the network issues.
</p>	<p>* local QSOs - the timeslot TS2 should be complete free for local QSOs. Please use TG9 to be compatible to the network issues.
</p>
<p>* echo function- as a special we offer on TS1 a echo function. All you speak to TG9990 on TS1 will be responded after release of PTT.
</p>	<p>* echo function- as a special we offer on TS2 a echo function. All you speak to TG9990 on TS2 will be responded after release of PTT.
</p>
<p>* national QSOs - the timeslot TS2 with TG9 you can also use for local QSOs. With your country code (e.g. in OE TG232 or TG3 in USA) you can make nation wide QSOs
</p>	<p>* national QSOs - the timeslot TS1 with TG9 you can also be used for local QSOs. With your country code (e.g. in OE TG232 or TG3 in USA) you can make nation wide QSOs
</p>
<p>* international QSOs - with TG1 you are connected to all repeaters WW (US, EU, ...).
</p>	<p>* international QSOs - with TG1 on TS1 you are connected to all repeaters WW (US, EU, ...).
</p>

- == LastHeard ==	+ == HYTERA DashBoard / LastHeard ==
- via http://87.106.3.249/dmr you can see the list of the last heard QSOs.	+ the link http://ham-dmr.de/dmr/ show the LastHeard information. This can show you the right function of the DigitalMaster installation.
	+ You can also reach the overview which repeaters are ONLINE to the OPEN-HYTERA-NET:
	+ http://ham-dmr.de/1repeater_status.php
	+ And also an overview to control which talkgroups are linked to each repeater is shown:
	+ http://ham-dmr.de/group.php .
- == WinMaster Software ==	+ == DigitalMaster Software ==
- The WinMaster software is written with .NET C# and connect the repeaters to the network.. 	+ The DigitalMaster software is written with .NET C# and connect the repeaters to the network..
- The parameters in the properties form give you the possibilities to assign talkgroups to your slots. So you can make your own local TGs and bind repeaters to a local DMR-Network. So it is possible to connect the local repeaters (connected to the same WinMaster) on TS1 with TG9. This is a local area connection. 	+ The parameters in the properties form give you the possibilities to assign talkgroups to your slots. So you can make your own local TGs and bind repeaters to a local DMR-Network. So it is possible to connect the local repeaters (connected to the same DigitalMaster) on TS2 with TG9. This is a local area connection.
- If you run more than one WinMaster on the same SMaster (see routing concept) you can decided on every WinMaster how to connect this WinMasters together. 	+ If you run more than one DigitalMaster on the same SMaster (see routing concept) you can decided on every DigitalMaster how to connect the DigitalMasters together.
The three step model give us a dynamic structure for the future.	The three step model give us a dynamic structure for the future.
- * WinMaster build the repeater connections and the network for the region	+ * DigitalMaster build the repeater connections and the network for the region
- * SMaster combine the WinMaster regions to a nationwide network	+ * SMaster combine the DigitalMaster regions to a nationwide network

* BMaster combine nations to continents	* BMaster combine nations to continents
here a pictiure from ÖVSV HYTERA-DMR OE-MASTER main- and propertiespage	here a picture from ÖVSV HYTERA-DMR OE-MASTER main- and properties page
[[Bild:OE-MASTER-PRINT.jpg 500px OPEN HYTERA OE MASTER]]	[[Bild:OE-MASTER-PRINT.jpg 500px OPEN HYTERA OE MASTER]]
== questions to the software and the Wi nMaster (OE-MASTER) in OE ==	== Questions to the software and the Dig italMaster (OE-MASTER) in OE ==
Please EMail to oe1kbc@oevsv.at	please EMail to oe1kbc@oevsv.at

Aktuelle Version vom 1. Februar 2014, 09:28 Uhr

Inhaltsverzeichnis

1 DMR DigitalMaster 7

2 Parameters 7

3 Server ID using RDAC Service 7

4 Timeslots / Talkgroups 8

5 HYTERA DashBoard / LastHeard 8

6 DigitalMaster Software 8

7 Questions to the software and the DigitalMaster (OE-MASTER) in OE 9

DMR DigitalMaster

by: Kurt OE1KBC oe1kbc@oevsv.at

On the ÖVSV server we installed the DMR OE-MASTER and you can use this master for testing issues.

You can connect with HYTERA RD985 or RD965 repeater with the IP Multi-Site Service license installed. The connection is done via the "Supermaster" service.

Parameters

- Repeater Type: **IP Multi-Site Master**
- Jitter Buffer Length: **8**
- Authentication Key: **!! leave empty !!**
- IP Multi-site Networking UDP Port: **62015**
- P2P Firewall Open Time (sec): **6**
- IP Multi-Site Service: **checked**
- IP Multi-Site Service UDP Port: **62016**
- RDAC: **checked**
- Remote RDAC UDP Port: **62017**
- Super Master Service: **checked**
- Super Master IP: **178.188.156.53**
- Super Master UDP Port: **62005**
- Super Master Multi-Site Service: **checked**
- Super Master Multi-Site UDP Port: **62006** as standard port. Please ask WinMaster SYSOP for your own individual port
- Super Master RDAC Service: **checked**
- Super Master RDAC UDP Port: **62007**

Server ID using RDAC Service

DigitalMaster versions larger then 8.0 are able to read the programmed Repeater Parameters.

- DMR Repeater ID
- Repeater callsign
- Repeater TX frequency
- Repeater RX frequency or shift

A Repeater with activated Super Master RDAC Service is able to transfer the parameters to the DigitalMaster. This information will be transferd to the S/BMaster system. So we can display this informations on the DashBoard. Please keep in mind to coordinate the Repeter IDs and store them to the DMR-MARC database. So we do not run in conflicts on international calls.

Timeslots / Talkgroups

- local QSOs - the timeslot TS2 should be complete free for local QSOs. Please use TG9 to be compatible to the network issues.
- echo function- as a special we offer on TS2 a echo function. All you speak to TG9990 on TS2 will be responded after release of PTT.
- national QSOs - the timeslot TS1 with TG9 you can also be used for local QSOs. With your country code (e.g. in OE TG232 or TG3 in USA) you can make nation wide QSOs
- international QSOs - with TG1 on TS1 you are connected to all repeaters WW (US, EU, ...).

HYTERA DashBoard / LastHeard

the link <http://ham-dmr.de/dmr/> show the LastHeard information. This can show you the right function of the DigitalMaster installation.

You can also reach the overview which repeaters are ONLINE to the OPEN-HYTERA-NET:

http://ham-dmr.de/1repeater_status.php

And also an overview to control which talkgroups are linked to each repeater is shown:

<http://ham-dmr.de/group.php>.

DigitalMaster Software

The DigitalMaster software is written with .NET C# and connect the repeaters to the network.. The parameters in the properties form give you the possibilities to assign talkgroups to your slots. So you can make your own local TGs and bind repeaters to a local DMR-Network. So it is possible to connect the local repeaters (connected to the same DigitalMaster) on TS2 with TG9. This is a local area connection.

If you run more than one DigitalMaster on the same SMaster (see routing concept) you can decided on every DigitalMaster how to connect the DigitalMasters together.

The three step model give us a dynamic structure for the future.

- DigitalMaster build the repeater connections and the network for the region
- SMaster combine the DigitalMaster regions to a nationwide network
- BMaster combine nations to continents

here a picture from ÖVSV HYTERA-DMR OE-MASTER main- and properties page

DMR+ MASTER 7.00 Linux 64Bit																
HOME	Fri Mar 20 14:17:19 2015															
SYSTEM	DMR MASTER CONFIG															
LOGFILE																
CPS-USER	SYSOPEMAIL	LocalMasterName	Locator_ID	TS1_INTERN	TS1_EXTERN	Ref Link	Ref unLink	sMaster_IP								
	oelkbc@chello.at	OE-Vienna	2322	1,2,20,232	1,2,20,232	User Link On	User Unlink On	44.143.9.60								
DONGLE	REPEATER ON MASTER															
RPT-GEO	DmrID	CALL	LOGINTIME	IP	TX_QRG	RX_QRG	SHIFT	START	REF/RT	Reflector	TS1	FIRMWARE	MODEL			
RPT-MAP	CONFIG	232100	OE1VAK	Fri Mar 20 09:15:00 2015	44.143.9.70 62006	438.5000	430.9000	-7.6	4191/15	Link 4191	232 1 20	DMR+ MB 0.95	MBplus S			
DMR-LIVE	CONFIG	232108	OE1VKK	Fri Mar 20 09:15:00 2015	44.143.9.72 62006	438.6000	431.0000	-7.6	4198/15	Link 4198	232 1 20	A6.05.10.004	RD985 M			
USER	CONFIG	232192	OE1XQU	Fri Mar 20 09:15:00 2015	44.143.9.68 62006	438.4500	430.8500	-7.6	4180/15	Link 4180	232 1 20	A6.05.10.004	RD985 M			
USER+	CONFIG	232191	OE1VNB	Fri Mar 20 09:15:00 2015	44.143.9.52 62006	438.4250	430.8250	-7.6	4180/15	Link 4180	232 1 20	A7.00.09.003	RD985 M			
REF-LIST	CONFIG	232899	DE6ONA	Fri Mar 20 09:15:00 2015	212.125.105.170 62006	439.5875	431.9875	-7.6	4198/15	Link 4198	20 1	A6.05.10.004	RD985 M			
REF-LIST+	CONFIG	232391	OE1VTK	Fri Mar 20 09:15:01 2015	82.218.27.11 62006	438.4000	430.8000	-7.6	4191/15	Link 4191	232 1 20	A7.00.09.003	RD625 M			
MASTER	CONFIG	232303	OE1VHB	Fri Mar 20 09:15:02 2015	44.143.9.73 62006	438.4250	430.8250	-7.6	4193/15	Link 4193	232 1 20	DMR+ MB 0.95	MBplus S			
	CONFIG	232703	OE1VLT	Fri Mar 20 09:15:02 2015	44.143.9.77 62006	438.3500	430.7500	-7.6	4197/15	Link 4197	232 1 20	DMR+ MB 0.95	MBplus S			
	CONFIG	232991	OE1VAV	Fri Mar 20 09:15:02 2015	84.115.117.45 62006	438.5000	430.9000	-7.6	4199/15	Link 4199	232 1 20	A6.00.05.004	RD985 S			
	CONFIG	232601	OE1VAG	Fri Mar 20 09:15:02 2015	44.143.9.71 62006	438.6000	431.0000	-7.6	4196/15	Link 4196	232 1 20	DMR+ MB 0.95	MBplus S			
	CONFIG	262411	DE1MHR	Fri Mar 20 09:15:03 2015	91.16.219.64 62006	439.0375	431.4375	-7.6	NO SET	NO-LINK	262 1 20 10	A5.05.10.007	RD985 S			
	CONFIG	232193	OE1XQU	Fri Mar 20 09:15:03 2015	44.143.26.50 62006	145.5875	144.9875	-0.6	4191/15	Link 4191	232 1 20	A6.05.10.004	RD985 M			
RepeaterOnline: 17										Voice: GER	Efn:off	SPING: 41.50 ms	Build: 000	Start Time: Fri Mar 20 09:14:57 2015

Questions to the software and the DigitalMaster (OE-MASTER) in OE

please EMail to oelkbc@oevsv.at