

---

## Inhaltsverzeichnis

OPEN-HYTERA-OE-MASTER-ENGLISH

Inhaltsverzeichnis

1 WINMASTER ..... 3

2 Parameters ..... 3

3 Server ID ..... 3

4 Timeslots / Talkgroups ..... 3

5 LastHeard ..... 4

6 WinMaster Software ..... 4

7 Fragen zu OE-MASTER ..... 4

---

## WINMASTER

---

by: Kurt OE1KBC oe1kbc@oevsv.at

On the ÖVSV server we installed the DMR OE-MASTER and you can use this master for testing issues.

You can connect with HYTERA RD985 or RD965 repeater with the IP Multi-Site Service license installed. The connection is done via the "Supermaster" service.

---

## Parameters

---

- Repeater Type: **IP Multi-Site Master**
- Jitter Buffer Length: **3**
- Authentication Key: **!! leave empty !!**
- IP Multi-site Networking UDP Port: **62015**
- P2P Firewall Open Time (sec): **6**
- IP Multi-Site Service: **checked**
- IP Multi-Site Service UDP Port: **62016**
- RDAC: **unchecked**
- Super Master Service: **checked**
- Super Master IP: **178.188.156.53**
- Super Master UDP Port: **62005**
- Super Master Multi-Site Service: **checked**
- Super Master Multi-Site UDP Port: **62006**

Please note: Use the UDP-Port "62006" only for the first tests and QSOs. After that you will get a fixed UDP-Port. This Port identify you repeater to routing- and informations systems.

Only with a fix UDP-Port you can use all the features in the WinMaster system. You can get this fix port form your WinMaster administrator. In Austria please contact me oe1kbc@oevsv.at

---

## Server ID

---

The HYTERA Repeaters to not give their ID to the network streams so i've to take this information from "Super Master Multi-Site UDP" Port.

Therefore, if you use the default UPD-Port 62006 no Server-ID can be calculated.

In coordination with Torsten DG1HT (for BMaster and SMaster) and OE1KBC (for WinMaster) we have the following possibilities:

Super Master Multi-Site UDP Port: **6FRLL**

6....fix

F....counting no. per region 1-4

R....Region 1-9 (in OE it is the state 1-9 in DL the first position of the postal code)

LL...country code - only the last both digits - (OE...2<32> DL...2<62> HB9...2<28> US...3<10>)

e.g.:

the second repeater in region 8 in OE **62832** or

the third repeater in postal region 4 in DL **63462** or

the forth repeater in region 7 in US**64710**

## Timeslots / Talkgroups

- local QSOs - the timeslot TS1 should be complete free for local QSOs. Please use TG9 to be compatible to the network issues.
- echo function- as a special we offer on TS1 a echo function. All you speak to TG9990 on TS1 will be responded after release of PTT.
- national QSOs - the timeslot TS2 with TG9 you can also use for local QSOs. With your country code (e.g. in OE TG232 or TG3 in USA) you can make nation wide QSOs
- international QSOs - with TG1 you are connected to all repeaters WW (US, EU, ...).

## LastHeard

via <http://87.106.3.249/dmr> you can see the list of the last heard QSOs.

## WinMaster Software

The WinMaster software ist wirtten with .NET C# and connect the repeaters to the network.. With In der Parametermaske werden die Routen eingetragen. Es wird auch festgelegt welche Zeitslitze benutzt werden.

Weiters legt der OE-MASTER auch fest wie der nächste MASTER Server erreicht werden kann.

Über diese Struktur können Regionen, Länder und Kontinente im Routing erreicht werden.

Natürlich ist auch ein zentraler Server für die Darstellung der LastHeard Informationen angebbbar.

Das System wir durch diese Struktur sehr dynamisch gehalten und erfordert keine großartigen Struktur-Planungen.

Hier ein Bild vom ÖVSV HYTERA-DMR OE-MASTER

DMR+ MASTER 7.00 Linux 64Bit															
HOME	Fri Mar 20 14:17:19 2015														
SYSTEM	DMR MASTER CONFIG														
LOGFILE	SYSOPEMAIL	LocalMasterName	Locator_ID	TS1_INTERN	TS1_EXTERN	Ref Link	Ref unlink	sMaster_IP							
GPS-USER	oelkbc@chello.at	OE-Vienna	2322	1,2,20,232	1,2,20,232	User Link On	User Unlink On	44.143.9.60							
DONGLE	REPEATER ON MASTER														
RPT-Geo	DMR-ID	CALL	LOGINTIME	IP	TX	QRG	RX	QRG	SHIFT	START	REF/RT	Reflector	TS1	FIRMWARE	MODEL
RPT-Geo	CONFIG	232100	OE1NAR	Fri Mar 20 09:15:00 2015	44.143.9.70	62006	438.5000	430.9000	-7.6	4191/15	Link 4191	232 1 20	DMR+ MB 0.95	MBplus S	
RPT-Geo	CONFIG	232391	HB9RO	Fri Mar 20 09:15:00 2015	213.202.59.75	62006	439.4125	431.8125	-7.6	4180/15	Link 4180	232 1 20	A6.05.10.004	RD985 M	
RPT-Geo	CONFIG	232108	OE1NAR	Fri Mar 20 09:15:00 2015	44.143.9.72	62006	438.6000	431.0000	-7.6	4198/15	Link 4198	232 1 20	DMR+ MB 0.95	MBplus S	
DMR-LIVE	CONFIG	262400	DE1NKG	Fri Mar 20 09:15:00 2015	217.191.49.246	62006	438.9000	431.3000	-7.6	4006/15	Link 4006	262 1 20	A5.05.10.007	RD985 S	
DMR-LIVE	CONFIG	232192	OE1NAR	Fri Mar 20 09:15:00 2015	44.143.8.68	62006	438.4500	430.8500	-7.6	4180/15	Link 4180	232 1 20	A6.05.10.004	RD985 M	
DMR-LIVE	CONFIG	232605	OE1NAR	Fri Mar 20 09:15:00 2015	81.217.111.56	62006	438.9750	431.3750	-7.6	4191/15	Link 4191	232 1 20	A7.00.09.003	RD985 M	
DMR-LIVE	CONFIG	232604	OE1NAR	Fri Mar 20 09:15:00 2015	185.29.89.105	62006	438.9125	431.3125	-7.6	4196/15	Link 4196	232 1 20	A6.05.10.004	RD985 M	
DMR-LIVE	CONFIG	232191	OE1NAR	Fri Mar 20 09:15:00 2015	44.143.9.52	62006	438.4250	430.8250	-7.6	4180/15	Link 4180	232 1 20	A7.00.09.003	RD985 M	
DMR-LIVE	CONFIG	262899	DE1NKG	Fri Mar 20 09:15:00 2015	212.125.105.170	62006	439.5875	431.9875	-7.6	4198/15	Link 4198	20 1	A6.05.10.004	RD985 M	
DMR-LIVE	CONFIG	232893	OE1NAR	Fri Mar 20 09:15:01 2015	44.143.19.50	62006	438.4250	430.8250	-7.6	4191/15	Link 4191	232 1 20	A7.00.09.003	RD965 M	
DMR-LIVE	CONFIG	232391	OE1NAR	Fri Mar 20 09:15:01 2015	82.218.27.11	62006	438.4000	430.8000	-7.6	4191/15	Link 4191	232 1 20	A7.00.09.003	RD625 M	
DMR-LIVE	CONFIG	232303	OE1NAR	Fri Mar 20 09:15:02 2015	44.143.9.73	62006	438.4250	430.8250	-7.6	4193/15	Link 4193	232 1 20	DMR+ MB 0.95	MBplus S	
DMR-LIVE	CONFIG	232703	OE1NAR	Fri Mar 20 09:15:02 2015	44.143.9.77	62006	438.3500	430.7500	-7.6	4197/15	Link 4197	232 1 20	DMR+ MB 0.95	MBplus S	
DMR-LIVE	CONFIG	232991	OE1NAR	Fri Mar 20 09:15:02 2015	84.115.117.45	62006	438.5000	430.9000	-7.6	4199/15	Link 4199	232 1 20	A6.00.05.004	RD985 S	
DMR-LIVE	CONFIG	232601	OE1NAR	Fri Mar 20 09:15:02 2015	44.143.9.71	62006	438.6000	431.0000	-7.6	4196/15	Link 4196	232 1 20	DMR+ MB 0.95	MBplus S	
DMR-LIVE	CONFIG	262411	DE1NKG	Fri Mar 20 09:15:03 2015	91.16.219.64	62006	439.0375	431.4375	-7.6	NO SET	NO-LINK	262 1 20 10	A5.05.10.007	RD985 S	
DMR-LIVE	CONFIG	232193	OE1NAR	Fri Mar 20 09:15:03 2015	44.143.26.50	62006	145.5875	144.9875	-0.6	4191/15	Link 4191	232 1 20	A6.05.10.004	RD985 M	
RepeaterOnline: 17    Voice: GER    EFN:off    SPING: 41.50 ms    Build: 000    Start Time: Fri Mar 20 09:14:57 2015															

## Fragen zu OE-MASTER

Bei Fragen zum Server: EMail an [oelkbc@oevsv.at](mailto:oelkbc@oevsv.at)