

## Inhaltsverzeichnis

## TETRA-Vernetzung/TETRA gps

### GPS Einstellungen

#### Codeplug > GPS

Field Name	Field Value
GPS Bearer	SDS
GPS Coordinates	Latitude/Longitude
GPS Location Protocol	LRRP
GPS in DMO	Enable in Any DMO Mode

#### Codeplug > GPS > LRRP Configuration

Field Name	Field Value
GPS SDS TL Disable	hocked

#### Codeplug > GPS > LRRP Profiles > Status Profile

Field Name	Field Value
GPS Event Location Enable	hocked
GPS Event Timestamp Enable	hocked
GPS LRRP Destination ISSI	2321990
GPS LRRP Unsolicited Shape	SHAPE_2d
GPS LRRP Unsolicited Velocity Type	SPEED_NONE
GPS Max Data Age, sec	30
GPS Max Acquisition Delay, sec	20

#### Codeplug > GPS > LRRP Profiles > Normal Periodic Profile

Field Name	Field Value
GPS Event Location Enable	hocked
GPS Event Timestamp Enable	hocked
GPS LRRP Destination ISSI	2321990
GPS LRRP Unsolicited Shape	SHAPE_2d
GPS LRRP Unsolicited Velocity Type	SPEED_NONE
GPS Max Data Age, sec	30
GPS Max Acquisition Delay, sec	20
GPS Idle Report Period, sec	300

#### Codeplug > GPS > LRRP Profiles > MS Moved Profile

Field Name	Field Value
GPS Event Location Enable	hocked

---

Field Name	Field Value
GPS Event Timestamp Enable	hocked
GPS LRRP Destination ISSI	2321990
GPS LRRP Unsolicited Shape	SHAPE_2d
GPS LRRP Unsolicited Velocity Type	SPEED_NONE
GPS Max Data Age, sec	30
GPS Max Acquisition Delay, sec	20
GPS Report Distance, m	100
Distance Check Interval	100