

Inhaltsverzeichnis

1. VoIP Einstellungen	23
2. Benutzer:OE2LSP	9
3. Benutzer:OE2WAO	16

VoIP Einstellungen

Versionsgeschichte interaktiv durchsuchen
VisuellWikitext

Version vom 18. Dezember 2014, 10:35 Uhr (Quelltext anzeigen)

OE2LSP ([Diskussion](#) | [Beiträge](#))

[← Zum vorherigen Versionsunterschied](#)

Version vom 9. Januar 2015, 20:29 Uhr (Quelltext anzeigen)

OE2WAO ([Diskussion](#) | [Beiträge](#))

[Zum nächsten Versionsunterschied →](#)

Zeile 17:

[[Datei:Snom300-1.PNG]]

[[Datei:Snom300-2.PNG]]

Zeile 17:

[[Datei:Snom300-1.PNG]]

[[Datei:Snom300-2.PNG]]

+

+

===Update & Konfiguration===

+

Es empfiehlt sich das SNOM 300 auf den aktuellen Softwarestand zu bringen. Lesen Sie dazu die entsprechende [\[http://wiki.snom.com/Snom300/Firmware Anleitung\]](http://wiki.snom.com/Snom300/Firmware%20Anleitung).

+

Für Version 8.7.3.25 finden Sie hier eine vorprefertierte [\[\[Media:Settings.zip|Konfigurationsdatei\]\]](#), in der nur zum Betrieb nur noch die eigene Zugangs ID einzutragen ist.

Version vom 9. Januar 2015, 20:29 Uhr

Nachfolgend wird erklärt, wie man seinen HAMNET SIP Client für den Zugang zur HAMNET VoIP Telefonie einrichtet. Es wird nach Herstellern unterschieden, und die gängigsten Modelle aufgeführt.

Derzeit gibt es folgende Asterisk-SIP Server:

voip.oe2x zr.ampr.at

voip.oe6x rr.ampr.at

voip.oe7x wi.ampr.at

voip.oe9x fr.ampr.at

Inhaltsverzeichnis

1 SNOM 300 25

1.1 Update & Konfiguration 26

2 Linphone 27

3 CSipSimple 27

4 Grandstream 2020 27

SNOM 300

Das SNOM ist ein günstiges und gutes SIP Telefon, und kann gebraucht schon für kleines Geld erworben werden (bspw. bei eBay).

Bevor man jedoch die Konfiguration vornimmt, sollte das Telefon auf den letzten Stand der Firmware gebracht werden! Anleitungen dazu findet man direkt im [SNOM Wiki](#).

Identity 1

[Login](#) [SIP](#) [NAT](#) [RTP](#)

Login Information:

Identity active: ☒ on ☐ off ?

Displayname: ?

Account: ?

Password: ?

Registrar: ?

Outbound Proxy: ?

Failover Identity: ?

Authentication Username: ?

Mailbox: ?

Ringtone: ?

Custom Melody URL: ?

Display text for idle screen: ?

Ring After Delay (sec): ?

Record Missed Calls: ☒ on ☐ off ?

Record Dialed Calls: ☒ on ☐ off ?

Record Received Calls: ☒ on ☐ off ?

Identity is hidden: ☐ on ☒ off ?

[Apply](#) [Re-Register](#) [Play Ringer](#)

[Remove Identity](#) [Remove All Identities](#)

[Login](#) [SIP](#) [NAT](#) [RTP](#)

RTP Identity Settings:

Codec: ?

Packet Size: ?

Filtered codec list:

Full SDP Answer: ☒ on ☐ off ?

Symmetrical RTP: ☐ on ☒ off ?

RTP Encryption: ☐ on ☒ off ?

G.726 Byte Order: ☒ RFC3551 ☐ AAL2 ?

SRTP Auth-tag: ☐ AES-32 ☒ AES-80 ?

RTP/SAVP: ?

Media Transport Offer: ?

Media Transport Offer Setup: ?

Multicast relay address: ?


[Apply](#)

Update & Konfiguration

Es empfiehlt sich das SNOM 300 auf den aktuellen Softwarestand zu bringen. Lesen Sie dazu die entsprechende [Anleitung](#).

Für Version 8.7.3.25 finden Sie hier eine vorgefertigte [Konfigurationsdatei](#), in der nur zum Betrieb nur noch die eigene Zugangs ID einzutragen ist.

Linphone

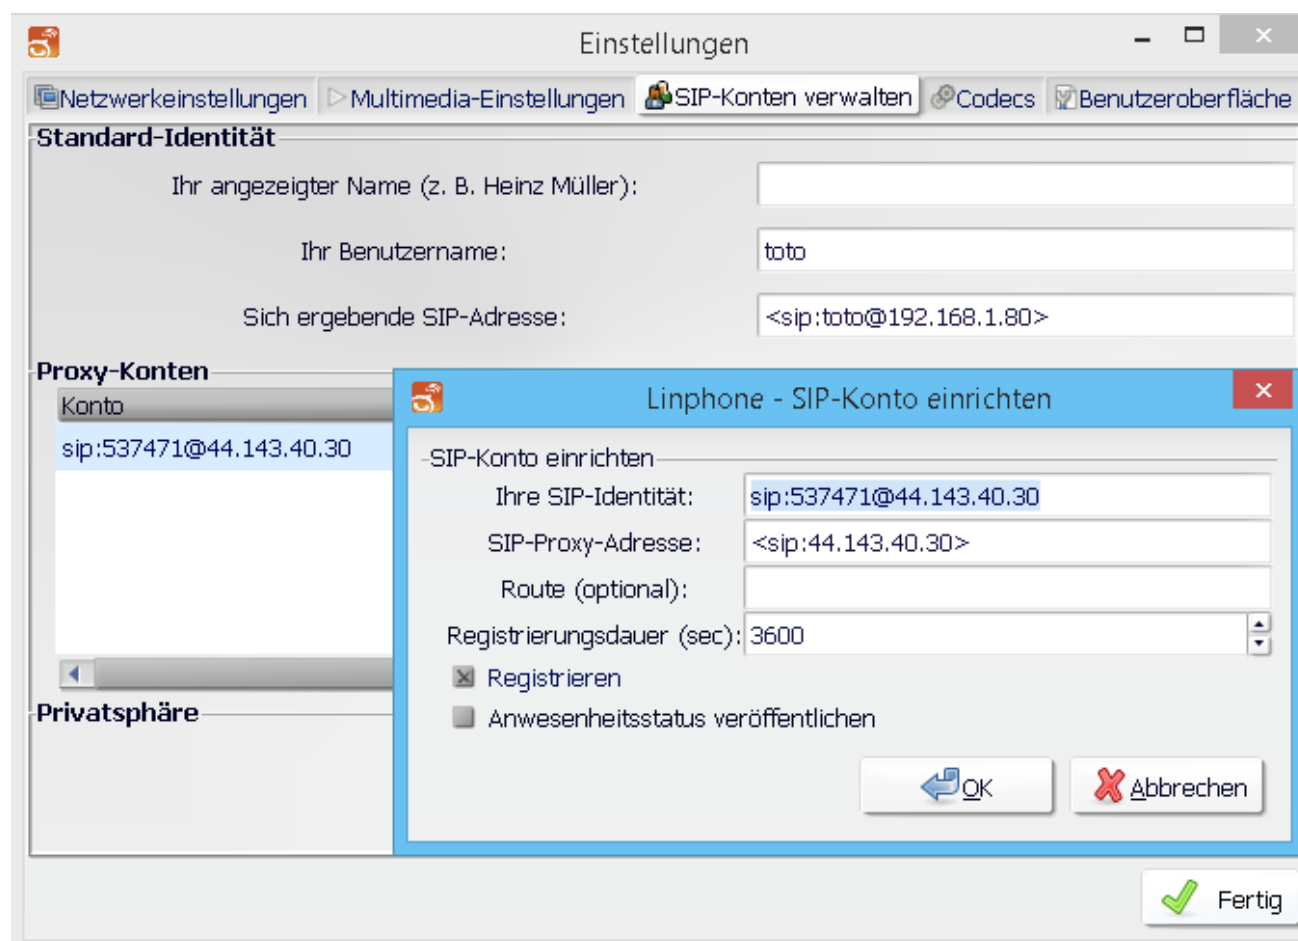

Im Reiter "Codecs" sollte kontrolliert werden, dass GMS, PCMA (alaw), PCMU (ulaw) aktiviert ist.

CSipSimple

Auch ein Android Smartphone kann als SIP-Client genutzt werden.

Da vom Server kein Passwort benötigt wird kann die eigene Rufnummer eingetragen werden.

[Datei:csipsimple.png](#)
 CSipSimple

Grandstream 2020

Auch das Hardwaretelefon Grandstream 2020 (oder auch 2000) kann ebenfalls für kleines Geld erworben werden (bspw. eBay, Willhaben)

Die Konfiguration über das Webinterface für z.B. Account1 sollte wie auf den Screenshots aussehen. Wichtig ist ganz unten bei den verwendeten Codec's alles auf **GSM** zu setzen da sonst ein falscher Codec verwendet wird und man am Telefon nichts hört (es läutet, aber man hört den Gesprächsparten nicht)

Grandstream Device Configuration

STATUS	BASIC SETTINGS	ADVANCED SETTINGS	EXT 1	EXT 2
ACCOUNT 1	ACCOUNT 2	ACCOUNT 3	ACCOUNT 4	ACCOUNT 5
				ACCOUNT 6
Account Active: ☐ No ☒ Yes Account Name: Hamnet (e.g., MyCompany) SIP Server: voip.oe2xtr.ampr.at (e.g., sip.mycompany.com, or IP address) Outbound Proxy: (e.g., proxy.myprovider.com, or IP address) SIP User ID: <Ham Tel.Nr> (the user part of an SIP address) Authenticate ID: <Ham Tel.Nr> (can be same or different from SIP UserID) Authenticate Password: (not displayed for security protection) Name: CALL (optional, e.g., John Doe) Use DNS SRV: ☒ No ☐ Yes User ID is phone number: ☐ No ☒ Yes SIP Registration: ☐ No ☒ Yes Unregister On Reboot: ☒ No ☐ Yes Support SIP Instance ID: ☒ No ☐ Yes Register Expiration: 60 (in minutes. default 1 hour, max 45 days) local SIP port: 5060 (default 5060) SIP Registration Failure Retry Wait Time: 20 (in seconds. Between 1-3600, default is 20) SIP T1 Timeout: 1 sec SIP T2 Interval: 4 sec SIP Transport: ☒ UDP ☐ TCP Use RFC3581 Symmetric Routing: ☐ No ☒ Yes NAT Traversal (STUN): ☒ No ☐ No, but send keep-alive ☐ Yes SUBSCRIBE for MWI: ☒ No ☐ Yes SUBSCRIBE for Registration Event: ☒ No ☐ Yes PUBLISH for Presence: ☒ No ☐ Yes Proxy-Require: Voice Mail UserID: (UserID for voice mail system) Send DTMF: ☒ in-audio ☐ via RTP (RFC2833) ☐ via SIP INFO Early Dial: ☒ No ☐ Yes (use "Yes" only if proxy supports 484 response) Dial Plan Prefix: (this prefix string is added to each dialed number) BLF Call-pickup Prefix: ** (this prefix is prepended when answering call with BLF key) Delayed Call Forward Wait Time: 20 (Allowed range 1-120, in seconds.) Enable Call Features: ☐ No ☒ Yes (if yes, call features using star codes will be supported locally) Call Log: ☒ Log All Calls ☐ Log Incoming/Outgoing only (Missed calls NOT recorded) ☐ Disable Call Log				

Session Expiration:	180	(in seconds. default 180 seconds)
Min-SE:	90	(in seconds. default and minimum 90 seconds)
Caller Request Timer:	☒ No ☐ Yes (Request for timer when making outbound calls)	
Callee Request Timer:	☒ No ☐ Yes (When caller supports timer but did not request one)	
Force Timer:	☒ No ☐ Yes (Use timer even when remote party does not support)	
UAC Specify Refresher:	☐ UAC ☐ UAS ☒ Omit (Recommended)	
UAS Specify Refresher:	☒ UAC ☐ UAS (When UAC did not specify refresher tag)	
Force INVITE:	☒ No ☐ Yes (Always refresh with INVITE instead of UPDATE)	
Enable 100rel:	☒ No ☐ Yes	
Account Ring Tone:	☒ system ring tone ☐ custom ring tone 1 ☐ custom ring tone 2 ☐ custom ring tone 3	
Ring Timeout:	60	(in seconds. Between 30-3600, default is 60)
Send Anonymous:	☒ No ☐ Yes (caller ID will be blocked if set to Yes)	
Anonymous Method:	☒ Use From Header ☐ Use Privacy Header	
Anonymous Call Rejection:	☒ No ☐ Yes	
Auto Answer:	☒ No ☐ Yes	
Allow Auto Answer by Call-Info:	☒ No ☐ Yes	
Turn off speaker on remote disconnect:	☒ No ☐ Yes	
Check SIP User ID for incoming INVITE:	☒ No ☐ Yes	
Refer-To Use Target Contact:	☒ No ☐ Yes	
Disable Multiple Media Attribute in SDP:	☒ No ☐ Yes	
Preferred Vocoder: (in listed order)	choice 1: GSM choice 2: GSM choice 3: GSM choice 4: GSM	choice 5: GSM choice 6: GSM choice 7: GSM choice 8: GSM
SRTP Mode:	☒ Disabled ☐ Enabled but not forced ☐ Enabled and forced ☐ Optional	
eventlist BLF URI:		
Special Feature:	Standard	
Update Cancel Reboot		

All Rights Reserved Grandstream Networks Inc. 2004-2009

VoIP Einstellungen: Unterschied zwischen den Versionen

[Versionsgeschichte interaktiv durchsuchen](#)

[Visuell Wikitext](#)

Version vom 18. Dezember 2014, 10:35 Uhr (Quelltext anzeigen)

[OE2LSP](#) ([Diskussion](#) | [Beiträge](#))

[← Zum vorherigen Versionsunterschied](#)

Version vom 9. Januar 2015, 20:29 Uhr (Quelltext anzeigen)

[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))

[Zum nächsten Versionsunterschied →](#)

Zeile 17:

[[Datei:Snom300-1.PNG]]

[[Datei:Snom300-2.PNG]]

Zeile 17:

[[Datei:Snom300-1.PNG]]

[[Datei:Snom300-2.PNG]]

+

+

===Update & Konfiguration===

+

Es empfiehlt sich das SNOM 300 auf den aktuellen Softwarestand zu bringen. Lesen Sie dazu die entsprechende [\[http://wiki.snom.com/Snom300/Firmware Anleitung\]](http://wiki.snom.com/Snom300/Firmware%20Anleitung).

+

Für Version 8.7.3.25 finden Sie hier eine vorprefertierte [\[\[Media:Settings.zip|Konfigurationsdatei\]\]](#), in der nur zum Betrieb nur noch die eigene Zugangs ID einzutragen ist.

Version vom 9. Januar 2015, 20:29 Uhr

Nachfolgend wird erklärt, wie man seinen HAMNET SIP Client für den Zugang zur HAMNET VoIP Telefonie einrichtet. Es wird nach Herstellern unterschieden, und die gängigsten Modelle aufgeführt.

Derzeit gibt es folgende Asterisk-SIP Server:

voip.oe2x zr.ampr.at

voip.oe6x rr.ampr.at

voip.oe7x wi.ampr.at

voip.oe9x fr.ampr.at

Inhaltsverzeichnis

1 SNOM 300 11

1.1 Update & Konfiguration 12

2 Linphone 13

3 CSipSimple 13

4 Grandstream 2020 13

SNOM 300

Das SNOM ist ein günstiges und gutes SIP Telefon, und kann gebraucht schon für kleines Geld erworben werden (bspw. bei eBay).

Bevor man jedoch die Konfiguration vornimmt, sollte das Telefon auf den letzten Stand der Firmware gebracht werden! Anleitungen dazu findet man direkt im [SNOM Wiki](#).

Identity 1

[Login](#) [SIP](#) [NAT](#) [RTP](#)

Login Information:

Identity active: ☒ on ☐ off ?

Displayname: ?

Account: ?

Password: ?

Registrar: ?

Outbound Proxy: ?

Failover Identity: ?

Authentication Username: ?

Mailbox: ?

Ringtone: ?

Custom Melody URL: ?

Display text for idle screen: ?

Ring After Delay (sec): ?

Record Missed Calls: ☒ on ☐ off ?

Record Dialed Calls: ☒ on ☐ off ?

Record Received Calls: ☒ on ☐ off ?

Identity is hidden: ☐ on ☒ off ?

[Apply](#) [Re-Register](#) [Play Ringer](#)

[Remove Identity](#) [Remove All Identities](#)

[Login](#) [SIP](#) [NAT](#) [RTP](#)

RTP Identity Settings:

Codec: ?

Packet Size: ?

Filtered codec list:

Full SDP Answer: ☒ on ☐ off ?

Symmetrical RTP: ☐ on ☒ off ?

RTP Encryption: ☐ on ☒ off ?

G.726 Byte Order: ☒ RFC3551 ☐ AAL2 ?

SRTP Auth-tag: ☐ AES-32 ☒ AES-80 ?

RTP/SAVP: ?

Media Transport Offer: ?

Media Transport Offer Setup: ?

Multicast relay address: ?


[Apply](#)

Update & Konfiguration

Es empfiehlt sich das SNOM 300 auf den aktuellen Softwarestand zu bringen. Lesen Sie dazu die entsprechende [Anleitung](#).

Für Version 8.7.3.25 finden Sie hier eine vorgefertigte [Konfigurationsdatei](#), in der nur zum Betrieb nur noch die eigene Zugangs ID einzutragen ist.

Linphone

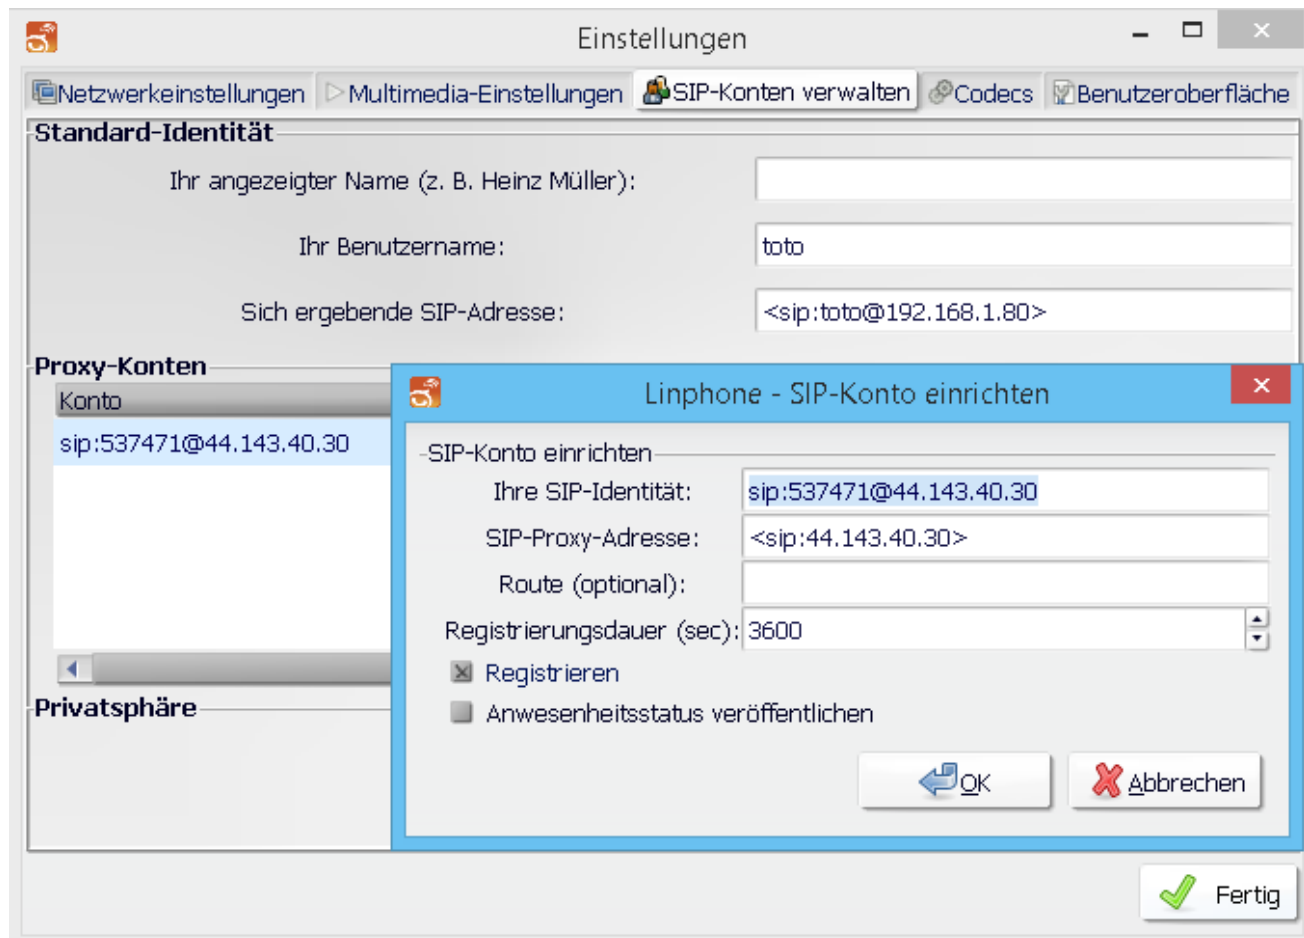

Im Reiter "Codecs" sollte kontrolliert werden, dass GMS, PCMA (alaw), PCMU (ulaw) aktiviert ist.

CSipSimple

Auch ein Android Smartphone kann als SIP-Client genutzt werden.

Da vom Server kein Passwort benötigt wird kann die eigene Rufnummer eingetragen werden.

[Datei:csipsimple.png](#)
 CSipSimple

Grandstream 2020

Auch das Hardwaretelefon Grandstream 2020 (oder auch 2000) kann ebenfalls für kleines Geld erworben werden (bspw. eBay, Willhaben)

Die Konfiguration über das Webinterface für z.B. Account1 sollte wie auf den Screenshots aussehen. Wichtig ist ganz unten bei den verwendeten Codec's alles auf **GSM** zu setzen da sonst ein falscher Codec verwendet wird und man am Telefon nichts hört (es läutet, aber man hört den Gesprächsparten nicht)

Grandstream Device Configuration

STATUS	BASIC SETTINGS	ADVANCED SETTINGS	EXT 1	EXT 2
ACCOUNT 1	ACCOUNT 2	ACCOUNT 3	ACCOUNT 4	ACCOUNT 5
				ACCOUNT 6
Account Active: ☐ No ☒ Yes Account Name: Hamnet (e.g., MyCompany) SIP Server: voip.oe2xtr.ampr.at (e.g., sip.mycompany.com, or IP address) Outbound Proxy: (e.g., proxy.myprovider.com, or IP address) SIP User ID: <Ham Tel.Nr> (the user part of an SIP address) Authenticate ID: <Ham Tel.Nr> (can be same or different from SIP UserID) Authenticate Password: (not displayed for security protection) Name: CALL (optional, e.g., John Doe) Use DNS SRV: ☒ No ☐ Yes User ID is phone number: ☐ No ☒ Yes SIP Registration: ☐ No ☒ Yes Unregister On Reboot: ☒ No ☐ Yes Support SIP Instance ID ☒ No ☐ Yes Register Expiration: 60 (in minutes. default 1 hour, max 45 days) local SIP port: 5060 (default 5060) SIP Registration Failure Retry Wait Time: 20 (in seconds. Between 1-3600, default is 20) SIP T1 Timeout: 1 sec SIP T2 Interval: 4 sec SIP Transport: ☒ UDP ☐ TCP Use RFC3581 Symmetric Routing: ☐ No ☒ Yes NAT Traversal (STUN): ☒ No ☐ No, but send keep-alive ☐ Yes SUBSCRIBE for MWI: ☒ No ☐ Yes SUBSCRIBE for Registration Event: ☒ No ☐ Yes PUBLISH for Presence: ☒ No ☐ Yes Proxy-Require: Voice Mail UserID: (UserID for voice mail system) Send DTMF: ☒ in-audio ☐ via RTP (RFC2833) ☐ via SIP INFO Early Dial: ☒ No ☐ Yes (use "Yes" only if proxy supports 484 response) Dial Plan Prefix: (this prefix string is added to each dialed number) BLF Call-pickup Prefix: ** (this prefix is prepended when answering call with BLF key) Delayed Call Forward Wait Time: 20 (Allowed range 1-120, in seconds.) Enable Call Features: ☐ No ☒ Yes (if yes, call features using star codes will be supported locally) Call Log: ☒ Log All Calls ☐ Log Incoming/Outgoing only (Missed calls NOT recorded) ☐ Disable Call Log				

Session Expiration:	180 (in seconds. default 180 seconds)
Min-SE:	90 (in seconds. default and minimum 90 seconds)
Caller Request Timer:	☒ No ☐ Yes (Request for timer when making outbound calls)
Callee Request Timer:	☒ No ☐ Yes (When caller supports timer but did not request one)
Force Timer:	☒ No ☐ Yes (Use timer even when remote party does not support)
UAC Specify Refresher:	☐ UAC ☐ UAS ☒ Omit (Recommended)
UAS Specify Refresher:	☒ UAC ☐ UAS (When UAC did not specify refresher tag)
Force INVITE:	☒ No ☐ Yes (Always refresh with INVITE instead of UPDATE)
Enable 100rel:	☒ No ☐ Yes
Account Ring Tone:	☒ system ring tone ☐ custom ring tone 1 ☐ custom ring tone 2 ☐ custom ring tone 3
Ring Timeout:	60 (in seconds. Between 30-3600, default is 60)
Send Anonymous:	☒ No ☐ Yes (caller ID will be blocked if set to Yes)
Anonymous Method:	☒ Use From Header ☐ Use Privacy Header
Anonymous Call Rejection:	☒ No ☐ Yes
Auto Answer:	☒ No ☐ Yes
Allow Auto Answer by Call-Info:	☒ No ☐ Yes
Turn off speaker on remote disconnect:	☒ No ☐ Yes
Check SIP User ID for incoming INVITE:	☒ No ☐ Yes
Refer-To Use Target Contact:	☒ No ☐ Yes
Disable Multiple Media Attribute in SDP:	☒ No ☐ Yes
Preferred Vocoder: (in listed order)	choice 1: GSM choice 2: GSM choice 3: GSM choice 4: GSM choice 5: GSM choice 6: GSM choice 7: GSM choice 8: GSM
SRTP Mode:	☒ Disabled ☐ Enabled but not forced ☐ Enabled and forced ☐ Optional
eventlist BLF URI:	
Special Feature:	Standard
Update Cancel Reboot	

All Rights Reserved Grandstream Networks Inc. 2004-2009

VoIP Einstellungen: Unterschied zwischen den Versionen

[Versionsgeschichte interaktiv durchsuchen](#)

[Visuell Wikitext](#)

Version vom 18. Dezember 2014, 10:35 Uhr (Quelltext anzeigen)

[OE2LSP](#) ([Diskussion](#) | [Beiträge](#))

[← Zum vorherigen Versionsunterschied](#)

Version vom 9. Januar 2015, 20:29 Uhr (Quelltext anzeigen)

[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))

[Zum nächsten Versionsunterschied →](#)

Zeile 17:

[[Datei:Snom300-1.PNG]]

[[Datei:Snom300-2.PNG]]

Zeile 17:

[[Datei:Snom300-1.PNG]]

[[Datei:Snom300-2.PNG]]

+

+

===Update & Konfiguration===

+

Es empfiehlt sich das SNOM 300 auf den aktuellen Softwarestand zu bringen. Lesen Sie dazu die entsprechende [\[http://wiki.snom.com/Snom300/Firmware Anleitung\]](http://wiki.snom.com/Snom300/Firmware%20Anleitung).

+

Für Version 8.7.3.25 finden Sie hier eine vorprefertierte [\[\[Media:Settings.zip|Konfigurationsdatei\]\]](#), in der nur zum Betrieb nur noch die eigene Zugangs ID einzutragen ist.

Version vom 9. Januar 2015, 20:29 Uhr

Nachfolgend wird erklärt, wie man seinen HAMNET SIP Client für den Zugang zur HAMNET VoIP Telefonie einrichtet. Es wird nach Herstellern unterschieden, und die gängigsten Modelle aufgeführt.

Derzeit gibt es folgende Asterisk-SIP Server:

voip.oe2xzzr.ampr.at

voip.oe6xrr.ampr.at

voip.oe7xwi.ampr.at

voip.oe9xfr.ampr.at

Inhaltsverzeichnis

1 SNOM 300 18

1.1 Update & Konfiguration 19

2 Linphone 20

3 CSipSimple 20

4 Grandstream 2020 20

SNOM 300

Das SNOM ist ein günstiges und gutes SIP Telefon, und kann gebraucht schon für kleines Geld erworben werden (bspw. bei eBay).

Bevor man jedoch die Konfiguration vornimmt, sollte das Telefon auf den letzten Stand der Firmware gebracht werden! Anleitungen dazu findet man direkt im [SNOM Wiki](#).

Identity 1

[Login](#) [SIP](#) [NAT](#) [RTP](#)

Login Information:

Identity active: ☒ on ☐ off ?

Displayname: ?

Account: ?

Password: ?

Registrar: ?

Outbound Proxy: ?

Failover Identity: ?

Authentication Username: ?

Mailbox: ?

Ringtone: ?

Custom Melody URL: ?

Display text for idle screen: ?

Ring After Delay (sec): ?

Record Missed Calls: ☒ on ☐ off ?

Record Dialed Calls: ☒ on ☐ off ?

Record Received Calls: ☒ on ☐ off ?

Identity is hidden: ☐ on ☒ off ?

[Apply](#) [Re-Register](#) [Play Ringer](#)

[Remove Identity](#) [Remove All Identities](#)

[Login](#) [SIP](#) [NAT](#) [RTP](#)

RTP Identity Settings:

Codec: ?

Packet Size: ?

Filtered codec list:

Full SDP Answer: ☒ on ☐ off ?

Symmetrical RTP: ☐ on ☒ off ?

RTP Encryption: ☐ on ☒ off ?

G.726 Byte Order: ☒ RFC3551 ☐ AAL2 ?

SRTP Auth-tag: ☐ AES-32 ☒ AES-80 ?

RTP/SAVP: ?

Media Transport Offer: ?

Media Transport Offer Setup: ?

Multicast relay address: ?


[Apply](#)

Update & Konfiguration

Es empfiehlt sich das SNOM 300 auf den aktuellen Softwarestand zu bringen. Lesen Sie dazu die entsprechende [Anleitung](#).

Für Version 8.7.3.25 finden Sie hier eine vorgefertigte [Konfigurationsdatei](#), in der nur zum Betrieb nur noch die eigene Zugangs ID einzutragen ist.

Linphone

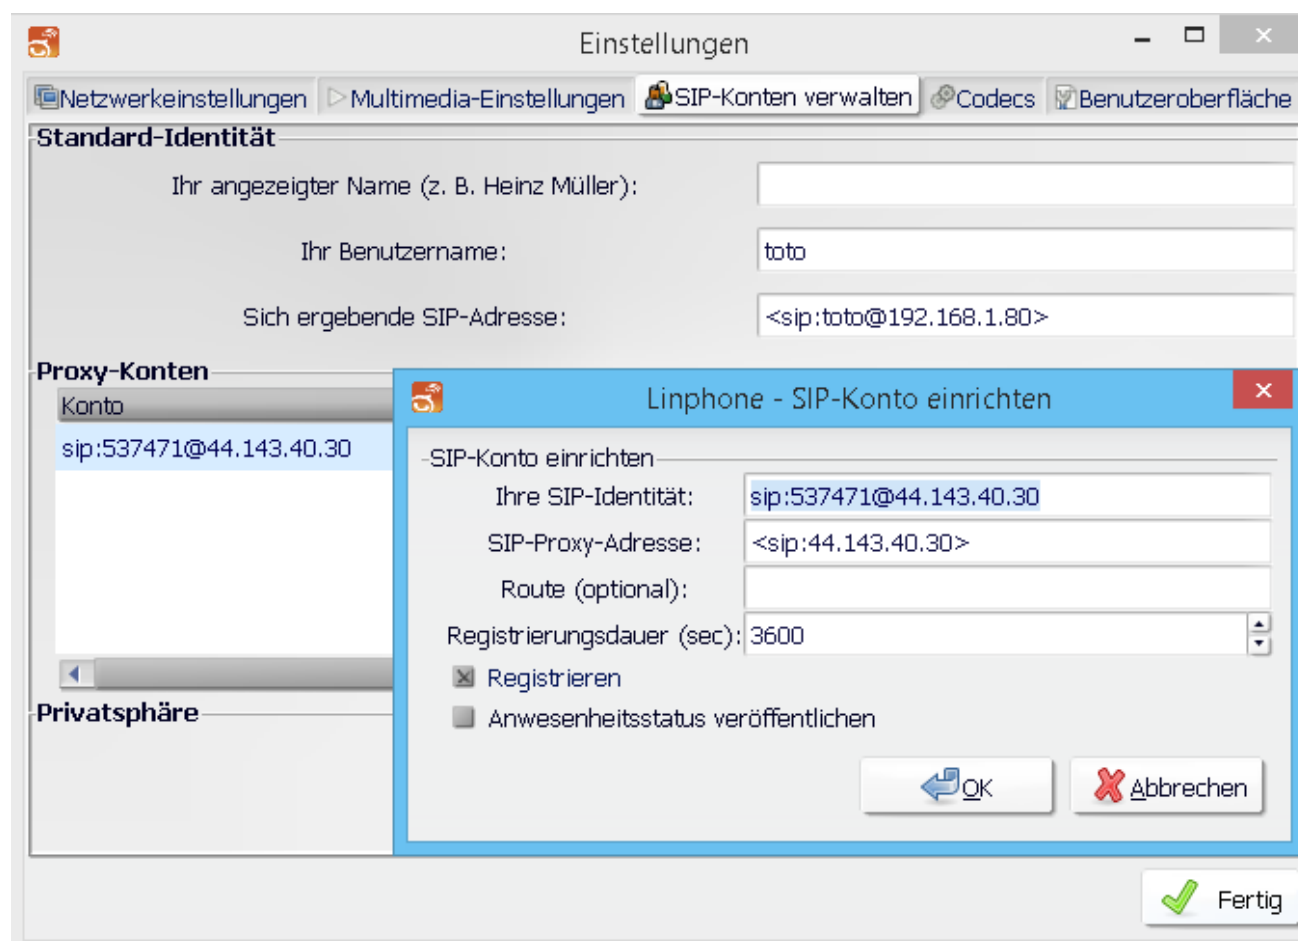

Im Reiter "Codecs" sollte kontrolliert werden, dass GMS, PCMA (alaw), PCMU (ulaw) aktiviert ist.

CSipSimple

Auch ein Android Smartphone kann als SIP-Client genutzt werden.

Da vom Server kein Passwort benötigt wird kann die eigene Rufnummer eingetragen werden.

[Datei:csipsimple.png](#)
 CSipSimple

Grandstream 2020

Auch das Hardwaretelefon Grandstream 2020 (oder auch 2000) kann ebenfalls für kleines Geld erworben werden (bspw. eBay, Willhaben)

Die Konfiguration über das Webinterface für z.B. Account1 sollte wie auf den Screenshots aussehen. Wichtig ist ganz unten bei den verwendeten Codec's alles auf **GSM** zu setzen da sonst ein falscher Codec verwendet wird und man am Telefon nichts hört (es läutet, aber man hört den Gesprächsparten nicht)

Grandstream Device Configuration

STATUS	BASIC SETTINGS	ADVANCED SETTINGS	EXT 1	EXT 2
ACCOUNT 1	ACCOUNT 2	ACCOUNT 3	ACCOUNT 4	ACCOUNT 5
Account Active: ☐ No ☒ Yes Account Name: Hamnet (e.g., MyCompany) SIP Server: voip.oe2xtr.ampr.at (e.g., sip.mycompany.com, or IP address) Outbound Proxy: (e.g., proxy.myprovider.com, or IP address) SIP User ID: <Ham Tel.Nr> (the user part of an SIP address) Authenticate ID: <Ham Tel.Nr> (can be same or different from SIP UserID) Authenticate Password: (not displayed for security protection) Name: CALL (optional, e.g., John Doe) Use DNS SRV: ☒ No ☐ Yes User ID is phone number: ☐ No ☒ Yes SIP Registration: ☐ No ☒ Yes Unregister On Reboot: ☒ No ☐ Yes Support SIP Instance ID ☒ No ☐ Yes Register Expiration: 60 (in minutes. default 1 hour, max 45 days) local SIP port: 5060 (default 5060) SIP Registration Failure Retry Wait Time: 20 (in seconds. Between 1-3600, default is 20) SIP T1 Timeout: 1 sec SIP T2 Interval: 4 sec SIP Transport: ☒ UDP ☐ TCP Use RFC3581 Symmetric Routing: ☐ No ☒ Yes NAT Traversal (STUN): ☒ No ☐ No, but send keep-alive ☐ Yes SUBSCRIBE for MWI: ☒ No ☐ Yes SUBSCRIBE for Registration Event: ☒ No ☐ Yes PUBLISH for Presence: ☒ No ☐ Yes Proxy-Require: Voice Mail UserID: (UserID for voice mail system) Send DTMF: ☒ in-audio ☐ via RTP (RFC2833) ☐ via SIP INFO Early Dial: ☒ No ☐ Yes (use "Yes" only if proxy supports 484 response) Dial Plan Prefix: (this prefix string is added to each dialed number) BLF Call-pickup Prefix: ** (this prefix is prepended when answering call with BLF key) Delayed Call Forward Wait Time: 20 (Allowed range 1-120, in seconds.) Enable Call Features: ☐ No ☒ Yes (if yes, call features using star codes will be supported locally) Call Log: ☒ Log All Calls ☐ Log Incoming/Outgoing only (Missed calls NOT recorded) ☐ Disable Call Log				

Session Expiration:	180 (in seconds. default 180 seconds)
Min-SE:	90 (in seconds. default and minimum 90 seconds)
Caller Request Timer:	☒ No ☐ Yes (Request for timer when making outbound calls)
Callee Request Timer:	☒ No ☐ Yes (When caller supports timer but did not request one)
Force Timer:	☒ No ☐ Yes (Use timer even when remote party does not support)
UAC Specify Refresher:	☐ UAC ☐ UAS ☒ Omit (Recommended)
UAS Specify Refresher:	☒ UAC ☐ UAS (When UAC did not specify refresher tag)
Force INVITE:	☒ No ☐ Yes (Always refresh with INVITE instead of UPDATE)
Enable 100rel:	☒ No ☐ Yes
Account Ring Tone:	☒ system ring tone ☐ custom ring tone 1 ☐ custom ring tone 2 ☐ custom ring tone 3
Ring Timeout:	60 (in seconds. Between 30-3600, default is 60)
Send Anonymous:	☒ No ☐ Yes (caller ID will be blocked if set to Yes)
Anonymous Method:	☒ Use From Header ☐ Use Privacy Header
Anonymous Call Rejection:	☒ No ☐ Yes
Auto Answer:	☒ No ☐ Yes
Allow Auto Answer by Call-Info:	☒ No ☐ Yes
Turn off speaker on remote disconnect:	☒ No ☐ Yes
Check SIP User ID for incoming INVITE:	☒ No ☐ Yes
Refer-To Use Target Contact:	☒ No ☐ Yes
Disable Multiple Media Attribute in SDP:	☒ No ☐ Yes
Preferred Vocoder: (in listed order)	choice 1: GSM choice 2: GSM choice 3: GSM choice 4: GSM choice 5: GSM choice 6: GSM choice 7: GSM choice 8: GSM
SRTP Mode:	☒ Disabled ☐ Enabled but not forced ☐ Enabled and forced ☐ Optional
eventlist BLF URI:	
Special Feature:	Standard
Update Cancel Reboot	

All Rights Reserved Grandstream Networks Inc. 2004-2009

VoIP Einstellungen: Unterschied zwischen den Versionen

[Versionsgeschichte interaktiv durchsuchen](#)

[Visuell Wikitext](#)

Version vom 18. Dezember 2014, 10:35 Uhr (Quelltext anzeigen)

[OE2LSP](#) ([Diskussion](#) | [Beiträge](#))

[← Zum vorherigen Versionsunterschied](#)

Version vom 9. Januar 2015, 20:29 Uhr (Quelltext anzeigen)

[OE2WAO](#) ([Diskussion](#) | [Beiträge](#))

[Zum nächsten Versionsunterschied →](#)

Zeile 17:

[[Datei:Snom300-1.PNG]]

[[Datei:Snom300-2.PNG]]

Zeile 17:

[[Datei:Snom300-1.PNG]]

[[Datei:Snom300-2.PNG]]

+

+

===Update & Konfiguration===

+

Es empfiehlt sich das SNOM 300 auf den aktuellen Softwarestand zu bringen. Lesen Sie dazu die entsprechende [\[http://wiki.snom.com/Snom300/Firmware Anleitung\]](http://wiki.snom.com/Snom300/Firmware%20Anleitung).

+

Für Version 8.7.3.25 finden Sie hier eine vorprefertierte [\[\[Media:Settings.zip|Konfigurationsdatei\]\]](#), in der nur zum Betrieb nur noch die eigene Zugangs ID einzutragen ist.

Version vom 9. Januar 2015, 20:29 Uhr

Nachfolgend wird erklärt, wie man seinen HAMNET SIP Client für den Zugang zur HAMNET VoIP Telefonie einrichtet. Es wird nach Herstellern unterschieden, und die gängigsten Modelle aufgeführt.

Derzeit gibt es folgende Asterisk-SIP Server:

voip.oe2xzt.ampr.at

voip.oe6xrr.ampr.at

voip.oe7xwi.ampr.at

voip.oe9xfr.ampr.at

Inhaltsverzeichnis

1 SNOM 300 25

1.1 Update & Konfiguration 26

2 Linphone 27

3 CSipSimple 27

4 Grandstream 2020 27

SNOM 300

Das SNOM ist ein günstiges und gutes SIP Telefon, und kann gebraucht schon für kleines Geld erworben werden (bspw. bei eBay).

Bevor man jedoch die Konfiguration vornimmt, sollte das Telefon auf den letzten Stand der Firmware gebracht werden! Anleitungen dazu findet man direkt im [SNOM Wiki](#).

Identity 1

[Login](#) [SIP](#) [NAT](#) [RTP](#)

Login Information:

Identity active: ☒ on ☐ off ?

Displayname: ?

Account: ?

Password: ?

Registrar: ?

Outbound Proxy: ?

Failover Identity: ?

Authentication Username: ?

Mailbox: ?

Ringtone: ?

Custom Melody URL: ?

Display text for idle screen: ?

Ring After Delay (sec): ?

Record Missed Calls: ☒ on ☐ off ?

Record Dialed Calls: ☒ on ☐ off ?

Record Received Calls: ☒ on ☐ off ?

Identity is hidden: ☐ on ☒ off ?

[Login](#) [SIP](#) [NAT](#) [RTP](#)

RTP Identity Settings:

Codec: ?

Packet Size: ?

Filtered codec list:

Full SDP Answer: ☒ on ☐ off ?

Symmetrical RTP: ☐ on ☒ off ?

RTP Encryption: ☐ on ☒ off ?

G.726 Byte Order: ☒ RFC3551 ☐ AAL2 ?

SRTP Auth-tag: ☐ AES-32 ☒ AES-80 ?

RTP/SAVP: ?

Media Transport Offer: ?

Media Transport Offer Setup: ?


Multicast relay address: ?

Update & Konfiguration

Es empfiehlt sich das SNOM 300 auf den aktuellen Softwarestand zu bringen. Lesen Sie dazu die entsprechende [Anleitung](#).

Für Version 8.7.3.25 finden Sie hier eine vorgefertigte [Konfigurationsdatei](#), in der nur zum Betrieb nur noch die eigene Zugangs ID einzutragen ist.

Linphone

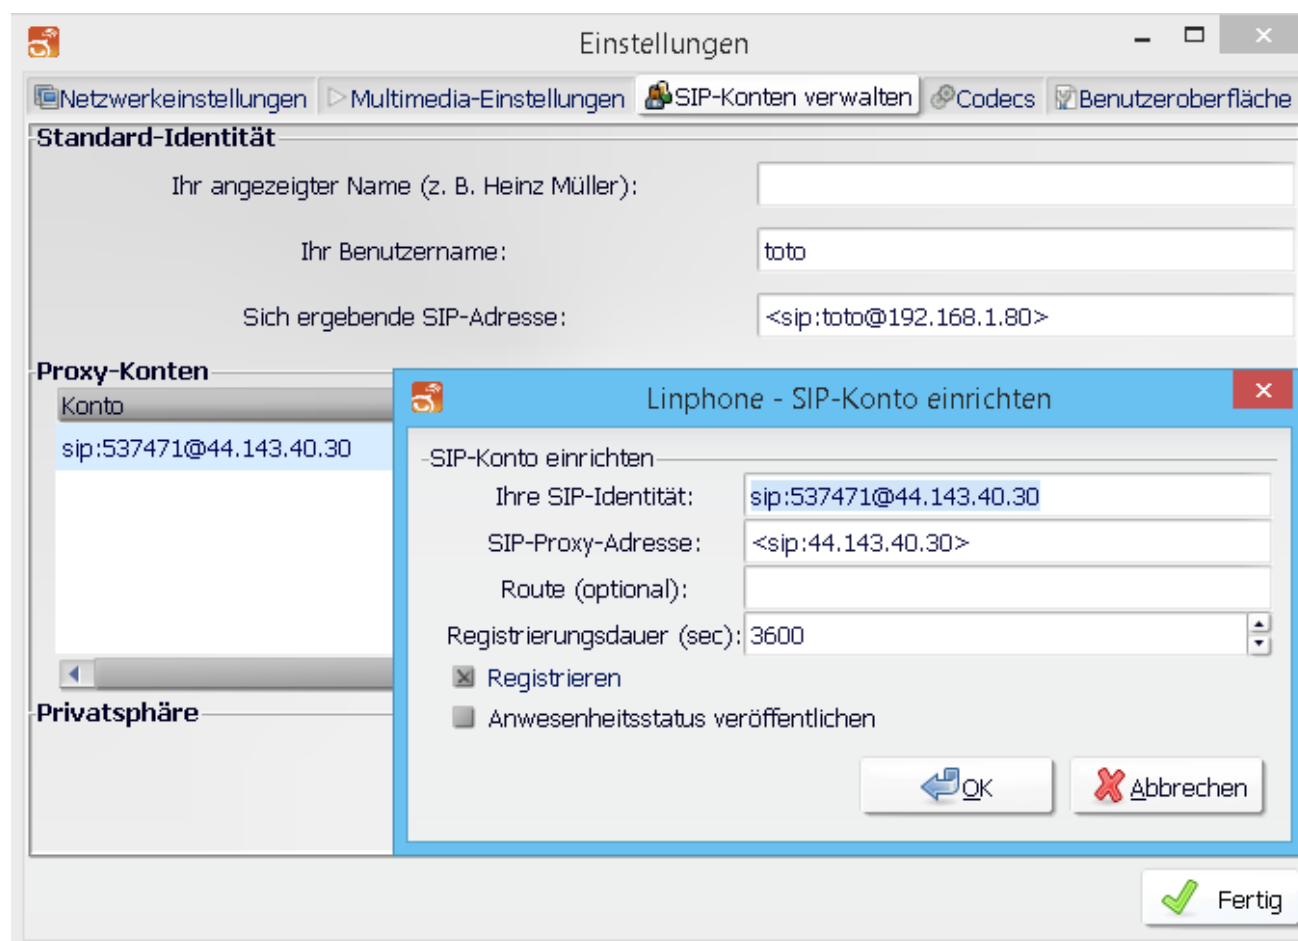

Im Reiter "Codecs" sollte kontrolliert werden, dass GMS, PCMA (alaw), PCMU (ulaw) aktiviert ist.

CSipSimple

Auch ein Android Smartphone kann als SIP-Client genutzt werden.

Da vom Server kein Passwort benötigt wird kann die eigene Rufnummer eingetragen werden.

[Datei:csipsimple.png](#)
 CSipSimple

Grandstream 2020

Auch das Hardwaretelefon Grandstream 2020 (oder auch 2000) kann ebenfalls für kleines Geld erworben werden (bspw. eBay, Willhaben)

Die Konfiguration über das Webinterface für z.B. Account1 sollte wie auf den Screenshots aussehen. Wichtig ist ganz unten bei den verwendeten Codec's alles auf **GSM** zu setzen da sonst ein falscher Codec verwendet wird und man am Telefon nichts hört (es läutet, aber man hört den Gesprächsparten nicht)

Grandstream Device Configuration					
STATUS	BASIC SETTINGS		ADVANCED SETTINGS		EXT 1
ACCOUNT 1	ACCOUNT 2	ACCOUNT 3	ACCOUNT 4	ACCOUNT 5	EXT 2
ACCOUNT 6					
Account Active: ☐ No ☒ Yes Account Name: Hamnet (e.g., MyCompany) SIP Server: voip.oe2xtr.ampr.at (e.g., sip.mycompany.com, or IP address) Outbound Proxy: (e.g., proxy.myprovider.com, or IP address) SIP User ID: <Ham Tel.Nr> (the user part of an SIP address) Authenticate ID: <Ham Tel.Nr> (can be same or different from SIP UserID) Authenticate Password: (not displayed for security protection) Name: CALL (optional, e.g., John Doe) Use DNS SRV: ☒ No ☐ Yes User ID is phone number: ☐ No ☒ Yes SIP Registration: ☐ No ☒ Yes Unregister On Reboot: ☒ No ☐ Yes Support SIP Instance ID: ☒ No ☐ Yes Register Expiration: 60 (in minutes. default 1 hour, max 45 days) local SIP port: 5060 (default 5060) SIP Registration Failure Retry Wait Time: 20 (in seconds. Between 1-3600, default is 20) SIP T1 Timeout: 1 sec SIP T2 Interval: 4 sec SIP Transport: ☒ UDP ☐ TCP Use RFC3581 Symmetric Routing: ☐ No ☒ Yes NAT Traversal (STUN): ☒ No ☐ No, but send keep-alive ☐ Yes SUBSCRIBE for MWI: ☒ No ☐ Yes SUBSCRIBE for Registration Event: ☒ No ☐ Yes PUBLISH for Presence: ☒ No ☐ Yes Proxy-Require: Voice Mail UserID: (UserID for voice mail system) Send DTMF: ☒ in-audio ☐ via RTP (RFC2833) ☐ via SIP INFO Early Dial: ☒ No ☐ Yes (use "Yes" only if proxy supports 484 response) Dial Plan Prefix: (this prefix string is added to each dialed number) BLF Call-pickup Prefix: ** (this prefix is prepended when answering call with BLF key) Delayed Call Forward Wait Time: 20 (Allowed range 1-120, in seconds.) Enable Call Features: ☐ No ☒ Yes (if yes, call features using star codes will be supported locally) Call Log: ☒ Log All Calls ☐ Log Incoming/Outgoing only (Missed calls NOT recorded) ☐ Disable Call Log					

Session Expiration:	180 (in seconds. default 180 seconds)
Min-SE:	90 (in seconds. default and minimum 90 seconds)
Caller Request Timer:	☒ No ☐ Yes (Request for timer when making outbound calls)
Callee Request Timer:	☒ No ☐ Yes (When caller supports timer but did not request one)
Force Timer:	☒ No ☐ Yes (Use timer even when remote party does not support)
UAC Specify Refresher:	☐ UAC ☐ UAS ☒ Omit (Recommended)
UAS Specify Refresher:	☒ UAC ☐ UAS (When UAC did not specify refresher tag)
Force INVITE:	☒ No ☐ Yes (Always refresh with INVITE instead of UPDATE)
Enable 100rel:	☒ No ☐ Yes
Account Ring Tone:	☒ system ring tone ☐ custom ring tone 1 ☐ custom ring tone 2 ☐ custom ring tone 3
Ring Timeout:	60 (in seconds. Between 30-3600, default is 60)
Send Anonymous:	☒ No ☐ Yes (caller ID will be blocked if set to Yes)
Anonymous Method:	☒ Use From Header ☐ Use Privacy Header
Anonymous Call Rejection:	☒ No ☐ Yes
Auto Answer:	☒ No ☐ Yes
Allow Auto Answer by Call-Info:	☒ No ☐ Yes
Turn off speaker on remote disconnect:	☒ No ☐ Yes
Check SIP User ID for incoming INVITE:	☒ No ☐ Yes
Refer-To Use Target Contact:	☒ No ☐ Yes
Disable Multiple Media Attribute in SDP:	☒ No ☐ Yes
Preferred Vocoder: (in listed order)	choice 1: GSM choice 2: GSM choice 3: GSM choice 4: GSM choice 5: GSM choice 6: GSM choice 7: GSM choice 8: GSM
SRTP Mode:	☒ Disabled ☐ Enabled but not forced ☐ Enabled and forced ☐ Optional
eventlist BLF URI:	
Special Feature:	Standard
Update Cancel Reboot	

All Rights Reserved Grandstream Networks Inc. 2004-2009